Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ChooChoo DC2501-WH

ChooChoo 2-Tier Washer Dryer Countertop with Adjustable Shelf

Model: DC2501-WH
Brand: ChooChoo

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your ChooChoo 2-Tier Washer Dryer Countertop with Adjustable Shelf. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation. Keep this manual for future reference.

Safety Information

- Always follow assembly instructions carefully.
- Ensure all hardware is securely tightened before use. Periodically check for loose connections.
- Do not overload the shelves or countertop. Refer to specifications for weight limits.
- Place the unit on a stable, level surface.
- Keep small parts away from children during assembly.
- Avoid exposing the unit to excessive moisture or direct sunlight for prolonged periods.
- Use caution when adjusting shelf heights to prevent pinching or injury.

Package Contents

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Top Countertop Panel
- Side Panels (2)
- Adjustable Shelf Panels (2)
- Back Support Panel
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Anti-slip Pads (6)
- Instruction Manual

Setup and Assembly

Follow these steps to assemble your ChooChoo 2-Tier Washer Dryer Countertop. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out. Check against the package contents list.
2. **Attach Side Panels:** Secure the side panels to the main countertop panel using the provided hardware. Ensure they are aligned correctly.



Image: Angled view of the assembled countertop, showing the main surface and the two-tier shelving unit.

3. **Install Adjustable Shelves:** Insert the shelf pins into the desired height holes on the side panels. Place the adjustable shelf panels onto these pins. There are 5 adjustable height levels available.



Image: Diagram illustrating the 5-level adjustable shelf feature, highlighting the maximum height of 8.1 inches for flexible storage.

4. **Attach Back Support:** Secure the back support panel to the rear of the shelving unit for added stability.
5. **Apply Anti-slip Pads:** Attach the 6 anti-slip pads to the bottom edges of the countertop to prevent movement and protect your appliances.

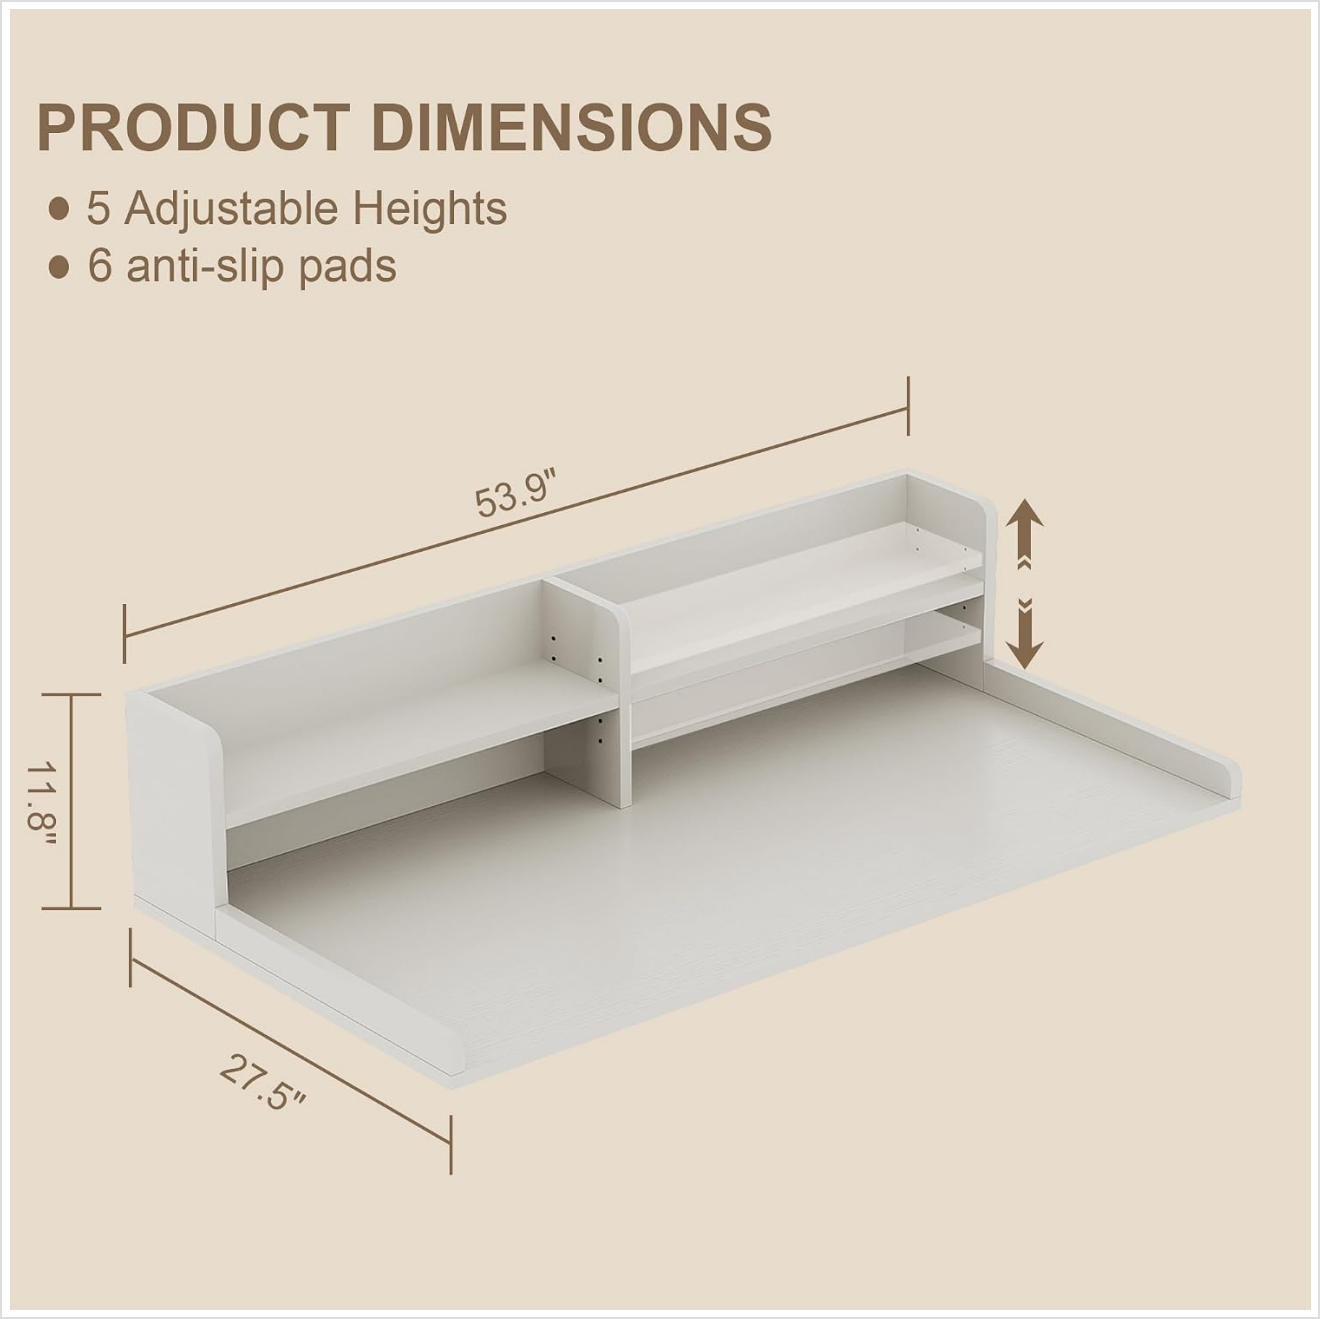


Image: Product dimensions diagram, indicating the overall length of 53.9 inches, width of 27.5 inches, and height of 11.8 inches, along with the placement of 6 anti-slip pads.

6. **Position the Unit:** Carefully lift and place the assembled countertop over your washer and dryer. Ensure it is centered and stable.



Image: The ChooChoo countertop unit positioned above a washer and dryer, demonstrating its use as an organized storage and folding surface in a laundry room.

Operating Instructions

The ChooChoo 2-Tier Washer Dryer Countertop is designed to enhance your laundry space by providing additional storage and a convenient work surface.

- **Utilize the Countertop:** The spacious top surface is ideal for folding clothes, sorting laundry, or temporarily placing items.



Image: The countertop showcasing its smart storage design with various laundry essentials and folded towels neatly arranged.

- **Adjust Shelf Height:** To change the height of the adjustable shelves, carefully remove the items, lift the shelf panel, reposition the shelf pins to one of the 5 available levels, and then replace the shelf panel. This allows for accommodating items of various heights, such as detergent bottles or baskets.
- **Organize Items:** Use the two-tier shelving to store laundry supplies, cleaning products, or decorative items, keeping your laundry area tidy and efficient.



Image: The countertop in a laundry room setting, emphasizing its easy assembly, compatibility with most washers, and premium wood construction.

Maintenance

Proper care will extend the life and appearance of your ChooChoo countertop.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Promptly wipe up any spills to prevent water damage, especially on the wood surfaces.
- **Hardware Check:** Periodically inspect all screws and connections to ensure they remain tight. Tighten if necessary.
- **Placement:** Ensure the unit remains on a stable surface and the anti-slip pads are intact.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Unit feels unstable or wobbly.	Uneven surface; loose hardware; missing anti-slip pads.	Ensure the unit is on a level surface. Check and tighten all assembly hardware. Verify all 6 anti-slip pads are correctly placed on the bottom.
Items slide on the countertop.	Vibrations from appliances; smooth surface.	Ensure anti-slip pads are correctly installed. Consider using additional non-slip mats for items placed on the surface.
Shelf does not fit at desired height.	Incorrect pin placement; obstruction.	Ensure shelf pins are fully inserted into corresponding holes on both sides. Check for any obstructions preventing the shelf from seating properly.

Specifications

Model: DC2501-WH

Brand: ChooChoo

Material: Engineered Wood

Color: White

Product Dimensions (L x W x H): 53.9" x 27.5" x 11.8"

Item Weight: 15.75 Pounds

Mounting Type: Countertop Mount

Special Feature: Adjustable Shelf (5 levels), Double Layered Shelf

Manufacturer: ChooChoo

Warranty and Support

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official ChooChoo website. If you have any questions regarding assembly, missing parts, or product functionality, do not hesitate to contact our support team.

Note: Specific warranty terms may vary by region and retailer. Please retain your proof of purchase.

© 2026 ChooChoo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FLY26T2X

More documents and user manuals: **https://manuals.plus/**