Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

UTEX SS25-UTX-T00N

UTEX 3-in-1 Pop-Up Play Tent with Tunnel and Ball Pit Instruction Manual

Model: SS25-UTX-T00N | Brand: UTEX

1. Important Safety Information

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Adult Supervision Required:** Always supervise children during play to prevent accidents.
- **Age Recommendation:** Suitable for children aged 36 months and older.
- **Material Safety:** Constructed with 190T tear-resistant polyester taffeta and soft fabric, certified by ASTM, CPSIA, and CPC for child safety.
- **Ventilation:** Mesh windows enhance airflow. Ensure adequate ventilation during use.
- **Indoor/Outdoor Use:** Designed for both indoor and outdoor play. Avoid use in extreme weather conditions.
- **Fire Safety:** Keep away from open flames and heat sources.
- **Choking Hazard:** Ball pit balls are NOT included. If using balls, ensure they are appropriate for the child's age and size to prevent choking. The included sticky balls for the target game are safe.

2. Package Contents

Verify that all components are present before beginning assembly:

- 1 x Pop-Up Play Tent (Square Tent)
- 1 x Pop-Up Play Tunnel
- 1 x Pop-Up Ball Pit (Triangular Tent with Target Dart & Ball Hole)
- 6 x Safe Sticky Balls (for target game)
- 1 x Deluxe Zipper Carrying Case

3. Setup Instructions

The UTEX 3-in-1 Play Tent features tool-free assembly and pops open in seconds.

1. **Unpack Components:** Carefully remove the play tent, tunnel, and ball pit from the carrying case. They are designed to pop open automatically.
2. **Position Components:** Place the square tent, tunnel, and triangular ball pit in your desired configuration.
3. **Connect the Tunnel:** Each end of the tunnel has ties. Align the openings of the square tent and the triangular ball pit with the tunnel ends. Securely tie the tunnel to the tent and ball pit using the provided ties. Ensure connections are snug to prevent separation during play.



Figure 3.1: Fully assembled 3-in-1 play tent system.



Figure 3.2: Detail of the ties used to connect the tunnel to the tent components.

The reinforced steel wiring ensures stability once set up.

4. Operating Instructions

The 3-in-1 play tent offers multiple ways for children to engage in active and imaginative play.

- **Play Tent:** The square tent provides a cozy space for relaxation, reading, or imaginative play.
- **Crawl Tunnel:** Children can crawl through the tunnel, developing motor skills and coordination.
- **Ball Pit:** The triangular tent functions as a ball pit (balls not included). Fill it with child-safe play balls for tossing and splashing fun.
- **Target Dart & Ball Hole Game:** The triangular tent features a special bonus target dart board and ball holes. Use the 6 safe sticky balls for target practice, promoting hand-eye coordination.



Figure 4.1: Children enjoying the various components of the play tent system.

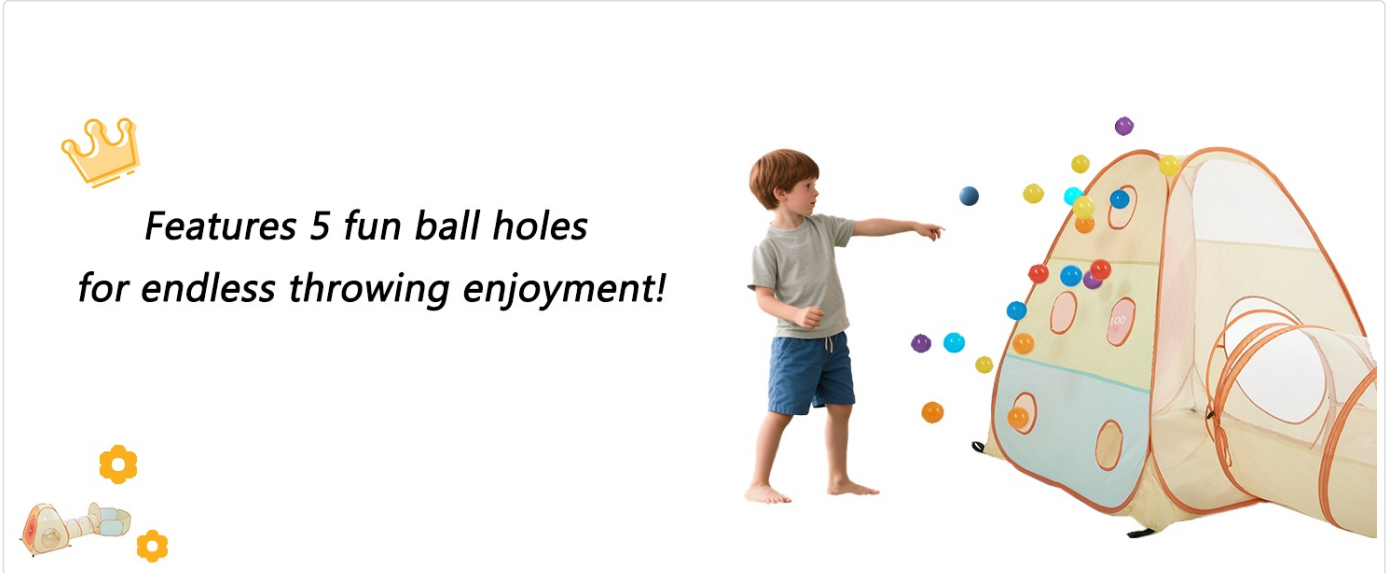


Figure 4.2: The ball pit section, ready for play balls (not included).



Figure 4.3: The transparent mesh tunnel encourages crawling and exploration.

5. Maintenance and Care

- **Cleaning:** Wipe surfaces with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before storing.
- **Storage:** The play tent components fold flat for convenient storage. Twist and fold each piece carefully back into its compact shape and store in the deluxe zipper carrying case. Store in a cool, dry place away from direct sunlight.
- **Inspection:** Regularly inspect the tent, tunnel, and ties for any signs of wear, tear, or damage. Discontinue use if any damage is found.

6. Troubleshooting

- **Components Not Staying Connected:** Ensure the ties at each end of the tunnel are securely fastened to the loops on the tent and ball pit. Re-tie if necessary.
- **Tent/Ball Pit Collapsing:** The pop-up design relies on internal wiring for structure. Ensure the components are fully expanded and not placed on uneven surfaces. If a component consistently collapses, inspect for damage to the internal frame.
- **Difficulty Folding for Storage:** The pop-up design requires a specific twisting motion to fold flat. Refer to the folding instructions (often included on the carrying case or product packaging) or search for online tutorials for pop-up tents.

7. Specifications

Feature	Detail
Brand	UTEX
Model Number	SS25-UTX-T00N

Material Type	Polyester
Color	Orange/Yellow Square Tent (as per current model)
Style	Multi-room (3-in-1)
Item Dimensions (D x W x H)	126" x 17.3" x 49.2" (Overall assembled)
Manufacturer Minimum Age	36 Months
Included Components	Kids play tent and tunnel

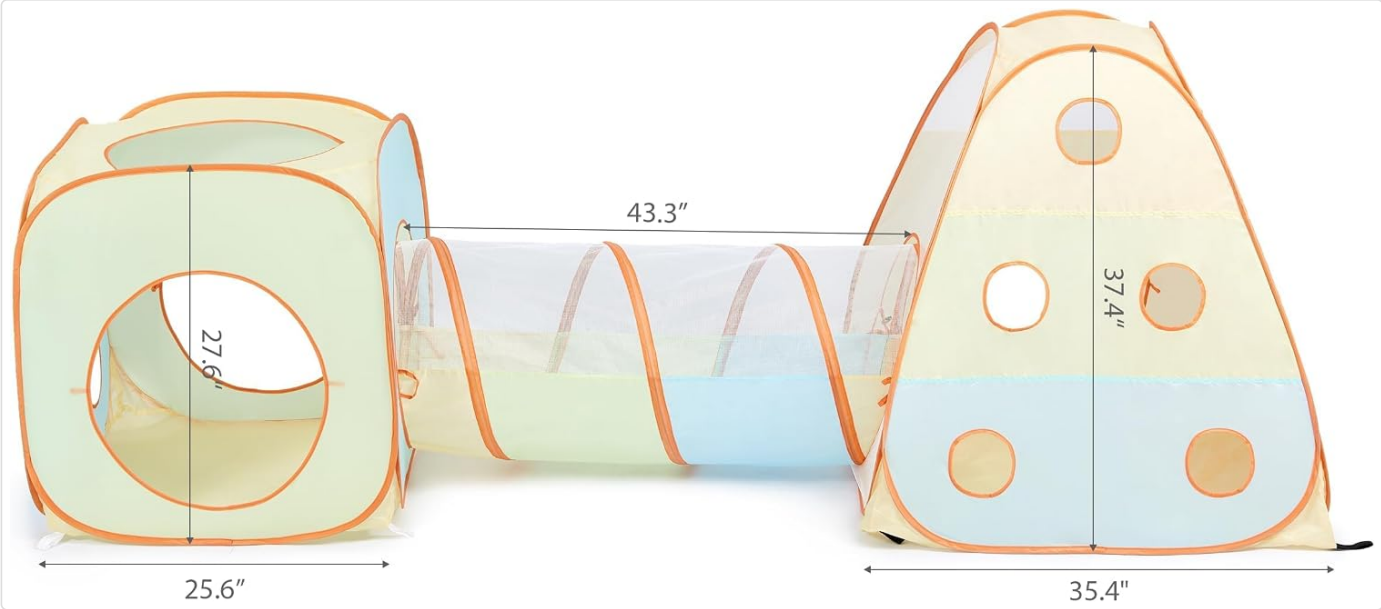


Figure 7.1: Detailed dimensions of the UTEX 3-in-1 Play Tent components.

8. Warranty and Support

For warranty information, product support, or to report any issues, please contact UTEX customer service directly. Refer to the product packaging or the official UTEX website for contact details.

Please retain your proof of purchase for any warranty claims.

© 2026 UTEX. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FM6SZKQH

More documents and user manuals: **https://manuals.plus/**