Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Imdot HX07

Imdot HX07 Power Cleaner User Manual

Model: HX07

1. Important Safety Instructions

WARNING: When using this product, basic precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- To reduce the risk of injury, close supervision is necessary when an appliance is used near children.
- Know how to stop the unit and bleed pressures quickly. Be thoroughly familiar with the controls.
- Stay alert and watch what you are doing. Do not operate the appliance when you are tired or under the influence of alcohol or drugs.
- Do not direct discharge stream at persons.
- Do not operate the unit if the power cord or other important parts are damaged.
- Always wear appropriate personal protective equipment, including safety glasses, hearing protection, and protective footwear.
- Ensure the water supply is clean and free of debris to prevent damage to the pump.
- This appliance is equipped with a Total Stop System (TSS) which automatically shuts off the pump when the trigger is not engaged, extending pump life and saving energy.

2. Product Overview and Components

The Imdot HX07 Power Cleaner is designed for various outdoor cleaning tasks. Familiarize yourself with all components before assembly and operation.



Image: Detailed view of all components included with the Imdot HX07 Power Cleaner: the main pressure washer unit, pro-steel wand, 33-foot high-pressure hose, soap cannon, four quick-connect nozzles (0°, 15°, 25°, 40°), and user manual.

Included Components:

- Imdot HX07 Pressure Washer Unit
- Pro-Steel Spray Wand
- 33-Foot High-Pressure Hose
- Soap Cannon (Detergent Bottle)
- Four Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- 20-Foot Power Cord
- User Manual

3. Assembly

Follow these steps to assemble your Imdot HX07 Power Cleaner:

1. **Attach the Handle:** Slide the handle into the designated slots on the main unit until it clicks securely into place.
2. **Connect the High-Pressure Hose:**
    - Connect one end of the 33-foot high-pressure hose to the high-pressure outlet on the front of the pressure washer unit. Ensure a tight, leak-proof connection.
    - Connect the other end of the high-pressure hose to the spray gun.



Image: The 14mm universal twist-on threaded connector ensures a secure, leak-proof seal for the high-pressure hose connection.

3. **Connect the Spray Wand:** Attach the pro-steel spray wand to the spray gun by twisting it until it is firmly secured.
4. **Connect Water Supply:** Connect a standard garden hose (not included) to the water inlet on the pressure washer unit. Ensure the garden hose is free of kinks and has a steady water supply.
5. **Connect Power:** Plug the 20-foot power cord into a grounded electrical outlet. Ensure the outlet meets the electrical requirements specified in the 'Specifications' section.



Image: The integrated hose reel on the Imdot HX07 Power Cleaner facilitates organized storage and deployment of the high-pressure hose.

4. Operation

4.1 Starting the Unit

1. Ensure all connections are secure and the water supply is turned on.
2. Press the power button on the unit to turn it on.
3. Squeeze the trigger on the spray gun to begin water flow. Allow water to run for a few seconds to purge any air from the system.

4.2 Adjusting Pressure

The Imdot HX07 features an adjustable pressure dial to suit different cleaning needs.



Image: The adjustable pressure dial allows selection between 2500 PSI (minimum) and 5000 PSI (maximum) for various cleaning tasks.

- Rotate the dial to increase or decrease the pressure output.
- Use lower pressure settings for delicate surfaces and higher pressure for tough stains.

4.3 Selecting Nozzles

The unit comes with four quick-connect nozzles, each designed for specific applications:

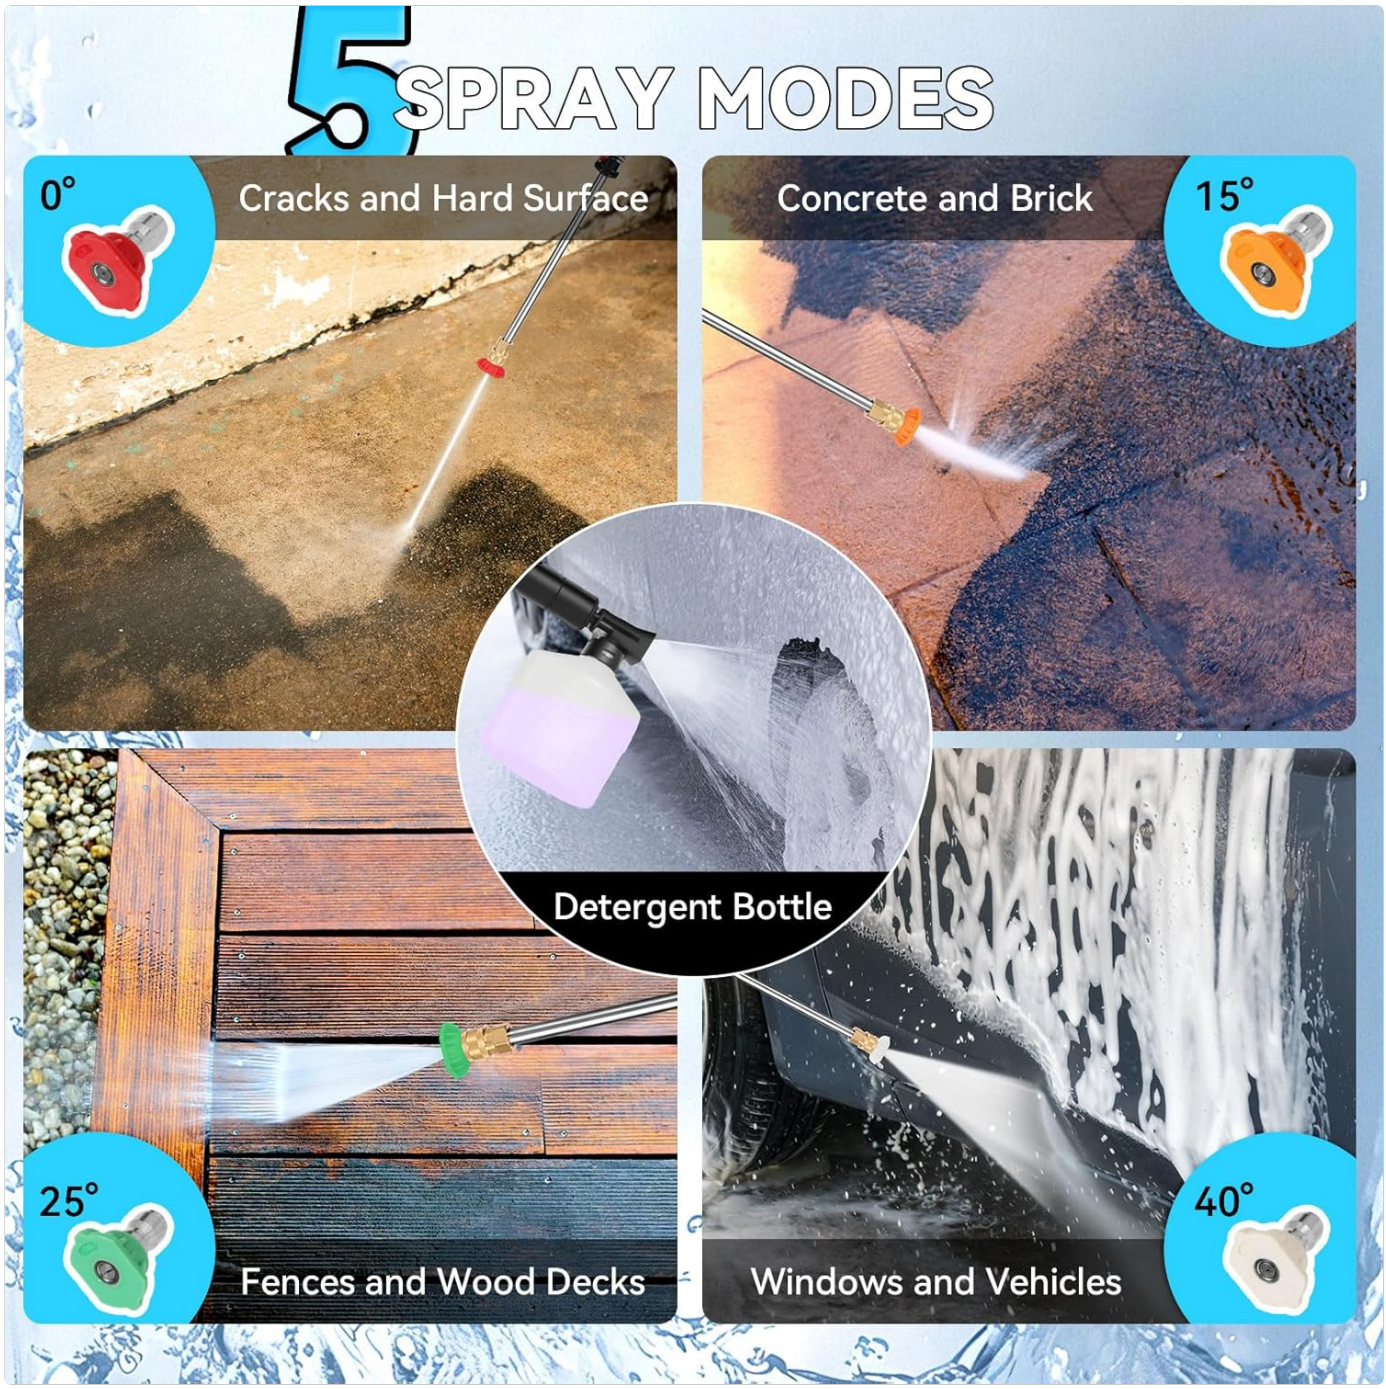


Image: Visual guide to the five spray modes available with the Imdot HX07 Power Cleaner, illustrating the use of 0° nozzle for cracks, 15° for concrete/brick, 25° for fences/wood decks, 40° for windows/vehicles, and the detergent bottle for soap application.

- **0° Red Nozzle:** Provides a concentrated, powerful jet for stubborn stains and hard-to-reach areas. Use with extreme caution on durable surfaces only.
- **15° Yellow Nozzle:** Offers a focused spray for intensive cleaning of concrete, brick, and other hard surfaces.
- **25° Green Nozzle:** Delivers a wider spray pattern suitable for general cleaning of fences, wood decks, and siding.
- **40° White Nozzle:** Provides the widest spray for gentle cleaning of vehicles, windows, and other delicate surfaces.

To change nozzles, pull back the collar on the spray wand, insert the desired nozzle, and release the collar to lock it in place. Always ensure the nozzle is securely attached before operating.

4.4 Using the Soap Cannon

For detergent application, attach the soap cannon to the spray wand. Fill the soap cannon with an appropriate pressure washer detergent. The unit will automatically draw detergent when operating at low pressure or with the soap cannon attached.

5. Maintenance and Storage

5.1 After Each Use

- Turn off the power cleaner and unplug it from the electrical outlet.
- Turn off the water supply.
- Squeeze the spray gun trigger to release any remaining pressure in the system.
- Disconnect the garden hose and high-pressure hose.
- Drain any remaining water from the pump and hoses.
- Clean the nozzles and store them in a safe place.

5.2 Winterization (for cold climates)

If storing the unit in an area where temperatures may drop below freezing, it is essential to winterize the pressure washer to prevent damage:

- Drain all water from the pump, hoses, and spray gun.
- Run a non-toxic antifreeze solution designed for pressure washers through the pump. Follow the antifreeze manufacturer's instructions.
- Store the unit in a dry, frost-free location.

5.3 Storage

Store the pressure washer in a clean, dry, and protected area. Use the integrated hose reel to neatly store the high-pressure hose.

6. Troubleshooting

Refer to this section for common issues and their solutions:

Problem	Possible Cause	Solution
Motor does not start	Power cord not plugged in; tripped circuit breaker; faulty outlet.	Check power connection; reset circuit breaker; try a different outlet.
No water pressure	Water supply off; kinked garden hose; clogged nozzle; air in pump.	Turn on water supply; straighten hose; clean/replace nozzle; purge air from pump by running water through it without power for 30 seconds.
Pulsating pressure	Air in pump; restricted water flow; clogged nozzle.	Purge air from pump; check water supply for restrictions; clean/replace nozzle.
Water leaks	Loose connections; damaged O-rings.	Tighten all connections; inspect and replace damaged O-rings.

7. Specifications

Technical details for the Imdot HX07 Power Cleaner:



Image: Infographic summarizing key features of the Imdot HX07 Power Cleaner, including 4.0 GPM/4800 PSI performance, Safety Lock & Total Stop System (TSS), 120V/60Hz rated voltage, IPX5 waterproof rating, four quick nozzles (0°, 15°, 25°, 40°), and a 33ft pressure hose.

- **Model Number:** HX07
- **Product Dimensions:** 11 x 10 x 24 inches
- **Item Weight:** 20.8 pounds
- **Rated Voltage:** 120V / 60Hz
- **Maximum Pressure:** 4800 PSI
- **Water Flow Rate:** 4.0 GPM (Gallons Per Minute)
- **High-Pressure Hose Length:** 33 feet
- **Power Cord Length:** 20 feet
- **Waterproof Rating:** IPX5
- **Safety Features:** Safety Lock, Total Stop System (TSS)

8. Warranty and Customer Support

For warranty information or technical assistance, please contact Imdot customer support. Details can typically be found on the product packaging or the official Imdot website.
Please have your model number (HX07) and purchase date available when contacting support.

© 2025 Imdot. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FM7RJ4HT

More documents and user manuals: **https://manuals.plus/**