LINSY HOME HC318E

LINSY HOME 9-Drawer Dresser (Model HC318E) Instruction Manual

White, 54-inch Wide Chest of Drawers

1. Introduction

This instruction manual provides detailed guidance for the assembly, operation, and maintenance of your LINSY HOME 9-Drawer Dresser, Model HC318E. Please read this manual thoroughly before assembly and use to ensure proper setup, safe operation, and optimal product longevity. This dresser is designed to offer organized storage with a modern aesthetic for your bedroom or living space.



Image 1.1: The LINSY HOME 9-Drawer Dresser (Model HC318E) in a typical room setting.

2. Important Safety Information

WARNING: To prevent overturning, this product must be used with the wall attachment device provided. Failure to do so can result in serious injury or death.

- Always secure the dresser to a wall using the anti-tip kit provided.
- Do not allow children to climb on drawers or shelves.
- Place heavier items in lower drawers to improve stability.
- Do not overload drawers beyond their recommended weight capacity.
- Keep all small parts and packaging materials away from children during assembly.
- Assemble the dresser on a soft, clean surface to prevent scratches.

Image 2.1: Illustration of the anti-tip wall attachment device installation steps.

3. Package Contents

Before beginning assembly, please verify that all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact LINSY HOME customer support for assistance.

Expected Components:

- Wood panels for frame and drawers
- 9 Drawer units
- Metal handles (9 sets)
- Drawer slides (multiple pairs)
- Hardware kit (screws, dowels, cam locks, etc.)
- Anti-tip wall attachment kit
- Assembly instructions manual

4. Assembly Instructions

Assembly is required for this dresser. Follow the numbered steps and diagrams carefully. It is recommended to have two people for assembly.

Tools Required (Not Included):

- Phillips head screwdriver
- Hammer (optional, for dowels)
- Drill (for wall anchor installation)

General Assembly Steps:

1. **Unpack and Identify Parts:** Lay out all components on a clean, soft surface. Refer to the parts list in your included manual to identify each piece.
2. **Assemble the Main Frame:** Connect the side panels, back panel, and base using the provided hardware (screws, dowels, cam locks). Ensure all connections are secure.
3. **Install Drawer Slides:** Attach the drawer slides to the interior of the dresser frame according to the instructions. Ensure they are level and aligned.
4. **Assemble Drawers:** Construct each of the nine drawers by connecting the front, back, and side panels. Insert the bottom panel and secure it.
5. **Attach Drawer Handles:** Secure the metal handles to the front of each assembled drawer.
6. **Insert Drawers:** Carefully slide each assembled drawer into its corresponding slot in the dresser frame. Test for smooth operation.
7. **Install Anti-Tip Kit:** Secure the dresser to the wall using the provided anti-tip kit as detailed in the safety information section. This step is critical for safety.

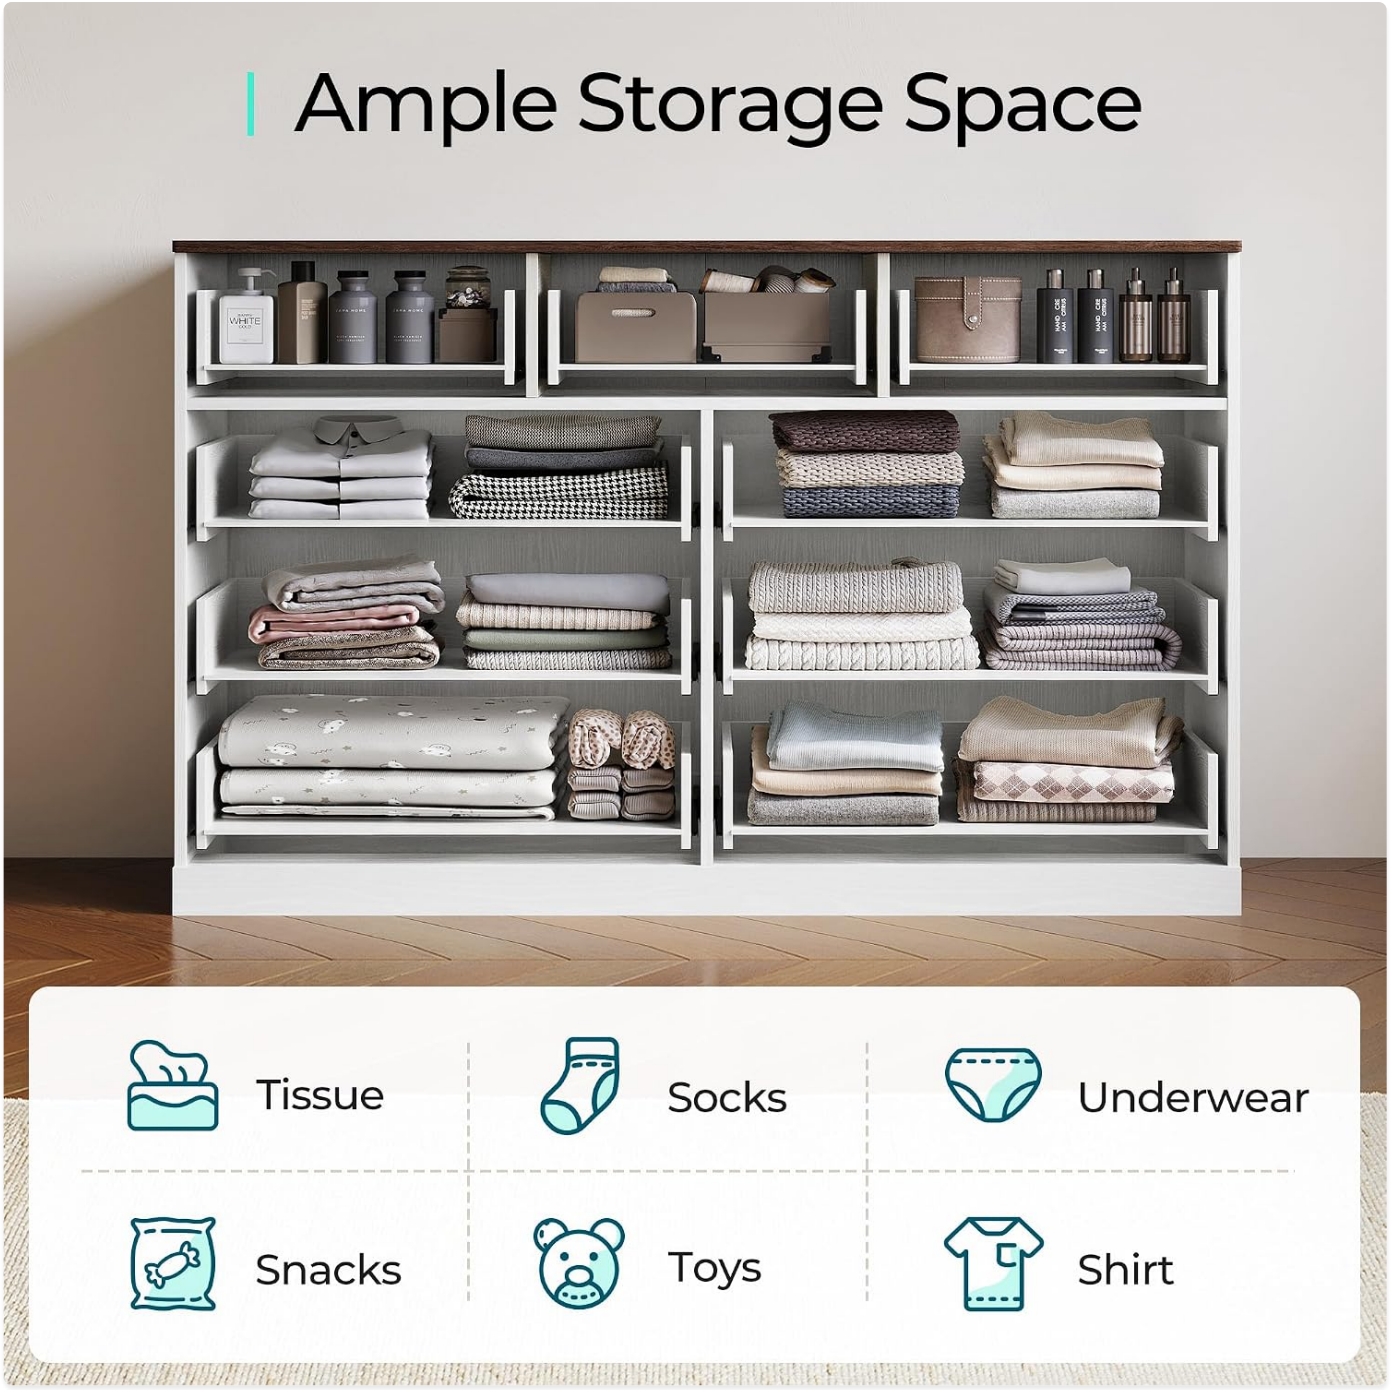


Image 4.1: Key features demonstrating quality construction: smooth corners, fluid drawer slides, and a robust base.

5. Operating Instructions

The LINSY HOME 9-Drawer Dresser is designed for easy and efficient storage.

Drawer Usage:

- To open a drawer, gently pull the handle. To close, push until it is fully seated.
- The drawers are equipped with smooth-gliding slides for effortless operation.
- The dresser features nine deep drawers, providing ample space for various items such as clothing, accessories, and household essentials.
- The top surface of the dresser has a weight capacity of approximately 150 lbs. Avoid placing excessively heavy items on top.

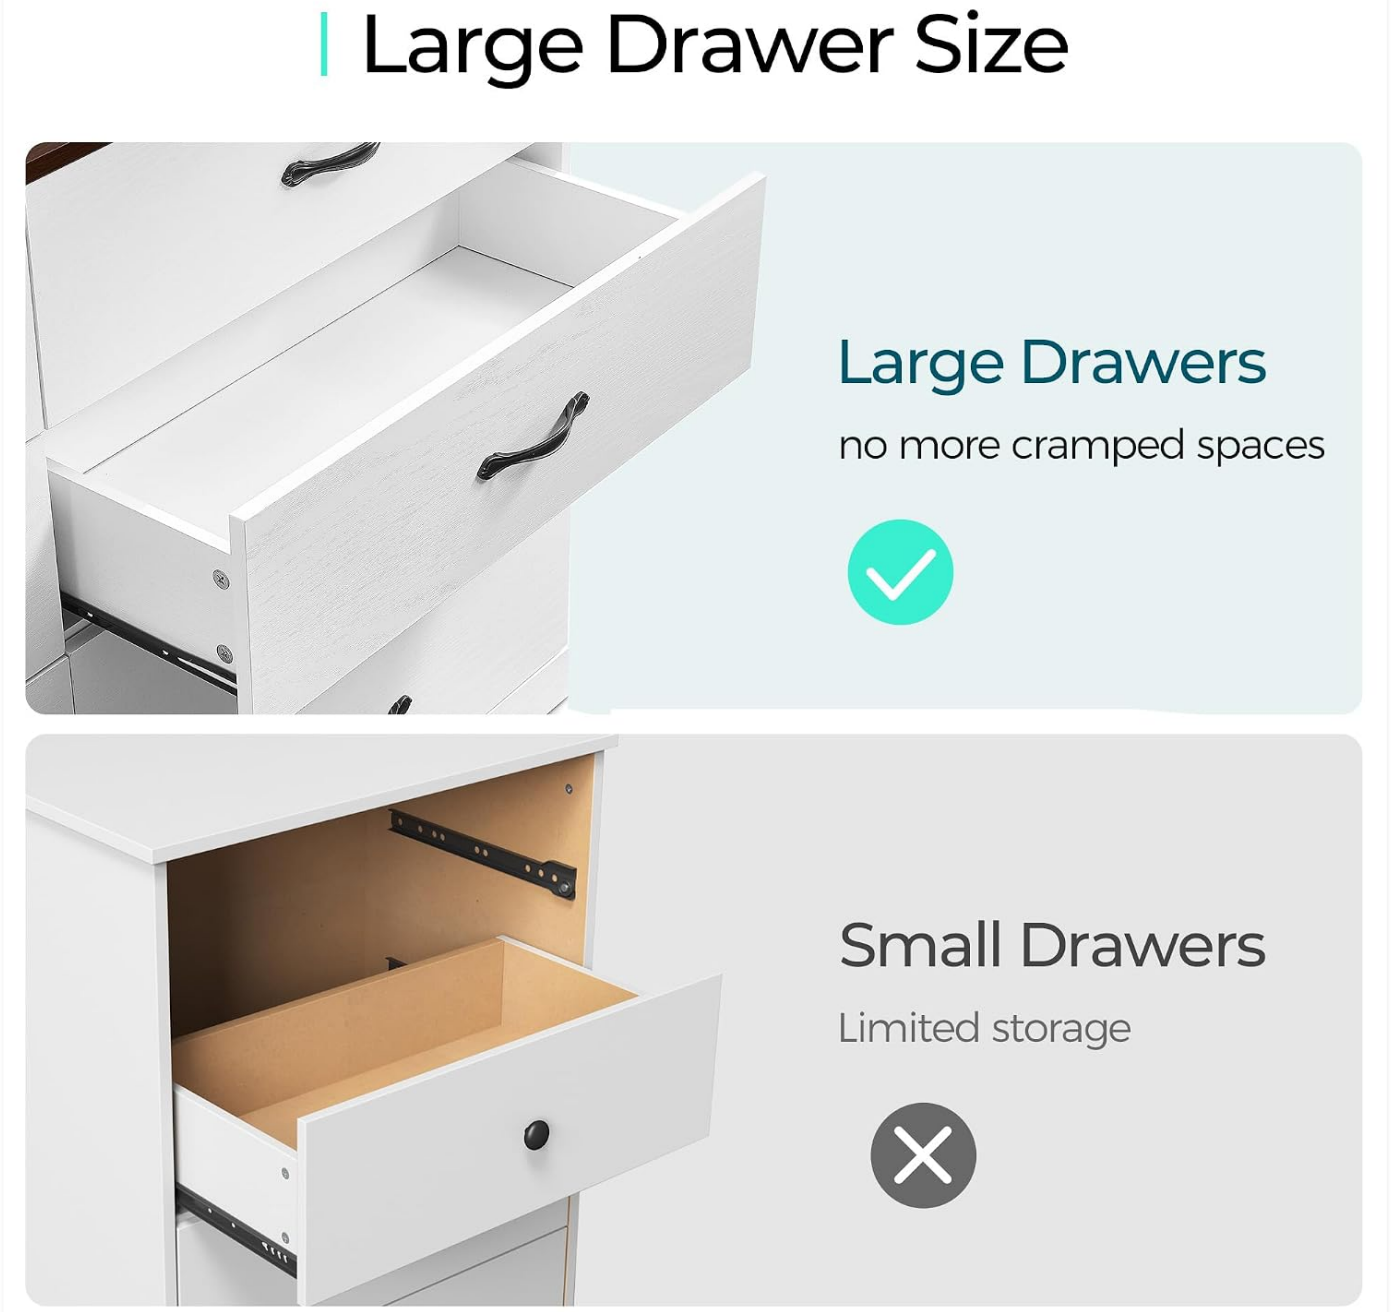


Image 5.1: The dresser offers ample storage capacity within its nine drawers.

6. Maintenance

Regular care will help maintain the appearance and functionality of your dresser.

Cleaning:

- Wipe surfaces with a soft, damp cloth.
- Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- Promptly wipe up spills to prevent staining.

Hardware Check:

- Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

- Inspect drawer slides for any debris or obstruction that might hinder smooth operation.

7. Troubleshooting

If you encounter any issues with your dresser, refer to the following common solutions:

Common Issues and Solutions:

- **Drawers not sliding smoothly:** Check if the drawer slides are properly aligned and free of obstructions. Ensure all screws on the slides are tightened. A small amount of silicone lubricant can be applied to the slides if needed.
- **Dresser feels unstable:** Verify that all assembly hardware is securely tightened. Confirm the anti-tip kit is correctly installed and anchored to the wall. Ensure the dresser is on a level surface.
- **Missing or damaged parts:** Do not attempt to force assembly with incorrect parts. Contact LINSY HOME customer support immediately for replacement parts.

8. Specifications



Image 8.1: Detailed product dimensions for the dresser and its drawers.

Feature	Detail
Brand	LINSY HOME
Model Name	HC318E
Product Dimensions (Overall)	15.7"D x 53.3"W x 33.5"H
Color	White
Material Type	Manufactured Wood
Number of Drawers	9
Item Weight	120 Pounds

Assembly Required	Yes
Top Surface Weight Capacity	150 Pounds
UPC	810199833002

9. Warranty and Support

For warranty information, replacement parts, or any other product-related inquiries, please contact LINSY HOME customer support. Refer to your product packaging or the official LINSY HOME website for the most current contact details.
We are committed to providing quality products and support to our customers.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question