Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

OUKITEL C62 Pro

OUKITEL C62 Pro Smartphone User Manual

Model: C62 Pro

Introduction

Welcome to the OUKITEL C62 Pro Smartphone user manual. This guide provides detailed instructions on how to set up, operate, maintain, and troubleshoot your new device. Please read this manual carefully to ensure optimal performance and longevity of your smartphone.

1. Setup

1.1 SIM Card and TF Card Installation

The OUKITEL C62 Pro supports dual SIM cards (Nano+Nano) or one Nano SIM card and one TF card for expandable storage up to 1TB.

1. Locate the SIM card tray on the side of your device.
2. Insert the SIM ejector tool into the small hole next to the tray to open it.
3. Carefully pull out the tray.
4. Place your Nano SIM card(s) and/or TF card into the designated slots, ensuring the gold contacts face downwards.
5. Gently push the tray back into the device until it clicks into place.



Figure 1: Illustration of SIM card and TF card insertion. The image displays the phone's side with the SIM tray, indicating slots for two Nano SIMs or one Nano SIM and one TF card.

1.2 Initial Power On and Basic Setup

1. Press and hold the Power button until the OUKITEL logo appears.
2. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.
3. You can also configure security features like fingerprint unlock and Face ID during this initial setup.

2. Operating Your Smartphone

2.1 Main Display (6.88-inch)

The OUKITEL C62 Pro features a large 6.88-inch display with a 90Hz refresh rate for smooth visuals. Navigate using touch gestures, taps, and swipes.



Figure 2: The 6.88-inch main display of the OUKITEL C62 Pro, showcasing its large size and smooth visual capabilities.

2.2 Rear Display (1.81-inch)

The unique 1.81-inch rear display provides quick access to essential information without unlocking the main screen. It shows notifications, weather, time, and can even be used for selfie previews.



Figure 3: The 1.81-inch secondary display on the back of the OUKITEL C62 Pro, illustrating its functionality for quick information access and selfie previews.

2.3 Camera Functions

The OUKITEL C62 Pro is equipped with a 13MP main camera and a 5MP front camera. It supports various shooting modes:

- **Panorama:** For wide-angle shots.
- **Portrait:** To create depth-of-field effects.
- **Beauty:** Enhances facial features.
- **HDR:** Improves dynamic range in photos.
- **Pro Mode:** Offers manual control over camera settings.

Utilize the rear display for precise selfie previews.



Figure 4: The camera system of the OUKITEL C62 Pro, featuring the 13MP main camera and 5MP front camera, capable of capturing detailed images.

2.4 Battery and Charging

The device is powered by a 5150mAh battery, providing extended usage. It supports 10W fast charging and OTG reverse charging, allowing you to power other devices.



Figure 5: Visual representation of the OUKITEL C62 Pro's 5150mAh battery, emphasizing its capacity for prolonged use.

2.5 Security Features

- **Fingerprint Unlock:** Register your fingerprint(s) for quick and secure access.
- **Face ID:** Use facial recognition to unlock your device.

2.6 Connectivity

- **4G Dual SIM:** Supports two Nano SIM cards for flexible network usage.
- **NFC:** For contactless payments and quick pairing with other NFC-enabled devices.
- **GPS:** Integrated with GPS, GLONASS, GALILEO, and BEIDOU for accurate navigation.

2.7 Storage and Performance

The OUKITEL C62 Pro comes with 24GB RAM (8GB physical + 16GB virtual) and 256GB internal storage, expandable up to 1TB with a TF card. This ensures smooth multitasking and ample space for your files.



Figure 6: A visual representation of the OUKITEL C62 Pro's memory configuration, highlighting 24GB RAM and 256GB ROM, expandable to 1TB.

2.8 Operating System

The smartphone runs on Android 15, offering enhanced privacy protection, system security, and a user-friendly interface.



Figure 7: The OUKITEL C62 Pro running on Android 15, showcasing its modern interface and features.

3. Maintenance

3.1 Cleaning Your Device

- Use a soft, lint-free cloth to wipe the screen and body of the phone.
- Avoid using harsh chemicals or abrasive materials, as they can damage the screen and finish.
- Keep ports free of dust and debris.

3.2 Battery Care

- Avoid extreme temperatures, as they can degrade battery performance.
- Do not fully discharge the battery regularly. Charge it before it drops too low.
- Use the original charger or a certified compatible charger for optimal charging.

3.3 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. You can usually find this option in your phone's Settings menu under "System" or "About phone."

4. Troubleshooting

If you encounter issues with your OUKITEL C62 Pro, try the following common troubleshooting steps:

- **Device not turning on:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Screen unresponsive:** Restart the device by holding the power button. If unresponsive, force restart (refer to device-specific instructions, usually holding power and volume down).
- **Apps crashing:** Clear the cache of the problematic app in Settings > Apps. If the issue persists, reinstall the app.
- **Poor network signal:** Check if your SIM card is properly inserted. Try restarting the phone or toggling Airplane Mode on and off.
- **Battery draining quickly:** Reduce screen brightness, close unused apps, and check battery usage in Settings to identify power-hungry applications.
- **Fingerprint/Face ID not working:** Ensure your fingers are clean and dry, or your face is clearly visible. Re-register your biometrics if necessary.

For more complex issues, please contact OUKITEL customer support.

5. Specifications

Feature	Detail
Brand	OUKITEL
Model Name	OUKITEL C62 Pro
Operating System	Android 15
RAM Memory Size	24 GB (8GB physical + 16GB virtual)
CPU Model	Mediatek Dimensity 8000
Storage Capacity	256 GB (Expandable up to 1TB via TF card)
Screen Size	6.88 Inches (Main Display)
Rear Display Size	1.81 Inches
Resolution	2340 x 1080
Refresh Rate	90 Hz
Cellular Technology	4G
Battery Capacity	5150 mAh

Feature	Detail
Main Camera	13 MP
Front Camera	5 MP
Connectivity	Dual SIM (Nano+Nano/Nano+TF), NFC, GPS (GPS/GLONASS/GALILEO/BEIDOU)
Security	Fingerprint, Face ID
Thickness	9.5 mm
Weight	220g

Produktdatenblatt

Delegierte Verordnung (EU) 2023/1669 der Kommission im Hinblick auf die Energieverbrauchskennzeichnung von Smartphones und Slate-Tablets

1. Marke OUKITEL		**2. Modellkennung** C62 Pro
3. Allgemeine Produktparameter:		
Parameter		Wert
4. Art des Geräts		Smartphone
5. Betriebssystem		Android
6. Energieeffizienzklasse		B
7. Vom Benutzer austauschbare Batterie		Nein
8. Batterielaufzeit pro Zyklus ($ENDE_{Gerät}$[h])		47
9. Batterielaufzeit in Zyklen — Standardeinstellungen [Zyklen]		1 000
10. Nennkapazität der Batterie (C_{rated}[mAh])		5 150
11. Versand mit Schutzabdeckung		Nein
12. Prüfung der Zuverlässigkeit nach wiederholtem freien Fall — Stürze ohne Defekt [n]		270
13. Prüfung der Zuverlässigkeit nach wiederholtem freien Fall — Stürze ohne Defekt, im vollständig erweiterten Zustand geprüft [n]		n.a.
14. Klasse der Zuverlässigkeit nach wiederholtem freien Fall		A
15. Eindringschutzgrad		IP54
16. Angegebene Eintauchtiefe in Wasser, bei IPx8 [m]		n.a.
17. Ritzbeständigkeit des Bildschirms auf Mohsscher Härteskala		4
18. Ladegerät	Erforderliche Ausgangsleistung [W]	10
	Steckverbindertyp (am Ende des Geräts)	USB-C
Angaben zur Reparierbarkeit:		
19. Garantierte Mindestverfügbarkeit von Sicherheits-, Korrektur- und Funktionsaktualisierungen für das Betriebssystem (Jahre)		5
20. Reparierbarkeitsklasse (auf der Grundlage des nachstehenden Index)		C
21. Reparierbarkeitsindex		3,33
21a. Wert „Zerlegungstiefe“ (S_{DD})		3,35
21b. Wert „Befestigungselemente (Typ)“ (S_F)		2,60
21c. Wert „Werkzeuge (Typ)“ (S_T)		4,05
21d. Wert „Ersatzteile“ (S_{SP})		4
21e. Wert „Software-Aktualisierungen (Dauer)“ (S_{SU})		3
21f. Wert „Reparaturinformationen“ (S_{RI})		3

22. Weblink zu Informationen über die Verfügbarkeit von Ersatzteilen für fachlich kompetente Reparateure und Endnutzer	/
23. Weblink zu Reparaturanweisungen für Endnutzer	/
24. Weblink zu Richtbeträgen für die Preise vor Steuern	/
Weitere Angaben:	
25. Mindestlaufzeit der vom Lieferanten angebotenen Garantie [Monate]	12

Das Modell wurde auf dem Unionsmarkt in Verkehr gebracht , und zwar ab dem 01

EPREL-Eintragungsnummer 2403783

https://eprel.ec.europa.eu/qr/2403783

Lieferant: Apex CE Specialists GmbH (Bevollmächtigter)

Website:

Kundenbetreuung:

Name: SUCCESS COURIER SL

Website:


E-Mail-Adresse: successservice2@hotmail.com

Telefonnummer: 34910602659

Anschrift:
CALLE RIO TORMES NUM. 1, PLANTA 1, DERECHA, OFICINA 3, Fuenlabrada, Madrid, 28947 Spain
Spanien

Figure 8: Official Product Data Sheet for the OUKITEL C62 Pro, providing detailed technical specifications.

For more detailed information, refer to the official EU EPREL database: https://eprel.ec.europa.eu/qr/2403783

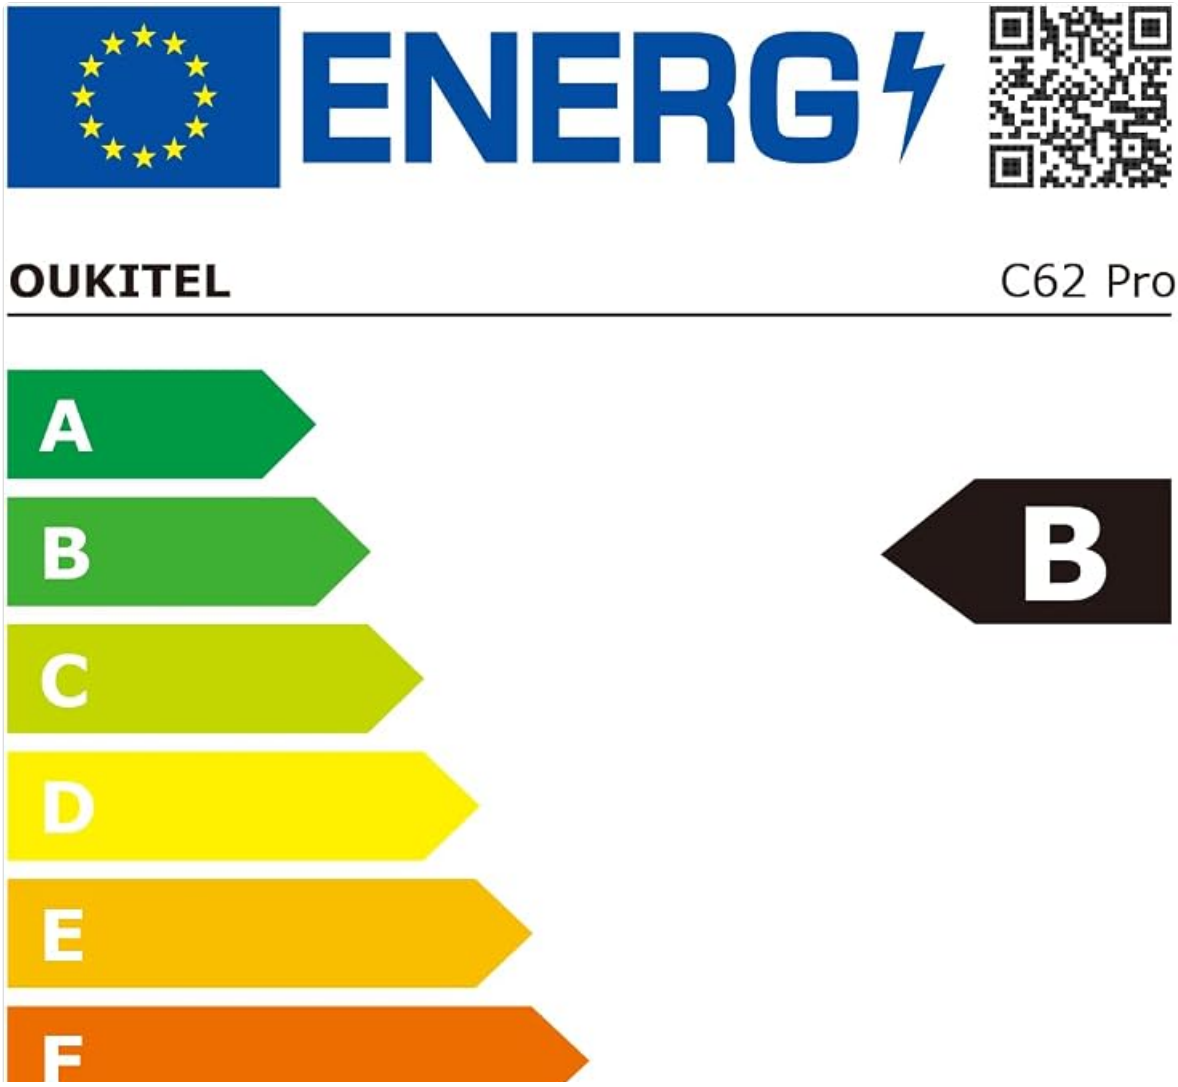

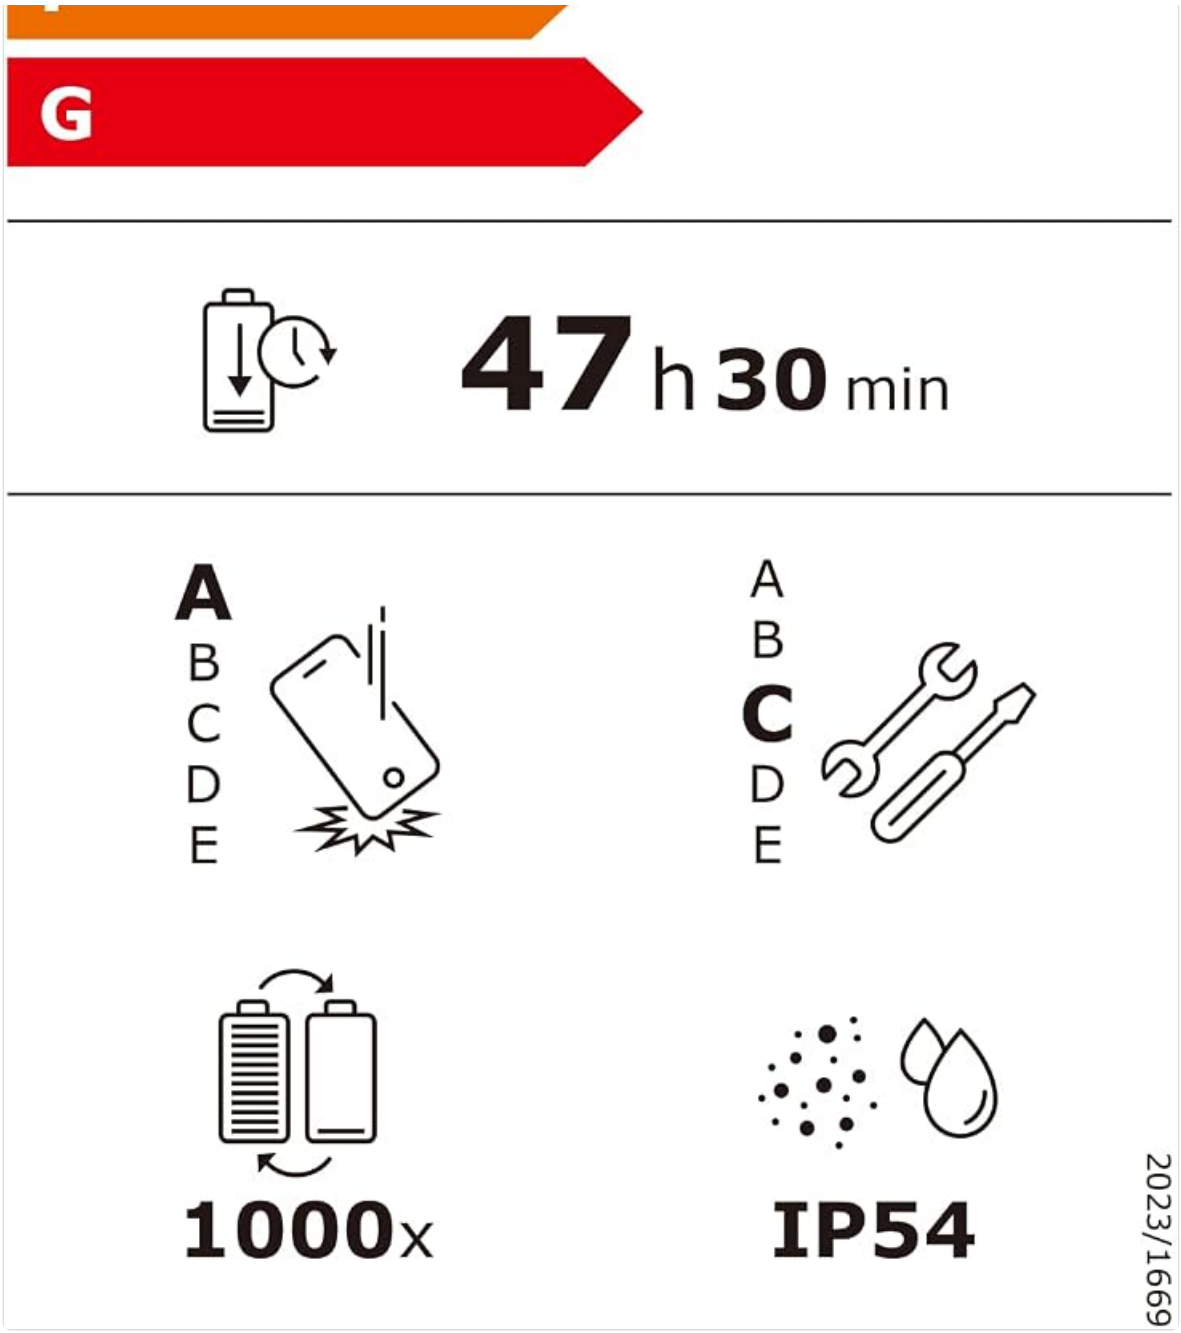


Figure 9: EU Energy Label for the OUKITEL C62 Pro, indicating its energy efficiency rating and battery performance.

For more detailed information, refer to the official EU EPREL database: https://eprel.ec.europa.eu/qr/2403783

6. Warranty and Support

OUKITEL provides a **two-year warranty** for the C62 Pro smartphone. You are also eligible for a 30-day no-reason return policy. Long-term online technical support and 24-hour online customer service are available.
For support, please refer to the contact information provided with your purchase or visit the official OUKITEL website.
The product includes a transparent protective case for added protection.

7. Product Videos

No official product videos from the seller were available for embedding in this manual.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FM7WXGR7

More documents and user manuals: **https://manuals.plus/**