Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kermoky Robust 5

Kermoky Robust 5 Cordless Vacuum Cleaner Instruction Manual

Model: Robust 5

1. Introduction

Thank you for choosing the Kermoky Robust 5 Cordless Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read this manual thoroughly before first use and retain it for future reference.

2. Important Safety Instructions

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this vacuum cleaner.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.

- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the vacuum cleaner during operation. Unplug the adapter after the battery is fully charged before using.

3. Package Contents

Carefully unpack your Kermoky Robust 5 Cordless Vacuum Cleaner and ensure all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- Cordless Vacuum Cleaner Main Unit
- Battery Pack
- Power Adapter
- 2-in-1 Brush
- Soft & Hard Brush Roller
- HEPA Filter (pre-installed or spare)
- Aroma Tablet
- Wall Hanging Bracket & Hardware Bag
- Goose Head Cleaning Brush
- Instruction Manual



Image: All components of the Kermoky Robust 5 Cordless Vacuum Cleaner, including the main unit, various attachments, wall mount, and filters.

4. Product Overview

The Kermoky Robust 5 is a powerful and versatile cordless vacuum cleaner designed for efficient home cleaning. It features a self-standing design, advanced filtration, and an aromatherapy function.

Key Features:

- **Powerful Suction:** Equipped with a 600W brushless motor, providing up to 50KPA suction for effective cleaning on various surfaces.
- **Extended Runtime:** High-capacity battery offers up to 70 minutes of continuous operation in energy-saving mode.

- **Self-Standing Design:** Allows the vacuum to stand upright independently for convenient pauses during cleaning.
- **Anti-Tangle Brush:** V-shaped brush design prevents hair and string entanglement, ideal for pet owners.
- **Dual-Bristle Roller Brush:** Combines soft and hard bristles for effective cleaning on both hard floors and carpets.
- **8-Stage HEPA Filtration:** Captures 99.99% of microscopic dust particles, improving air quality.
- **Aromatherapy Function:** Integrated slot for aroma tablets to release a pleasant fragrance during cleaning.
- **Wall-Mounted Charging:** Convenient dock for automatic charging and storage.
- **Clear Smart Display:** Digital display shows battery percentage and suction mode.



Image: The Kermoky Robust 5 vacuum cleaner demonstrating its self-standing capability, ready for use or storage.



Image: A diagram highlighting the noise reduction technologies, including a brushless motor, dynamic balancing, noise reduction sponge, and optimized air duct.

5. Setup

5.1 Assembly

1. **Attach the Extension Wand:** Insert the extension wand into the main vacuum body until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the floor brush to the other end of the extension wand, ensuring it clicks firmly.
3. **Install the Battery:** Slide the battery pack into the designated slot on the main unit until it locks.
4. **Insert Aroma Tablet:** Open the aroma tablet slot (refer to diagram in product overview) and insert the provided aroma tablet.

5.2 Charging

Before first use, fully charge the battery. The vacuum cleaner can be charged using the wall-mounted dock or by plugging the adapter directly into the battery pack.

- **Wall-Mounted Charging:** Install the wall-mounted bracket in a suitable location. Hang the vacuum cleaner on the bracket; it will automatically begin charging.
- **Direct Charging:** Connect the power adapter to the battery pack and plug it into a power outlet.

The digital display will show the charging status. A full charge typically takes approximately 4 hours. Do not attempt to operate the vacuum while it is charging.



Image: The vacuum cleaner securely mounted on its wall charging dock, indicating the charging process.

6. Operating Instructions

6.1 Power On/Off

Press the power button on the main unit to turn the vacuum cleaner on or off.

6.2 Suction Modes

The Kermoky Robust 5 offers multiple suction levels to suit different cleaning needs. Use the mode selection button on the digital display to cycle through the available power settings (e.g., Eco, Standard, Max). The digital display will indicate the current mode and remaining battery life.



Image: The clear smart display showing battery level and various operational indicators.

6.3 Using Attachments

The vacuum cleaner comes with several attachments for versatile cleaning:

- **Floor Brush:** Ideal for general cleaning on hardwood floors, carpets, and rugs. The integrated LED lights illuminate the cleaning path.
- **2-in-1 Brush:** Use the brush mode for delicate surfaces like upholstery or curtains, and the crevice tool mode for tight spaces and corners.
- **Goose Head Cleaning Brush:** Suitable for reaching awkward angles and cleaning irregular surfaces.

To change attachments, press the release button on the current attachment and pull it off. Then, align the new attachment and push it on until it clicks.



Image: The vacuum cleaner configured for different cleaning scenarios, showcasing its versatility with various attachments.

6.4 Aromatherapy Function

The integrated aroma tablet slot releases a pleasant fragrance as you vacuum. Ensure an aroma tablet is inserted into the designated slot for this feature to function.

7. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dust Cup

Empty the dust cup regularly, especially when the debris reaches the MAX fill line. To empty:

1. Ensure the vacuum is turned off.
2. Press the dust cup release button to detach it from the main unit.
3. Position the dust cup over a trash bin.
4. Press the bottom release latch to open the dust cup and empty its contents.
5. Close the dust cup and reattach it to the main unit until it clicks.

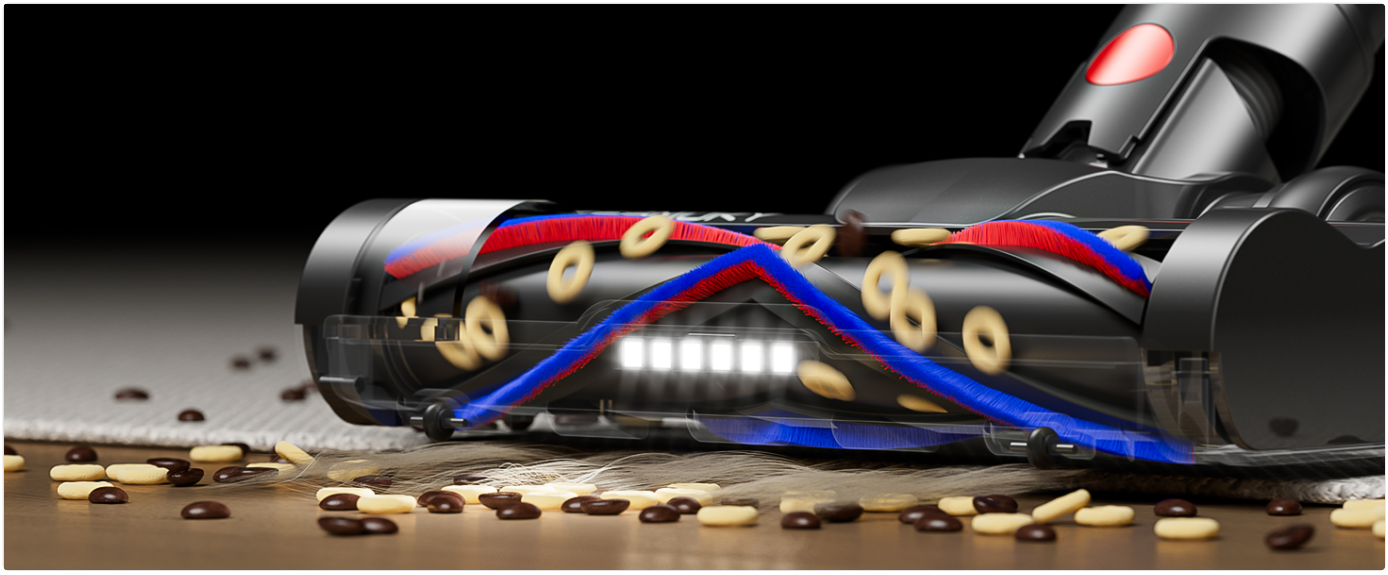


Image: Demonstrating the easy process of emptying the vacuum cleaner's dust cup.

7.2 Cleaning Filters

The Kermoky Robust 5 uses an 8-stage HEPA filtration system. Regular cleaning of the filters is crucial for maintaining suction power and air quality.

1. Ensure the vacuum is turned off and the dust cup is removed.
2. Remove the HEPA filter and other filter components from the dust cup assembly.
3. Tap off loose dirt over a trash bin.
4. Rinse the filters under cold running water until the water runs clear. Do not use detergent.
5. Allow filters to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating methods.
6. Reassemble the dry filters and dust cup.

Note: Replace HEPA filters every 3-6 months, or as needed, depending on usage.



Image: An exploded view illustrating the multi-stage filtration system and the aroma tablet placement.

7.3 Cleaning the Brush Roll

The anti-tangle brush roll minimizes hair wrapping, but occasional cleaning may still be necessary.

1. Ensure the vacuum is turned off and disconnected from the power source.
2. Detach the floor brush from the extension wand.
3. Locate the brush roll access cover (usually on the side or bottom of the floor brush) and open it.
4. Remove the brush roll. Use scissors to carefully cut away any tangled hair or debris.
5. Clean the brush roll and the brush housing.
6. Reinsert the brush roll and close the access cover securely.

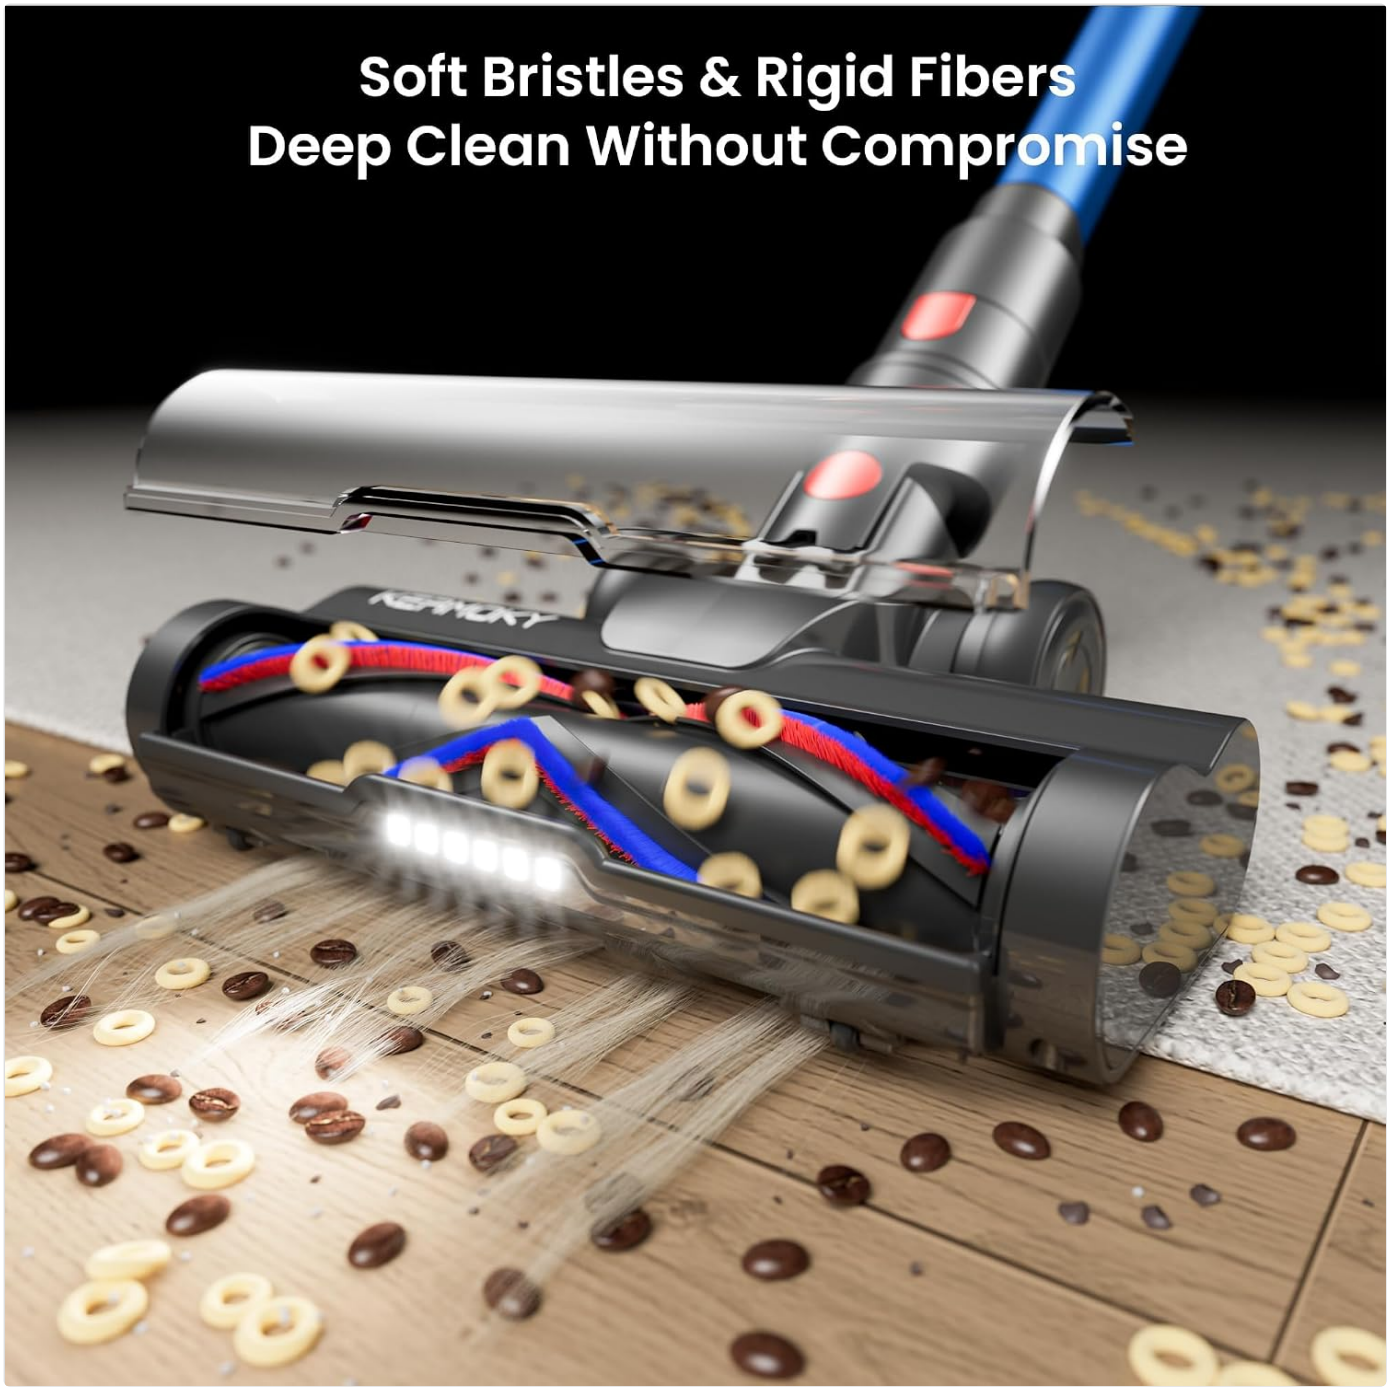


Image: A detailed view of the soft and hard bristle roller brush in action, demonstrating its cleaning capability.

8. Troubleshooting

If you encounter issues with your Kermoky Robust 5, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged; Battery not properly installed; Power button not pressed correctly.	Charge the battery fully; Reinstall the battery pack securely; Press the power button firmly.
Loss of suction	Dust cup full; Filters clogged; Brush roll obstructed; Blockage in nozzle or wand.	Empty dust cup; Clean or replace filters; Remove obstructions from brush roll; Check for and clear any blockages.
Brush roll not spinning	Obstruction in brush roll; Brush roll motor issue; Floor brush not properly attached.	Remove any tangled hair or debris; Ensure floor brush is securely attached. If problem persists, contact support.
Short battery runtime	Battery not fully charged; Using high suction mode continuously; Battery degradation.	Ensure battery is fully charged; Use lower suction modes for longer runtime; Contact support if battery life significantly decreases.
Aroma function not working	Aroma tablet missing or depleted.	Insert a new aroma tablet into the designated slot.

If the problem persists after attempting these solutions, please contact Kermoky customer support for further assistance.

9. Specifications

Detailed technical specifications for the Kermoky Robust 5 Cordless Vacuum Cleaner:

Feature	Specification
Brand	Kermoky
Model Name	Robust 5
Wattage	600 watts
Suction Power	Up to 50KPA
Battery Life	Up to 70 minutes (in energy-saving mode)
Charging Time	4 Hours
Dust Cup Capacity	1.8 Liters
Filter Type	HEPA Filter (8-stage filtration)
Product Dimensions	10"L x 6"W x 48"H
Item Weight	8 pounds
Recommended Uses	Carpet, Hard Floor, Pet Hair

Feature	Specification
Display Type	LCD

10. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for warranty claims.

© 2025 Kermoky. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FMJCLT31

More documents and user manuals: **https://manuals.plus/**