Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DownyPaws Fursink Wireless Cat Water Fountain (Model B0FMKQ5MVW)

DownyPaws Fursink Cordless Cat Water Fountain and Pet Food Mat Instruction Manual

Brand: DownyPaws | Model: Fursink Wireless Cat Water Fountain (B0FMKQ5MVW)

Introduction

The DownyPaws Fursink Cordless Cat Water Fountain provides a convenient and hygienic hydration solution for your pets. Its wireless design allows for flexible placement without the need for constant power outlets, promoting increased water intake. The accompanying BPA-free silicone pet food mat ensures a clean feeding area by containing spills and crumbs.

This manual provides detailed instructions for the setup, operation, and maintenance of your new pet water fountain and food mat.

Product Components

- Water Fountain Unit (Stainless Steel Tank, Top Cover, Pump with Battery Pack)
- Replacement Filters (Charcoal Filters, Pre-filter Sponge)
- USB Charging Cable
- Cleaning Brush
- BPA-Free Silicone Pet Food Mat


Setup Instructions

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Charge Battery Pack:** Ensure the detachable battery pack is fully charged before first use. Connect the USB charging cable to the battery pack and a suitable USB power adapter. The indicator light will show charging status.
3. **Prepare Filter:** Soak the charcoal filter in water for 5 minutes, then rinse it thoroughly under running water for 30 seconds to remove any loose carbon particles.
4. **Assemble Pump and Filter:** Attach the pre-filter sponge to the pump. Insert the prepared charcoal filter into its designated slot on the top cover.
5. **Fill Water Tank:** Fill the stainless steel tank with fresh water, ensuring the water level is between the MIN and MAX indicators. Do not exceed the MAX line.

6. **Place Top Cover:** Carefully place the top cover onto the water tank, aligning the pump with the water outlet. Ensure the battery pack is securely seated.
7. **Activate Fountain:** Press and hold the power button on the battery pack to turn on the fountain.



The DownyPaws Fursink Cordless Cat Water Fountain fully assembled and operational.

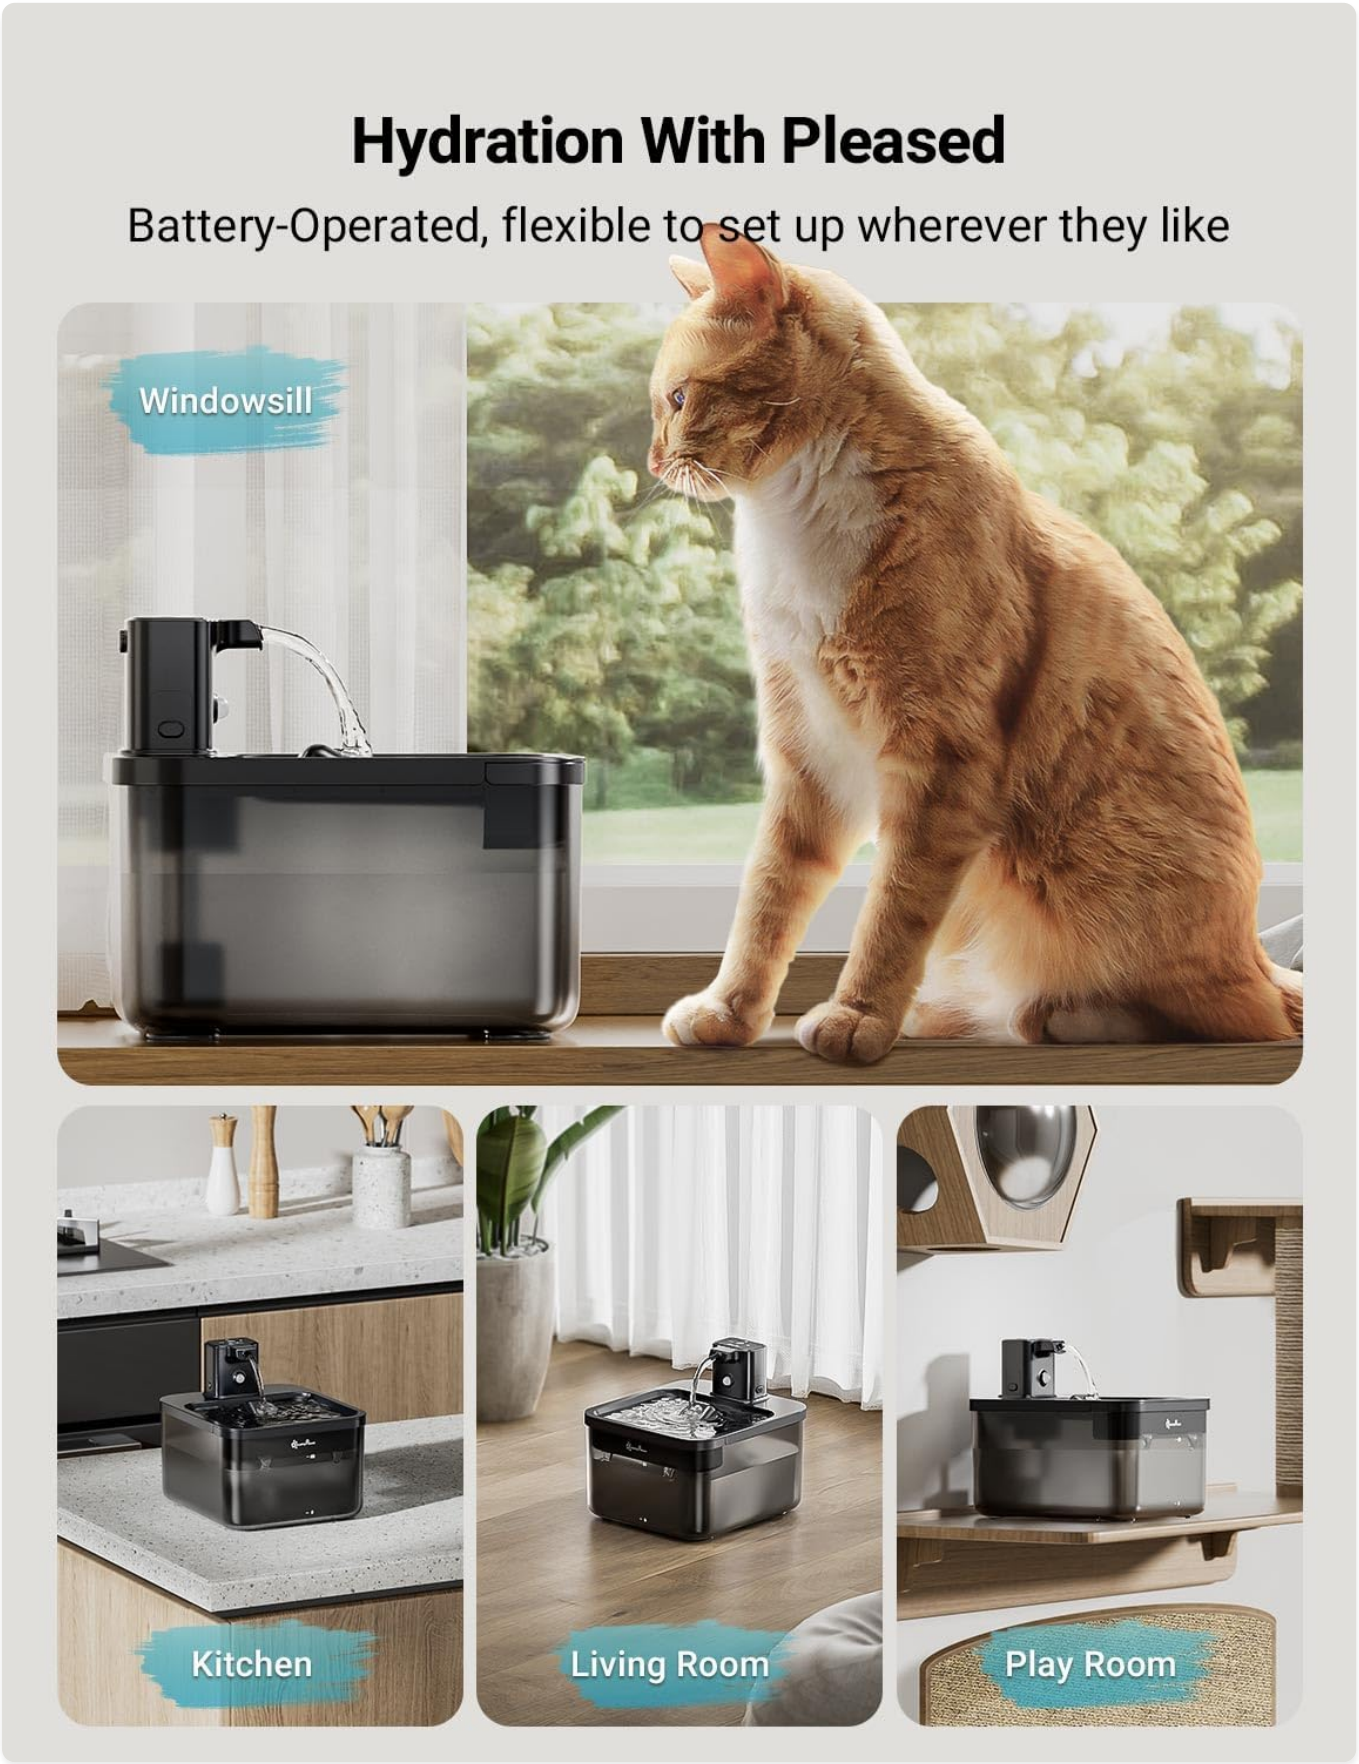


The cordless design allows for flexible placement in various locations like the kitchen, living room, or windowsill.


Operating Instructions

The DownyPaws Fursink Water Fountain offers dual operating modes to suit your pet's preferences and conserve battery life.

- **Motion-Activated Mode:** In this mode, the water flow is activated when your pet approaches within 5 feet (1.5 meters) and a 120-degree angle. The water will flow for approximately 6 seconds, simulating a fresh faucet stream. This encourages pets to drink more frequently.
- **Timed Mode:** This mode releases water for 20 seconds every 15 minutes, providing regular access to fresh water throughout the day.
- **Water Level Indicator:** The transparent window on the side of the tank, illuminated by an LED light, allows you to easily monitor the water level. Refill the tank when the water level approaches the MIN line.

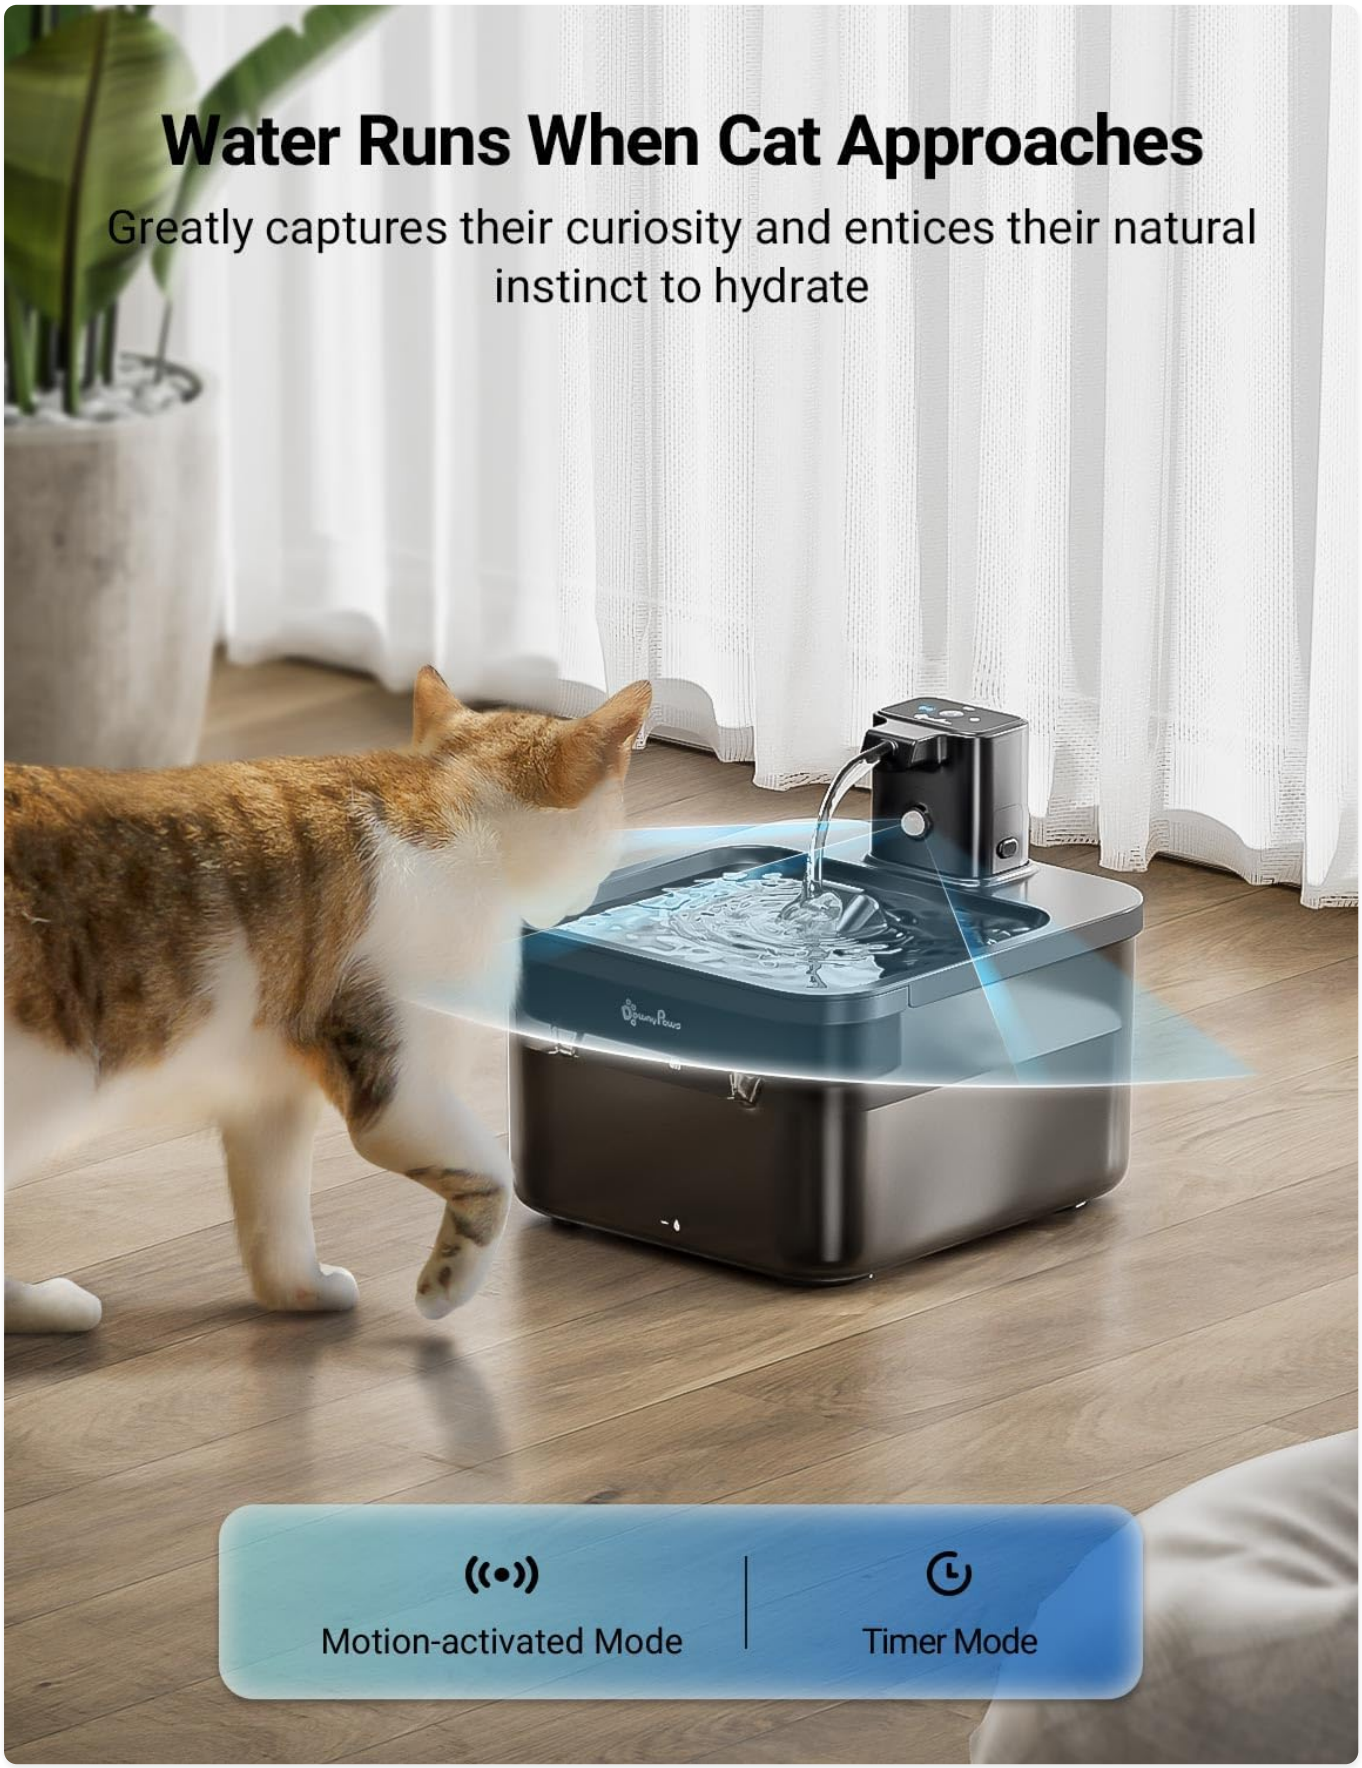

The motion-activated mode entices pets to drink by providing a fresh stream of water when they approach.

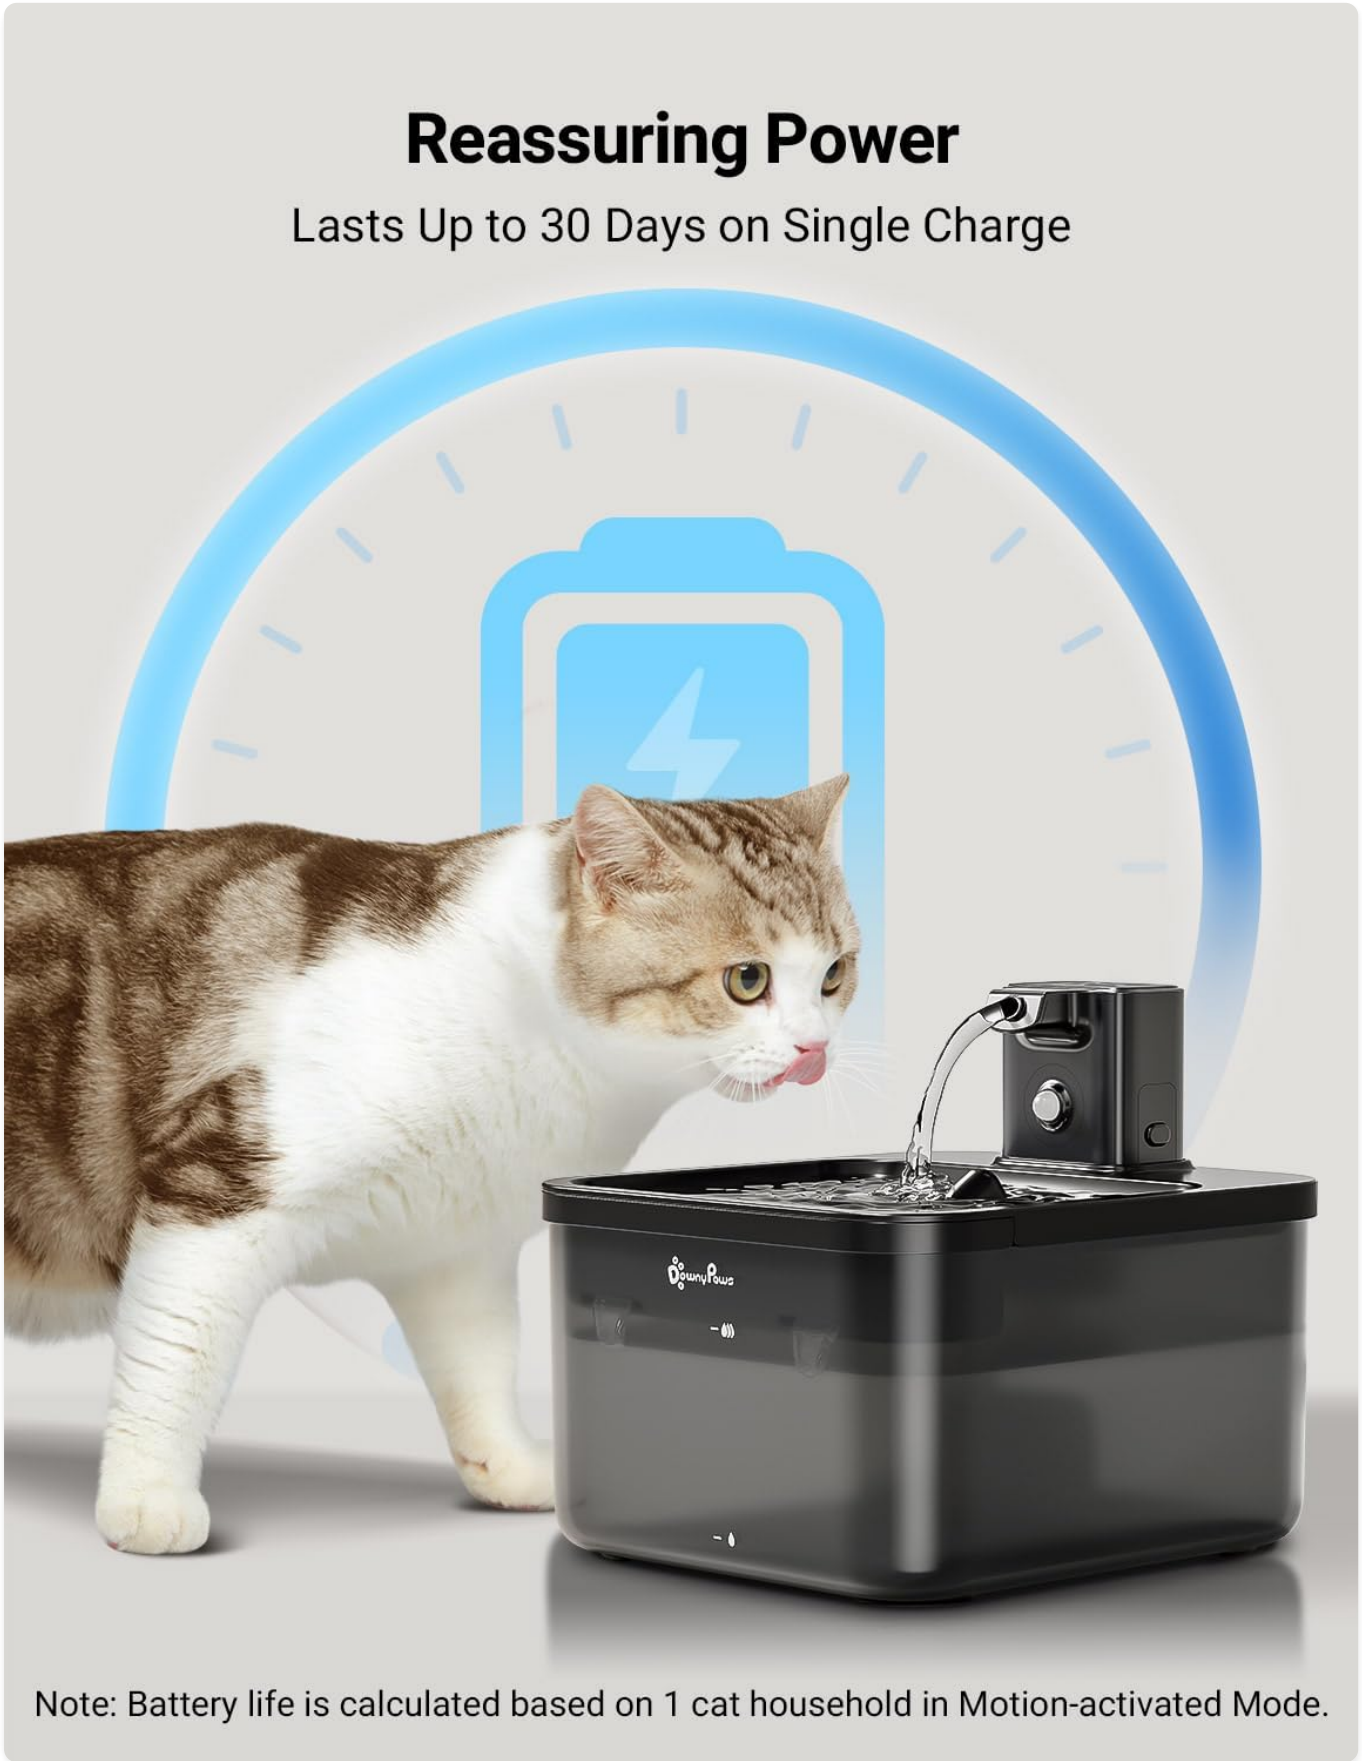

The fountain's battery provides up to 30 days of use on a single charge in motion-activated mode.

Your browser does not support the video tag. Please update your browser to view this content.

Watch a demonstration of the DownyPaws Wireless Cat Water Fountain in action, highlighting its features and quiet operation.

Maintenance

Regular cleaning and filter replacement are crucial for maintaining water quality and extending the lifespan of your fountain.

- **Weekly Cleaning:** Disassemble the fountain components (top cover, filter, pump, tank). Wash all parts with mild soap and water. Use the provided cleaning brush to clean the pump impeller and any hard-to-reach areas. Rinse thoroughly.
- **Filter Replacement:** Replace the charcoal filter every 2-4 weeks, depending on the number of pets and their drinking habits. The pre-filter sponge should be cleaned weekly and replaced every 2-4 months.
- **Battery Pack Care:** When cleaning the spout, ensure the rubber cap is closed tightly. For spout cleaning, rinse only; do not soak the entire battery pack in water.

Your browser does not support the video tag. Please update your browser to view this content.

Detailed video guide on how to properly clean your DownyPaws Fursink Cat Water Fountain, including disassembly and cleaning of all components.

Troubleshooting

- **No Water Flow:** Check if the battery is charged. Ensure the pump is correctly installed and free from obstructions. Verify the water level is above the MIN line.
- **Unusual Noise:** Disassemble and clean the pump and impeller to remove any hair or debris that might be causing noise. Ensure the water level is adequate.
- **Water Quality Issues:** Replace the filter as recommended (every 2-4 weeks). Clean the entire fountain thoroughly.

Specifications

- **Fountain Capacity:** 84 oz (2.5 L)
- **Battery:** Built-in 4,000mAh rechargeable battery
- **Battery Life:** Up to 30 days (in motion-activated mode, based on 1 cat household)
- **Material:** Stainless Steel (fountain), BPA-Free Silicone (mat)
- **Pet Food Mat Dimensions:** 18" x 12.5"
- **Water Modes:** Motion-Activated, Timed

Pet Food Mat Usage

The included BPA-free silicone pet food mat is designed to keep your pet's feeding area clean and tidy.

- **Placement:** Place the mat on the floor where your pet eats.
- **Spill Containment:** The 0.55-inch high rim around the mat effectively contains spills, water splashes, and food crumbs, protecting your floors.
- **Cleaning:** The silicone mat is easy to clean. Simply wipe it down or rinse it with water. It is crafted from food-grade silicone, ensuring safety for your pet.



The BPA-free silicone mat ensures a safe and clean eating surface for your pet.



Raised edges on the mat effectively catch spills and crumbs, keeping your floors clean.

Warranty & Support

For any product-related inquiries, technical support, or warranty claims, please refer to the contact information provided with your product packaging or visit the official DownyPaws website.

© 2025 DownyPaws. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FMKQ5MVW

More documents and user manuals: **https://manuals.plus/**