Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Tevese X9

Tevese X9 Swimming Headphones User Manual

Bone Conduction Bluetooth 6.0 IPX8 Waterproof 32GB MP3

Introduction

Thank you for choosing the Tevese X9 Swimming Headphones. These headphones are designed to provide a high-quality audio experience for both aquatic and land-based activities. Featuring bone conduction technology, an IPX8 waterproof rating, Bluetooth 6.0 connectivity, and a built-in 32GB MP3 player, the X9 offers versatile listening options. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your headphones to ensure optimal performance and longevity.



Image: Tevese X9 Bone Conduction Swimming Headphones.

Package Contents

Before use, please verify that all items are present in the package:

- Tevese X9 Bone Conduction Swimming Headphones
- Charging Cable
- Earplugs (Eartips)
- User Manual



Image: Contents of the Tevese X9 headphone package.

Setup

1. Charging the Headphones

Before initial use, fully charge the headphones. Connect the magnetic charging cable to the charging port on the headphones and plug the USB end into a compatible USB power adapter (not included) or a computer's USB port. The LED indicator will show charging status.

- **Charging Time:** Approximately 3 hours for a full charge.
- **Battery Life:** Up to 10 hours of playback on a full charge.

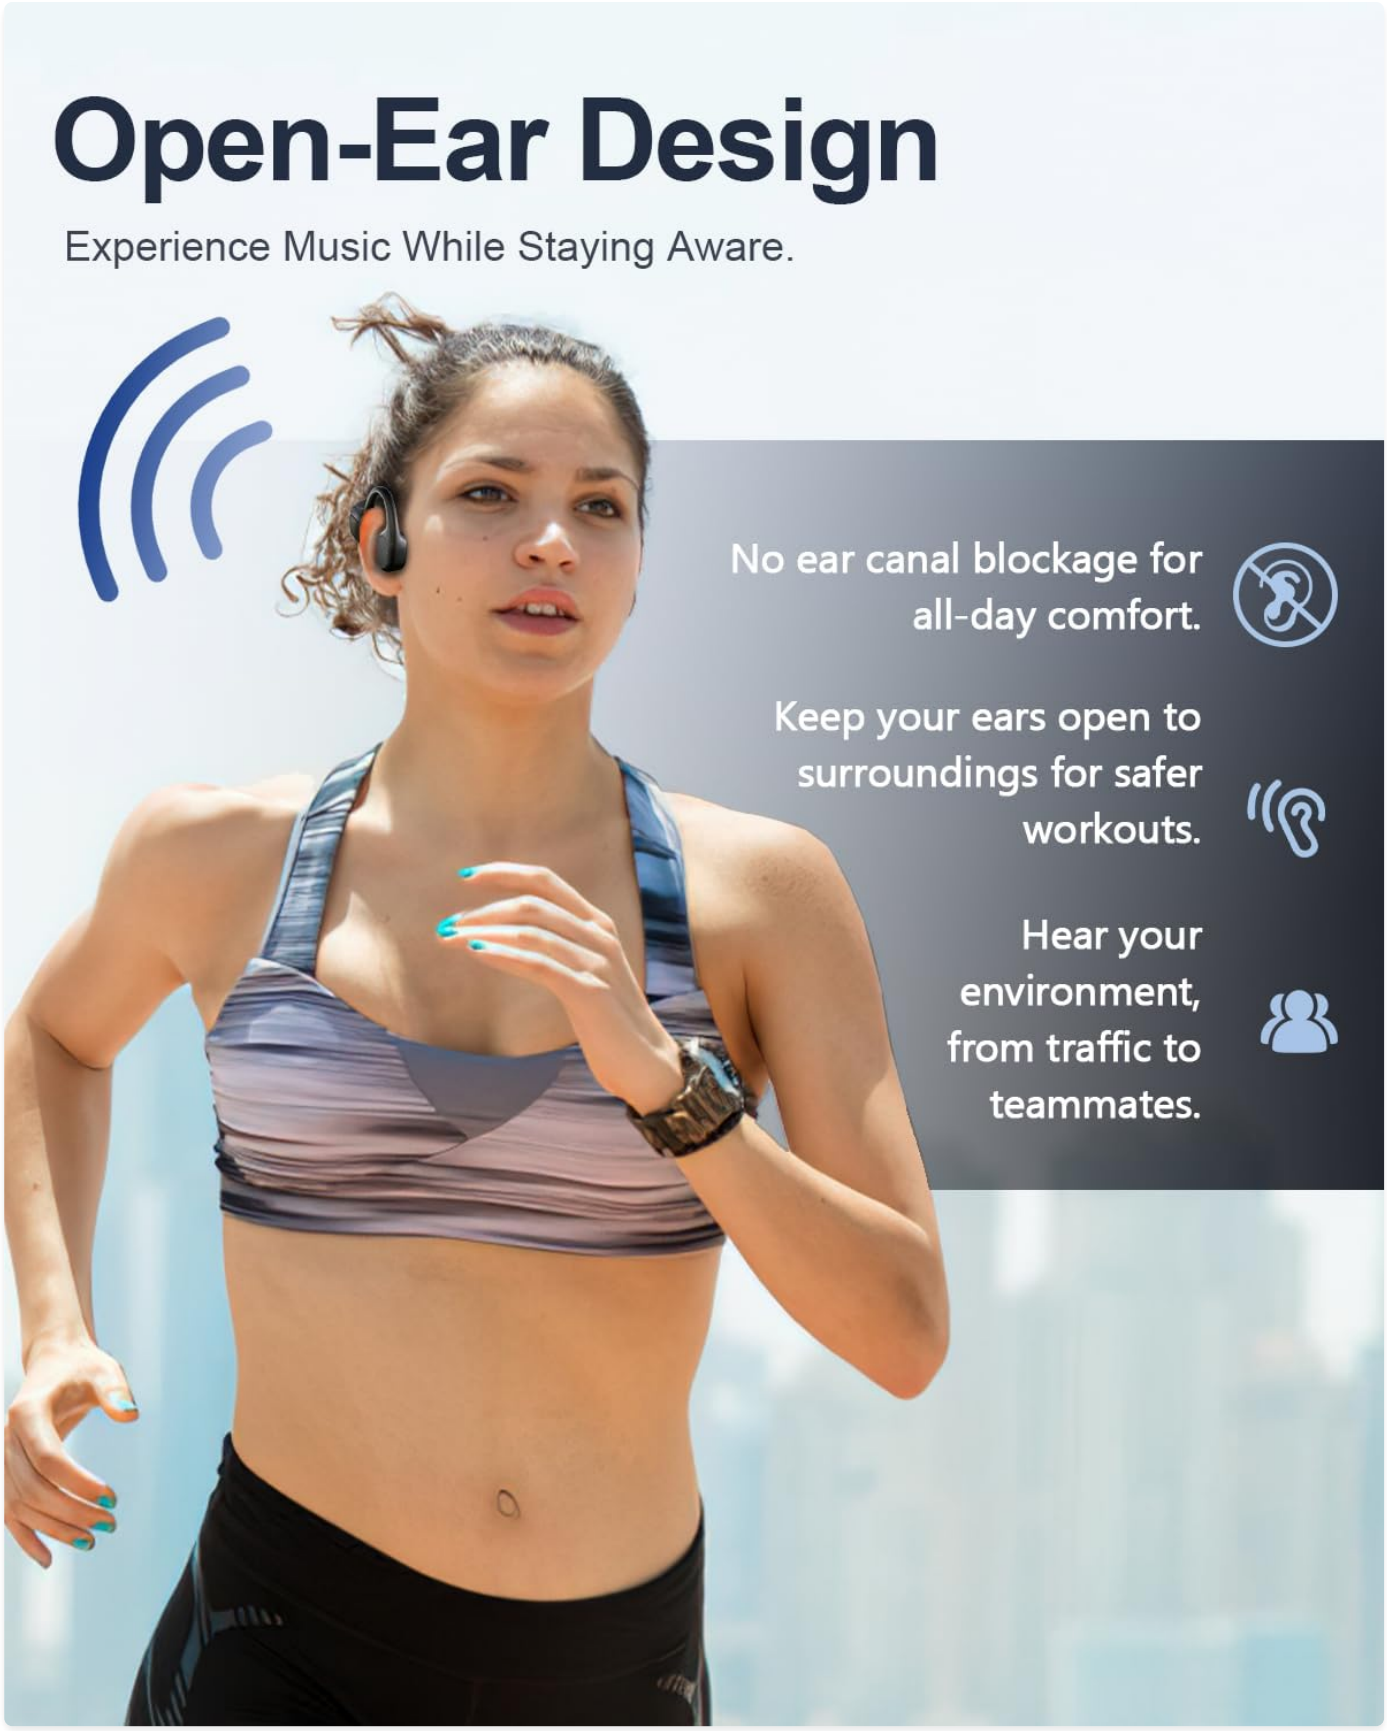


Image: Tevese X9 headphones with magnetic charging cable.

2. Powering On/Off

- **Power On:** Press and hold the Power button until the LED indicator flashes.
- **Power Off:** Press and hold the Power button until the LED indicator turns off.

Operating Instructions

1. Bluetooth Mode (Above Water Use)

Bluetooth mode is suitable for use above water, such as during running, gym workouts, or daily commutes. Bluetooth signals do not transmit effectively underwater.

1. **Pairing:** With the headphones powered off, press and hold the Power button until the LED indicator flashes red and blue alternately, indicating pairing mode.
2. **Connect:** On your device (smartphone, laptop, etc.), enable Bluetooth and search for "X9". Select it to connect. A voice prompt will confirm successful connection.
3. **Range:** The Bluetooth range is approximately 10 meters (33 feet).



Image: Bluetooth connection screen on a smartphone.

2. MP3 Mode (Underwater Use)

For underwater activities like swimming, switch to MP3 mode. The headphones have a built-in 32GB memory, capable of storing over 9,000 songs.

1. **Transferring Music:** Connect the headphones to a computer using the charging cable. The headphones will appear as a removable disk. Drag and drop audio files (e.g., MP3 format) into the headphone's storage.

2. **Switching to MP3 Mode:** While the headphones are on, press the Mode button (refer to button layout) to switch between Bluetooth and MP3 modes. A voice prompt will indicate the current mode.



Image: Headphones in MP3 mode.

3. Controls

The headphones feature intuitive button controls for managing playback and calls.



Image: Control buttons on the Tevese X9 headphones.

Button Functions

Button/Action	Function
Power Button (Press & Hold)	Power On/Off, Enter Pairing Mode
Volume Up (+)	Increase Volume (Short Press), Next Track (Long Press)

Button/Action	Function
Volume Down (-)	Decrease Volume (Short Press), Previous Track (Long Press)
Multi-function Button (Play/Pause)	Play/Pause Music, Answer/End Call
Mode Button	Switch between Bluetooth and MP3 modes

Maintenance

Proper care ensures the longevity and performance of your Tevese X9 headphones.

- **Cleaning:** After swimming or heavy sweating, rinse the headphones with fresh water and wipe them dry with a soft cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging Port:** Ensure the magnetic charging contacts are clean and dry before charging to prevent corrosion.
- **Water Resistance:** While IPX8 rated, avoid prolonged submersion beyond recommended depths and durations. Ensure the charging port is completely dry before charging.

Troubleshooting

Common Issues and Solutions

Problem	Solution
Headphones do not power on.	Ensure the headphones are fully charged.
Cannot pair via Bluetooth.	Ensure headphones are in pairing mode (flashing red/blue). Turn off and on your device's Bluetooth. Move closer to the device.
No sound in Bluetooth mode.	Check volume levels on both headphones and connected device. Ensure headphones are correctly paired.
No sound in MP3 mode.	Ensure headphones are in MP3 mode. Verify that music files are correctly loaded onto the 32GB storage. Check volume levels.
Sound quality is poor underwater.	Ensure you are in MP3 mode. Bluetooth does not work underwater. Using the included earplugs can significantly improve sound clarity underwater.
Headphones not recognized by computer.	Ensure the charging cable is securely connected. Try a different USB port or cable.

Specifications

Tevese X9 Technical Specifications

Feature	Detail
Brand	Tevese
Model Number	X9
Ear Placement	Open Ear
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	6.0
Bluetooth Range	10 meters
Water Resistance Level	IPX8 Waterproof
Built-in Storage	32GB MP3 Player
Audio Driver Type	Bone Conduction Driver
Frequency Range	20 Hz - 20,000 Hz
Battery Average Life	10 hours
Battery Charge Time	3 hours
Control Type	Button Control
Material	Acrylonitrile Butadiene Styrene (ABS)

Warranty and Support

The Tevese X9 Swimming Headphones come with a 2-year manufacturer's warranty, covering defects in materials and workmanship under normal use.

- **Return Policy:** This product is eligible for a 30-day return policy from the date of purchase.
- **Customer Support:** For technical assistance or warranty claims, please contact Tevese customer support. Refer to the product packaging or official website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FMPDGJDK

More documents and user manuals: **https://manuals.plus/**