Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ChooChoo NT2501

ChooChoo NT2501 Nightstand with Charging Station Instruction Manual

Model: NT2501

1. Setup and Assembly

Please read these instructions carefully before beginning assembly. Ensure all parts are present and accounted for. Assembly is best performed by two adults.

1.1 Safety Information

- Keep small parts out of reach of children.
- Use the correct tools as specified.
- Do not overtighten screws to avoid damaging the material.
- Place the nightstand on a flat, stable surface during assembly.

1.2 Tools Required

- Phillips Head Screwdriver (not included)
- Power Drill (optional, for faster assembly)

1.3 Product Dimensions

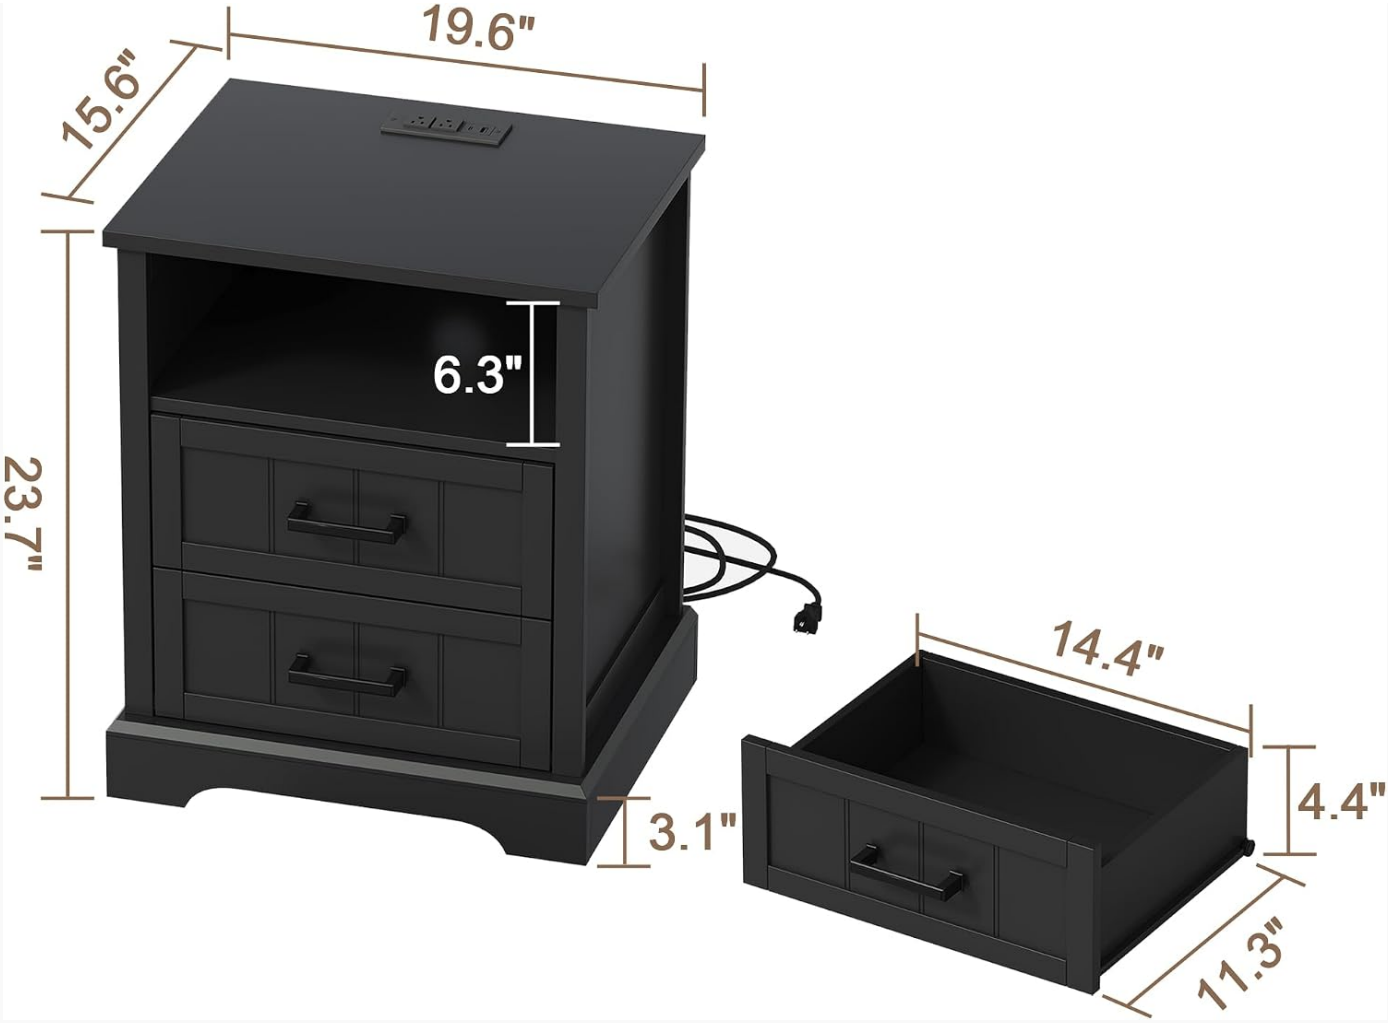


Image: Detailed dimensions of the nightstand, including height, width, depth, and drawer measurements.

1.4 Assembly Video Guide

For a visual step-by-step guide on assembling your ChooChoo Nightstand, please watch the official assembly video below. This video demonstrates the entire process from unboxing to final setup.

Your browser does not support the video tag.

Video: Official assembly guide for the ChooChoo Nightstand, demonstrating each step of construction.

1.5 General Assembly Steps (Refer to video for details)

1. **Unpack and Identify Parts:** Lay out all components and hardware. Verify against the parts list in your included manual.
2. **Attach Drawer Slides to Side Panels:** Secure the drawer slides to the designated side panels using the provided screws.
3. **Assemble the Main Frame:** Connect the side panels, bottom panel, and top panel using cam locks and dowels.
4. **Construct the Drawers:** Assemble the drawer boxes, ensuring the bottom panel slides into the grooves correctly.
5. **Install Drawer Slides to Drawers:** Attach the remaining drawer slides to the assembled drawer boxes.
6. **Install Back Panel:** Secure the back panel to the main frame using small nails or screws.
7. **Install Charging Station:** Carefully place the charging station into the pre-cut opening on the top surface and secure it with screws.
8. **Insert Drawers:** Slide the assembled drawers into the main frame, aligning the drawer slides.

2. Operating Instructions

2.1 Using the Charging Station

The integrated charging station provides convenient power access for your electronic devices.



Image: The charging station features two standard AC outlets, one USB-A port, and one USB-C port.

- **AC Outlets (120V/12A):** Plug in standard electronic devices such as lamps, alarm clocks, or laptops.
- **USB-A Port (5V/2A):** Connect compatible USB devices for charging.
- **USB-C Port (5V/2A):** Connect compatible USB-C devices for charging.
- Ensure the nightstand's main power cord (6.5 feet) is securely plugged into a wall outlet.

2.2 Using the Drawers

The nightstand features two smooth-gliding drawers for organized storage.



Image: The two drawers provide ample space for personal items, keeping your bedside tidy.

- Pull the handles gently to open the drawers.
- Push the drawers firmly to close them completely.
- Avoid overloading drawers to ensure smooth operation and prevent damage to the slides.

3. Care and Maintenance

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.
- **Spills:** Immediately wipe up spills with a dry cloth to prevent water damage or staining.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Fasteners:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.

4. Troubleshooting

4.1 Charging Station Not Working

- Ensure the nightstand's main power cord is securely plugged into a functional wall outlet.
- Check if the wall outlet itself is working by plugging in another device.
- Verify that the charging station unit is properly installed and connected internally (refer to assembly steps).
- Try a different device or charging cable to rule out issues with your device or cable.

4.2 Drawers Are Sticking or Not Closing Smoothly

- Check for any obstructions inside the drawer or along the drawer slides.
- Ensure the drawer slides are properly aligned and securely fastened to both the drawer and the nightstand frame.
- Verify that the drawer is not overloaded, which can cause misalignment.
- Confirm that all assembly screws for the drawer and slides are tightened appropriately.

5. Product Specifications

Feature	Specification
Brand	ChooChoo
Model Number	NT2501
Colour	Black
Product Dimensions	50.04 x 39.88 x 59.94 cm (19.7 x 15.7 x 23.6 inches)
Material	Engineered Wood
Item Weight	19.8 kg (43.65 Pounds)
Number of Drawers	2
Charging Station	2 AC Outlets (120V/12A), 1 USB-A Port (5V/2A), 1 USB-C Port (5V/2A)
Power Cord Length	6.5 feet

6. Warranty and Support

For detailed warranty information and customer support, please refer to the documentation included with your product or visit the official ChooChoo website. You may also contact the seller directly for assistance with any product-related inquiries or issues.

- **Manufacturer:** ChooChoo
- **Date First Available:** Sept. 5 2025

© 2025 ChooChoo. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FMXPFB4V

More documents and user manuals: **https://manuals.plus/**