Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Aoxun 7 Pcs with Firepit

Aoxun 7-Piece Patio Furniture Set with 44-inch Fire Pit Table User Manual

Model: 7 Pcs with Firepit

Introduction

Thank you for choosing the Aoxun 7-Piece Patio Furniture Set with Fire Pit Table. This manual provides essential information for the safe assembly, operation, and maintenance of your new outdoor furniture. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Information

WARNING: This product includes a fire pit table that can cause burns and fire-related injuries. Keep children and pets away from the fire pit when in use. Always follow the manufacturer's instructions for proper assembly, use, and maintenance to prevent tip-over risks. This product contains small parts that may pose a choking hazard; keep them out of reach of children and pets. Do not leave the fire pit unattended while in use.

- Ensure all components are securely fastened before use.
- Place the furniture set on a flat, stable surface.
- Do not use the fire pit indoors or in enclosed spaces.
- Keep flammable materials away from the fire pit.
- Always use the fire pit with adequate ventilation.
- Allow the fire pit to cool completely before covering or storing.

Package Contents

Your Aoxun 7-Piece Patio Furniture Set includes the following components:

- 3 x Armless Sofa Sections
- 2 x Armrest Sofa Sections
- 1 x 44-inch Fire Pit Table
- 1 x Coffee Table
- Cushions for all seating sections
- Hardware kit and assembly tools

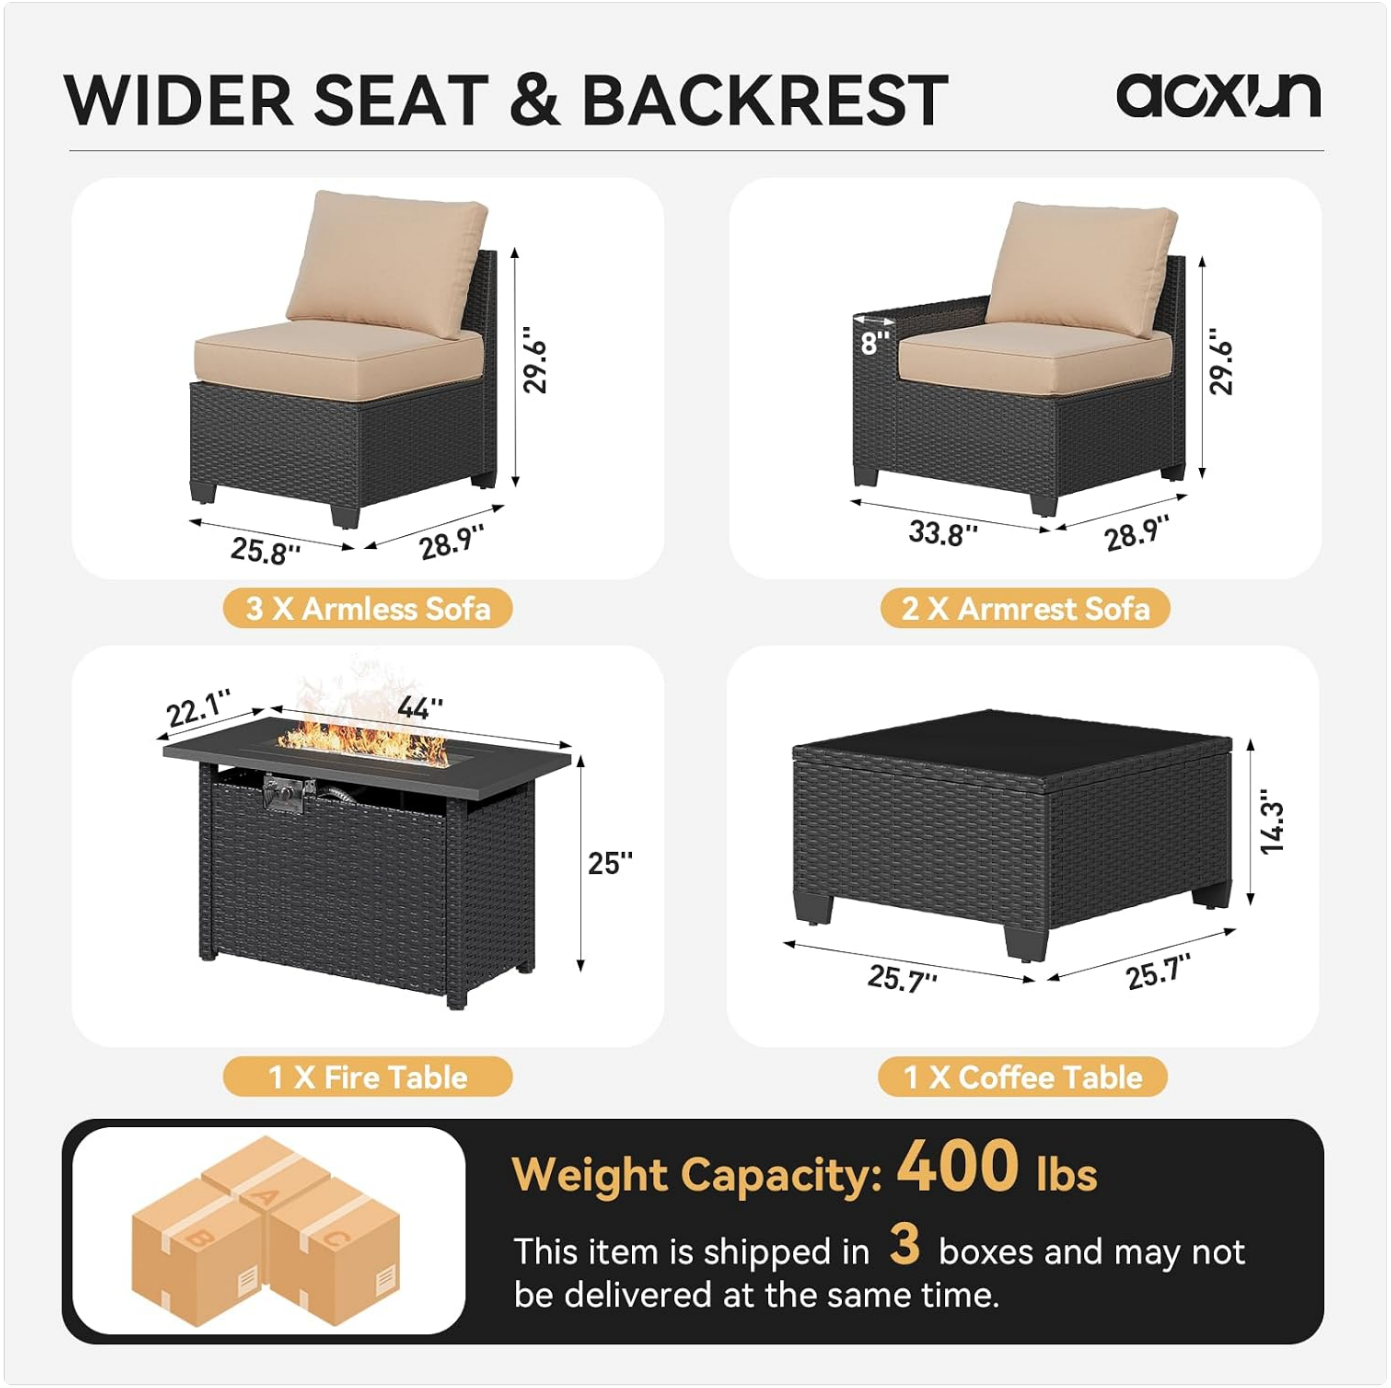


Figure 1: Overview of included furniture pieces and their approximate dimensions. Note that the item ships in 3 boxes.

Assembly Instructions

Assembly is required for this patio furniture set. It is recommended to have two people for assembly. Please follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all listed components and hardware are present.
2. **Assemble Sofa Frames:** Connect the armless and armrest sofa sections using the provided hardware. Ensure all bolts are tightened securely. The modular design allows for various configurations (L-shape, U-shape, or linear).
3. **Attach Cushions:** Place the high-resiliency foam cushions onto the assembled sofa frames. The cushions feature horn-button straps to keep them securely anchored.
4. **Assemble Coffee Table:** Connect the panels of the coffee table using the provided hardware.
5. **Assemble Fire Pit Table:** Follow the specific instructions provided with the fire pit table for assembly. This typically involves attaching the burner unit, placing the glass stones, and connecting the propane tank (not included). Ensure all gas

connections are secure and leak-free.



Figure 2: The complete 7-piece patio furniture set, including the fire pit table, ready for use.



Figure 3: Details of the 4-inch thick cushions, featuring high-density sponge, soft PP cotton, horn buckle fixed ropes, and sliding zippers for easy removal and cleaning.



Figure 4: The furniture features 8-inch wide armrests for enhanced comfort and ergonomic backrests.

Operating the Fire Pit Table

The 44-inch fire pit table provides 50,000 BTU of warmth. Follow these steps for safe operation:

1. **Connect Propane Tank:** Ensure the propane tank (not included) is securely connected to the fire pit's gas line. Check for any leaks using a soapy water solution.
2. **Ignition:** Turn the control knob to the 'ON' position and press the electric ignition button. If the burner does not ignite, repeat the process after a few seconds.
3. **Adjust Flame:** Use the control knob to adjust the flame height to your desired level.
4. **Shut Down:** To turn off the fire pit, turn the control knob to the 'OFF' position. Close the valve on the propane tank.
5. **Covering:** Once the fire pit has completely cooled, place the included lid over the burner area to convert it into a full table surface.



Figure 5: Key features of the fire pit burner, including crystal glass beads and the electric ignition system.

Maintenance

Proper maintenance will extend the life and appearance of your patio furniture set:

- **Wicker Frame:** Clean the UV-resistant wicker with a soft cloth and mild soap and water. Rinse thoroughly and allow to air dry.
- **Cushions:** The cushion covers are detachable and machine-washable. Wash in cold water on a gentle cycle and air dry. Spot clean minor spills with a damp cloth.
- **Fire Pit Table:** Regularly inspect the burner and gas connections for any signs of wear or damage. Clean the glass stones and burner area as needed.
- **Weather Protection:** While the set is designed for all-weather durability, using the included waterproof cover during heavy rain or prolonged periods of non-use will provide extra protection.



Figure 6: The upgraded waterproof fabric provides sun-proof and anti-UV protection for durability.

Troubleshooting

- **Fire Pit Not Igniting:** Check propane tank level, ensure gas valve is open, and verify the igniter battery (if applicable) is working. Clean any debris from the burner.
- **Unstable Furniture:** Ensure all assembly bolts are fully tightened. Adjust the furniture placement on a level surface.
- **Cushions Slipping:** Utilize the horn-button straps to secure cushions to the furniture frames.

Specifications

Brand	Aoxun
Model	7 Pcs with Firepit

Color	Beige-black
Material Type	Wicker, Fabric, Metal
Style	Modern
Fire Pit Item Depth	44 inches
Assembly Required	Yes
Weight Capacity (per seat)	400 lbs (approximate)

Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact Aoxun customer service. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question