LEKATO WT-2

LEKATO WT-2 Bluetooth Wireless Page Turner Pedal User Manual

Model: WT-2

1. Introduction

The LEKATO WT-2 Bluetooth Wireless Page Turner Pedal is designed to provide hands-free control for musicians, presenters, and readers. This device allows users to navigate digital sheet music, e-books, and other documents, as well as control background music playback, using foot pedals. It connects wirelessly via Bluetooth to various devices, enhancing performance and practice sessions by eliminating the need to use hands for page turning or media control.



Image 1.1: Musician utilizing the LEKATO WT-2 pedal with a laptop displaying sheet music.

2. Package Contents

- LEKATO WT-2 Bluetooth Wireless Page Turner Pedal
- USB-C Charging Cable
- User Manual

3. Product Overview

The LEKATO WT-2 pedal features two main foot pedals, control buttons, and LED indicators for mode and battery status.



Image 3.1: LEKATO WT-2 Pedal Front View.

Controls and Indicators:

- **Left Pedal:** Primary action for page turning or media control.
- **Right Pedal:** Secondary action for page turning or media control.
- **'M' Button:** Mode selection button. Cycles through different page turning modes.
- **'R' Button:** Repeat function toggle. Enables or disables continuous action when a pedal is held down.
- **Battery Indicators:** LEDs showing 100%, 65%, and 25% charge levels.
- **ON/OFF Switch:** Located on the side/rear of the device.
- **RESET Button:** For resetting the device, typically a small pinhole button.
- **Multimedia Control Buttons:** Additional buttons for Play/Pause and Next Track functions (located above the main pedals).



Image 3.2: Pedal dimensions and anti-slip features.

4. Charging the Device

The LEKATO WT-2 pedal is equipped with a built-in rechargeable battery that provides over 48 hours of continuous use on a full charge. To charge the device:

1. Locate the USB-C charging port on the side of the pedal.

2. Connect the provided USB-C charging cable to the pedal and a compatible USB power source (e.g., computer, wall adapter).
3. The battery indicator LEDs will illuminate to show the charging progress.
4. Once fully charged, all battery indicator LEDs will be solid. Disconnect the charging cable.

The LED battery indicators (100%, 65%, 25%) allow you to monitor the remaining battery life during operation.



Image 4.1: Charging the LEKATO WT-2 pedal and battery indicator.

5. Setup and Bluetooth Pairing

To connect your LEKATO WT-2 pedal to a device via Bluetooth:

1. Ensure the pedal is turned on and fully charged.
2. Turn on the pedal using the ON/OFF switch.
3. On your device (phone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "LEKATO WT-2" from the list of available Bluetooth devices to pair.
5. Once paired, the pedal is ready for use. The Bluetooth connection range is approximately 10 meters (33 feet).



Image 5.1: Seamless Bluetooth connectivity with various devices.

6. Operating Modes

The LEKATO WT-2 offers three page turning modes and a repeat function to suit various applications. Press the **'M' button** to cycle through the modes. The corresponding LED indicator will show the active mode.

Page Turning Modes

Mode	Left Pedal Action	Right Pedal Action	Description
UP/DN	Page Up	Page Down	Ideal for scrolling through documents or sheet music page by page.
←/→	Left Arrow	Right Arrow	Useful for applications that navigate horizontally or use arrow keys for control.
↑/↓	Up Arrow	Down Arrow	Suitable for fine-tuned scrolling or specific application controls.

Repeat Function:

Press the **'R' button** to toggle the repeat function. When enabled, holding down a pedal will continuously send the corresponding command, allowing for continuous scrolling or rapid page turning. When disabled, each pedal press sends a single command.

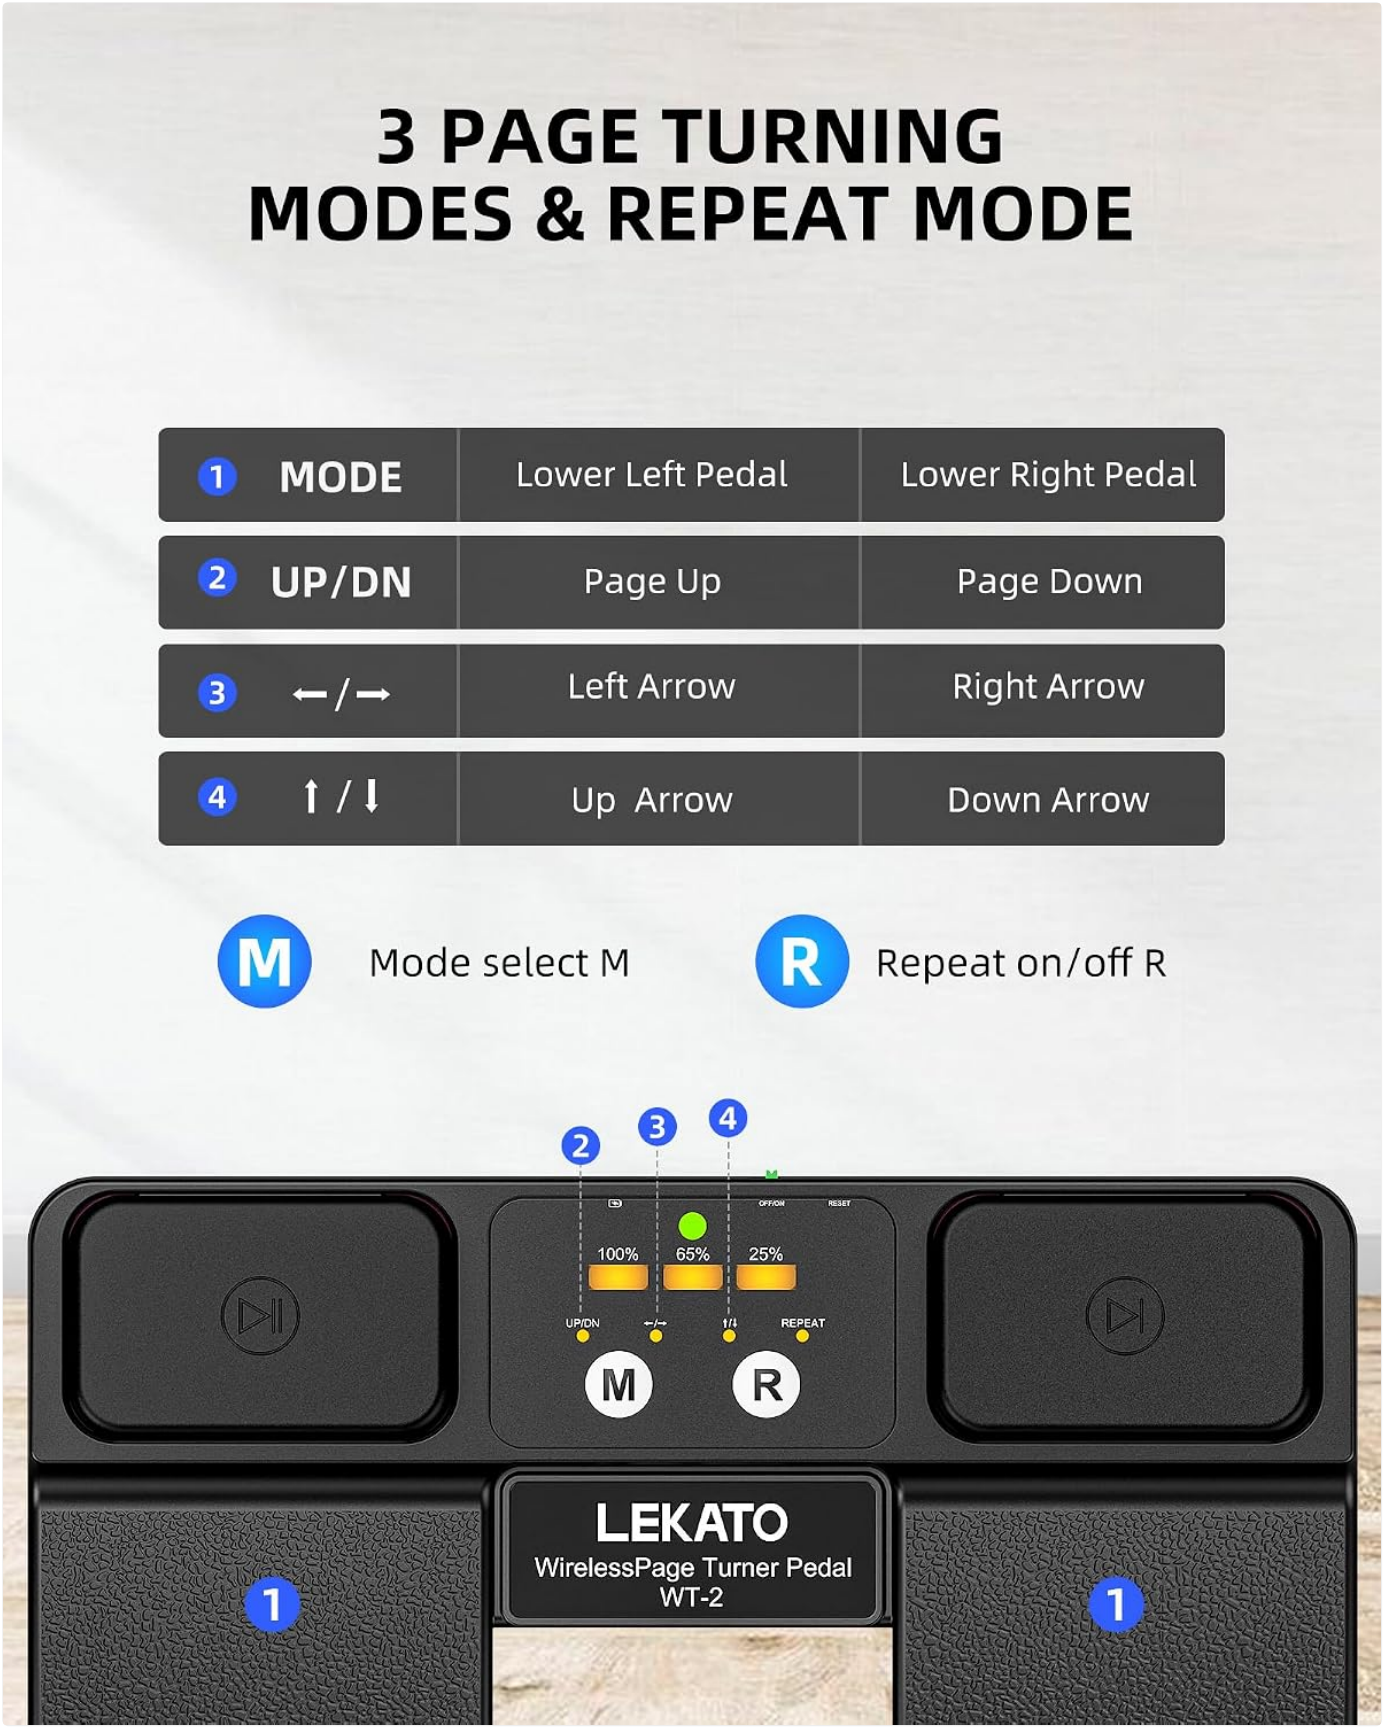


Image 6.1: Overview of page turning modes and repeat function.

7. Multimedia Control

In addition to page turning, the LEKATO WT-2 pedal provides control over background music playback. The dedicated multimedia control buttons located above the main pedals allow you to:

- **Play/Pause:** Start or pause music playback.

- **Next Track:** Skip to the next song in your playlist.

This feature is particularly useful for musicians practicing with backing tracks, allowing seamless control without interrupting their performance.



Image 7.1: Multimedia control buttons for play/pause and next track.

8. Compatibility

The LEKATO WT-2 pedal is designed for wide compatibility across various operating systems and applications:

- **Operating Systems:** Windows, macOS, iOS, Android.
- **Supported Applications:** ForScore, iBooks, PDF, Piascore, OnSong, Goodnotes, Apple Books, Music Reader, and many other applications that respond to keyboard commands (Page Up/Down, Arrow Keys).

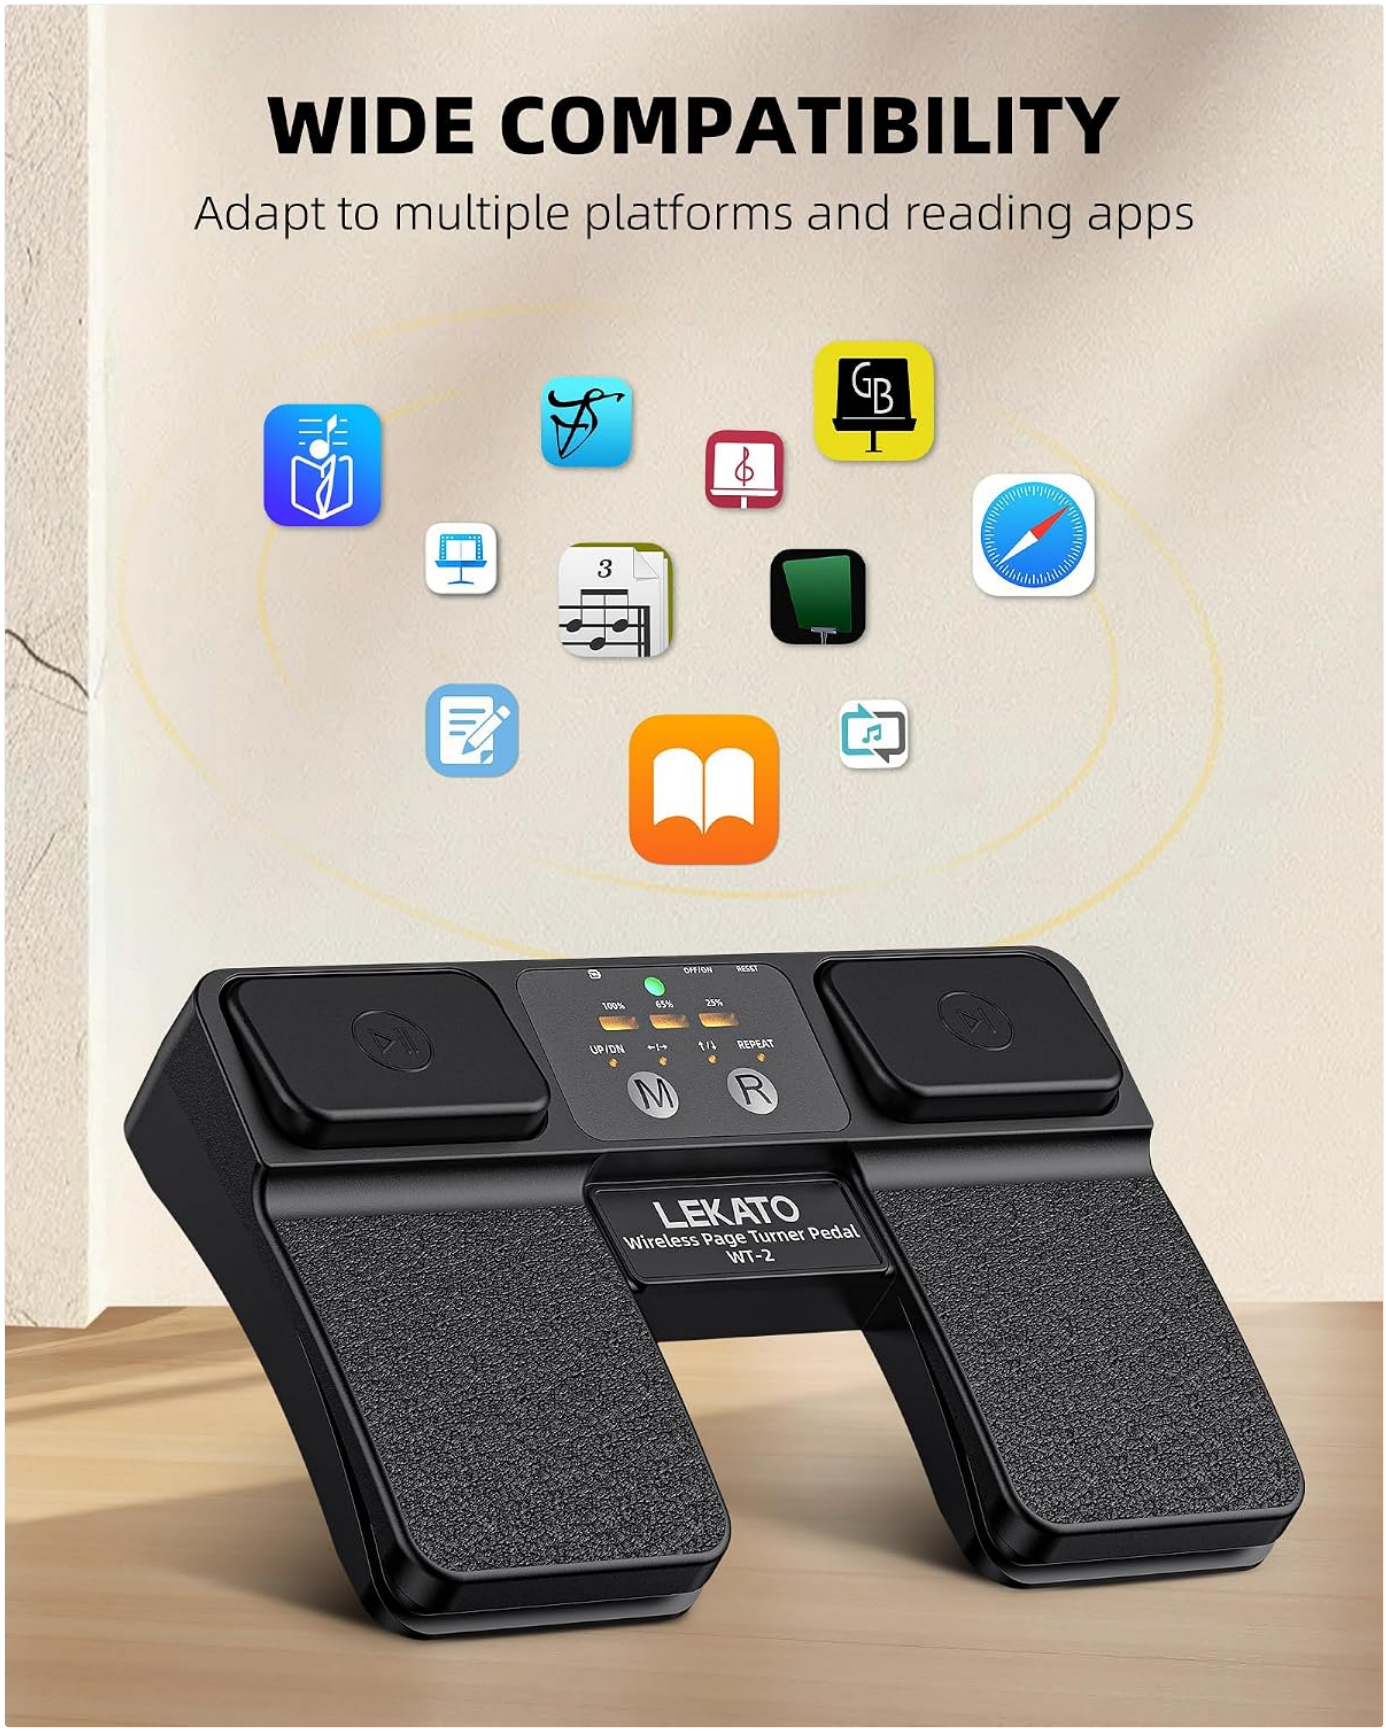


Image 8.1: Wide compatibility with various platforms and reading applications.

9. Maintenance

To ensure the longevity and optimal performance of your LEKATO WT-2 pedal:

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the pedal in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For extended storage, charge the battery to approximately 50% every few months to maintain battery health.
- **Avoid Liquids:** Keep the device away from water and other liquids to prevent damage to internal components.

10. Troubleshooting

- **Device not pairing:**
  - Ensure the pedal is turned on and fully charged.
  - Make sure Bluetooth is enabled on your device.
  - Try turning the pedal off and on again.
  - Restart your device's Bluetooth function or the device itself.
  - Ensure the pedal is within the 10-meter Bluetooth range.
- **Pedal not responding:**
  - Check if the pedal is paired correctly.
  - Verify the battery level.
  - Ensure the application you are using supports keyboard commands (Page Up/Down, Arrow Keys) for navigation. Some applications may require specific settings.
  - Try switching between the different operating modes using the 'M' button.
- **Intermittent connection:**
  - Reduce the distance between the pedal and your device.
  - Avoid obstacles that may interfere with the Bluetooth signal.
  - Ensure there are no other strong wireless signals causing interference.
- **Pedal feels unresponsive or sticky:**
  - Clean the pedal surface with a soft, dry cloth.
  - Ensure no debris is lodged around the pedals.

11. Specifications

Feature	Detail
Brand	LEKATO
Model	WT-2
Connectivity	Bluetooth
Bluetooth Range	Up to 10 meters (33 feet)
Battery Life	48+ hours (rechargeable Lithium Polymer)

Feature	Detail
Charging Port	USB-C
Compatible OS	Windows, macOS, iOS, Android
Dimensions (L x W x H)	22.48 x 15.49 x 4.5 cm (8.85 x 6.10 x 1.77 inches)
Weight	410 g
Number of Buttons	4 (2 main pedals, 2 multimedia buttons)

12. Warranty and Support

Specific warranty information and customer support contact details are not provided within this manual. Please refer to the product packaging or the retailer's website for warranty terms and support options.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question