Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

NBDDIGITAL S100

NBD S100 4K 48MP Digital Camera User Manual

Model: S100 | Brand: NBDDIGITAL

Setup Operating Instructions Maintenance Troubleshooting Specifications Warranty Support

1. Setup

Follow these steps to prepare your NBD S100 Digital Camera for first use.

1.1 Battery Installation and Charging

The camera comes with two 1500mAh Li-Ion batteries. Ensure they are charged before use.

1. Open the battery compartment cover on the bottom of the camera.
2. Insert a charged battery, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. To charge the battery, connect the camera to a power source using the provided USB-C cable. The camera can be charged via USB.



Image: The NBD S100 camera shown with its two rechargeable batteries and the charging dock.

Image: Illustration of the dual battery charging system, highlighting extended battery life.

1.2 Micro SD Card Insertion and Formatting

A 32GB Micro SD card is included. It is recommended to format the card before first use to ensure optimal performance.

1. Locate the Micro SD card slot, typically near the battery compartment.
2. Insert the Micro SD card until it clicks into place.
3. Power on the camera.
4. Navigate to the camera's settings menu.
5. Select the "Format" option for the SD card and confirm. This will erase all data on the card.

Your browser does not support the video tag.

Video: Demonstrates powering on the camera and formatting the SD card. This is a crucial step for initial setup.

1.3 Lens Attachment

The camera comes with detachable wide-angle and macro lenses.

1. Align the desired lens with the camera's lens mount.
2. Gently twist the lens clockwise until it locks into place.
3. To remove, twist counter-clockwise and detach.



Image: The NBD S100 camera displaying its wide-angle and macro lenses, which are detachable for versatile shooting.

1.4 Wrist Strap Attachment

Attach the wrist strap for added security during use.

1. Thread the thin loop of the wrist strap through the strap lug on the camera body.
2. Pass the main strap through the loop and pull tight to secure.

Your browser does not support the video tag.

Video: A user demonstrates attaching the wrist strap to the camera for secure handling.

2. Operating Instructions

2.1 Powering On/Off

Press and hold the power button located on the top of the camera to turn it on or off.

2.2 Switching Between Photo and Video Modes

Press the "MODE" button to toggle between photo and video recording modes. The current mode will be displayed on the screen.

Your browser does not support the video tag.

Video: Demonstrates switching between photo and video modes using the mode button.

2.3 Taking Photos and Recording Videos

In photo mode, press the dedicated "Shoot" button (shutter button) to capture an image. In video mode, press the "Shoot" button to start and stop recording.



Image: A person holding the NBD S100 camera, illustrating its ergonomic design for comfortable shooting.

2.4 Using the 180° Flip Screen

The 3-inch LCD screen can be flipped 180 degrees, making it ideal for vlogging and self-portraits. Adjust the screen to your desired angle to monitor your shots.



Image: The NBD S100 camera with its screen flipped out, suitable for vlogging and self-recording.

2.5 Digital Zoom

The camera features 16X digital zoom. Use the zoom controls (often marked W/T or with arrows) to adjust the magnification of your subject.



Image: Visual demonstration of the camera's digital zoom capabilities at 4X, 8X, and 16X magnification.

2.6 Wide-Angle and Macro Lenses

Utilize the included wide-angle lens for expansive landscape shots or group photos. Attach the macro lens for detailed close-up photography of small objects.



Image: The NBD S100 camera displaying its wide-angle and macro lenses, which are detachable for versatile shooting.

2.7 Built-in Filters

The camera offers various built-in filters to enhance your photos. Rotate the top ring button (dial) to cycle through different filter options, such as black and white or X-ray effects.

Your browser does not support the video tag.

Video: A user demonstrates how to apply different filters by rotating the camera's dial.

2.8 WiFi Connection and App Control

Connect your camera to a smartphone via WiFi for remote control and easy file transfer.

1. Press the "WiFi" button on the camera to activate the wireless hotspot.
2. Scan the QR code displayed on the camera screen with your smartphone to download the companion app.
3. Connect your smartphone to the camera's WiFi network (SSID and password will be displayed).

4. Use the app to control camera functions and transfer media.



Image: The camera screen displaying WiFi connection information and a QR code for app download. Link: https://qr19.cn/BIamDW



Image: Illustrates the camera's WiFi and app control feature, showing a smartphone connected to the camera. Link: https://qr19.cn/BIamDW

2.9 Playback Mode

To review your captured photos and videos, press the "MODE" button until you enter playback mode. Use the navigation buttons to browse through your media.

Your browser does not support the video tag.

Video: Shows how to access and navigate the playback mode to view captured media.

2.10 Advanced Shooting Features

- **Autofocus:** The camera features autofocus to ensure sharp images and videos.
- **Anti-Shake:** Built-in anti-shake technology helps reduce blur from camera movement.
- **Webcam Function:** Connect the camera to a PC via USB and select "PC Camera" mode to use it as a webcam for video calls or live streaming.
- **Multiple Shooting Modes:** Explore modes such as Selfie, Continuous Shooting, Slow-Motion Recordings, Time-Lapse Shooting, Interval Photography, Loop Photography, and Loop Recording to suit various creative needs.



Image: The NBD S100 camera connected to a computer, demonstrating its USB connection for data transfer and webcam functionality.

Image: Highlights the camera's CMOS image sensor, autofocus capability, and anti-shake feature.

Image: A visual guide to the camera's diverse shooting modes, including anti-shake, flash, slow-motion, and time-lapse.



Image: Depicts various photo-centric shooting modes such as continuous shooting, time-lapse, loop photography, and standard photo mode.

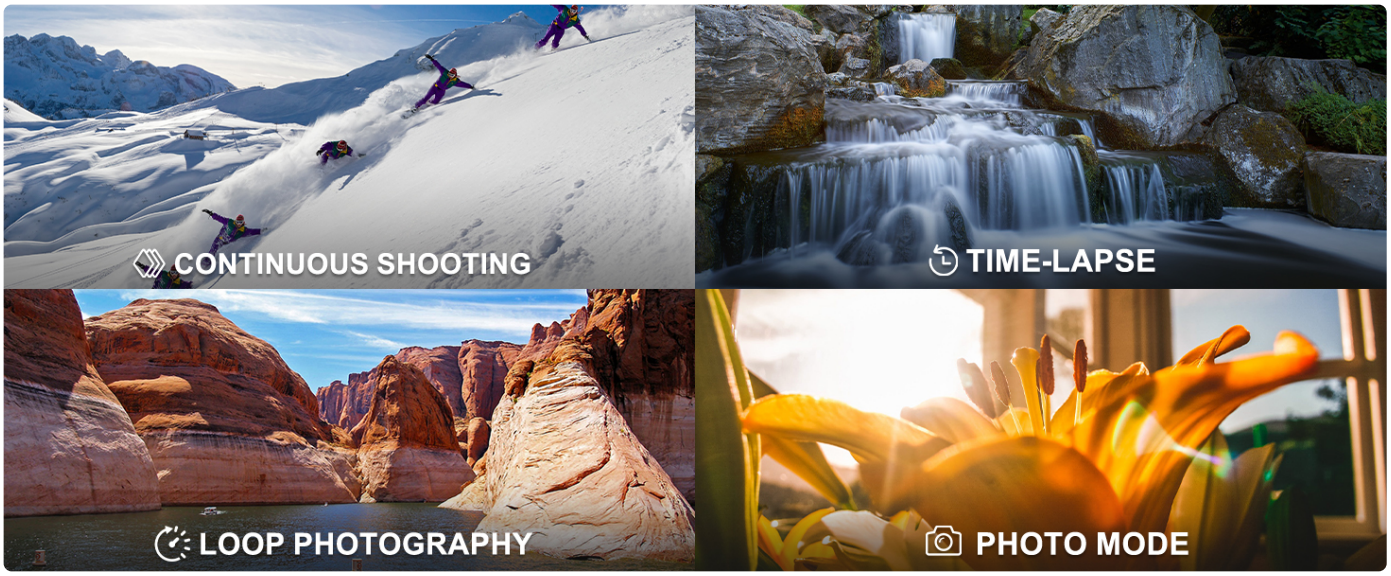


Image: Illustrates video-specific shooting modes including slow-motion recordings, loop recording, time-lapse shooting, and standard video mode.

3. Maintenance

3.1 Cleaning the Camera

Use the provided lens cleaning cloth to gently wipe the lens and screen. For the camera body, use a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.

3.2 Battery Care

To prolong battery life, store batteries in a cool, dry place when not in use. Avoid fully discharging the batteries regularly. Use only the provided charger and batteries.

3.3 SD Card Care

Regularly back up your photos and videos to a computer or external storage. Format the SD card periodically (after backing up) to maintain optimal performance and prevent data corruption.

4. Troubleshooting

4.1 Camera Not Powering On

- Ensure the battery is correctly inserted and fully charged.
- Try using the second included battery.
- Connect the camera to a power source via USB-C to check if it charges.

4.2 SD Card Error

- Ensure the SD card is inserted correctly.
- Try formatting the SD card through the camera's settings menu (note: this will erase all data).
- Test with a different compatible Micro SD card.

4.3 WiFi Connection Issues

- Ensure the WiFi function is enabled on the camera.
- Verify that your smartphone is connected to the camera's hotspot.
- Restart both the camera and your smartphone.
- Ensure the companion app is up to date.

4.4 Poor Image/Video Quality

- Check that the lens is clean and free from smudges.
- Ensure adequate lighting for your shooting environment.
- Verify that the correct shooting mode and settings (e.g., exposure, white balance) are selected.
- Use the anti-shake feature or a tripod for stability.

4.5 Deleting Photos/Videos

To delete media, enter playback mode, select the item you wish to delete, and press the "DEL" button. You will be prompted to confirm deletion of the current item or all items.

Your browser does not support the video tag.

Video: Demonstrates how to delete photos or videos from the camera's memory.

5. Specifications

Feature	Detail
Model Name	S100
Item Model Number	MC-CA-S100-BB-N4-B-2508
Brand	NBDDIGITAL
Photo Sensor Resolution	48 MP
Video Resolution	4K (2160p) at 60 FPS
Digital Zoom	16X

Display Size	3 Inches (180° Flip Screen)
Lens Type	Wide Angle (20-70mm focal length), Macro Lens
Connectivity Technology	USB, Wi-Fi
Storage	32GB Micro SD Card (included)
Battery Type	Lithium Ion (2 x 1500mAh included)
Battery Average Life	50 minutes per battery
Features	Autofocus, Anti-Shake, Webcam Function, Multiple Shooting Modes
Material Type	Plastic
Color	Black

6. Warranty Information

The NBD S100 Digital Camera comes with a**1-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

7. Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official NBDDIGITAL store or contact customer service.

- **NBDDIGITAL Store:** Visit Store
- **Online Resources:** Check the product page for FAQs and additional support materials.

© 2025 NBDDIGITAL. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FNMBTL5J

More documents and user manuals: **https://manuals.plus/**