Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

datonten Universal Garage Door Opener Remote Keychain

datonten Universal Garage Door Opener Remote Keychain Instruction Manual

Models: Compatible with 893MAX, 893LM, 891LM, 371LM, 373LM, 971LM, 973LM

1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your datonten Universal Garage Door Opener Remote Keychain. This remote is designed to offer convenient and secure access to your garage.



Image: Three datonten Universal Garage Door Opener Remote Keychains, black with silver accents and a leather-like keychain strap.

2. Compatibility

The datonten Universal Garage Door Opener Remote Keychain is compatible with specific garage door openers. Please ensure your opener meets the following requirements:

1. Works only with LiftMaster, Chamberlain, and Sears Craftsman brand garage door openers manufactured since 1993.
2. Your opener must have a green, red, orange, purple, or yellow 'Learn' button.

Note: This remote is NOT compatible with garage door openers that use DIP switches.



Image: A visual guide illustrating the compatible 'Learn' button colors (Green, Red, Orange, Purple, Yellow) and their corresponding manufacturing years for LiftMaster, Chamberlain, and Craftsman garage door openers. It also explicitly states incompatibility with Dip Switch openers.

Compatibility Table

Universal Remote Control Compatibility Guide

Garage Door Opener Brand	Color of Program/ leam Button	Year	Frequency	Model
LiftMaster Chamberlain Craftsman	Green	1993-1996	390MHz	81LM 61LM KLIK1U 139.53879
LiftMaster Chamberlain Craftsman	Orange Red	1997-2005	390MHz	91LM 92LM 94LM 96LM 97ILM 972LM 973LM 973W 974LM 950CB 953CB 956CB KLIK1U HBW1255 139.53680/B 139.53681 00953680000 0095 3681000
LiftMaster Chamberlain Craftsman	Purple	2005-2014	315MHz	371LM 373LM 375LM 950CD 953D 956D KLIK1U 139.53753 139.18191
LiftMaster Chamberlain Craftsman	Yellow	2014-Current	310/315/390MHz	891LM 893LM 81LM 61LM 82LM 83LM 84LM 950ESTD 953EV 850CB 853CB 856CB 850CB 853CB 856CB KLIK1U 139.5370 139.53870 139.5379 139.53879 139.53800 139.53637SRT HBW1136

Image: A detailed table outlining universal remote control compatibility, listing Garage Door Opener Brand, Color of Program/Learn Button, Year, Frequency, and Model numbers for LiftMaster, Chamberlain, and Craftsman.

3. Setup and Programming

Follow these steps to program your datonten Universal Garage Door Opener Remote Keychain:

1. **Locate the Learn Button:** Find the 'Learn' button on your garage door opener motor unit. Note its color (Green, Red, Orange, Purple, or Yellow).
2. **Check Remote's Working Mode:** The remote has different working modes indicated by the LED color.
    - Green LED: Model 1 (typically for Green 'Learn' buttons)
    - Red LED: Model 2 (typically for Red, Orange, Purple, Yellow 'Learn' buttons)

    If the remote's current working mode LED color does not match your opener's 'Learn' button color, you need to change the remote's mode:

    - **Step 1 (Change Mode):** Press and hold buttons A and B on the remote simultaneously until the LED flashes, then release.
    - **Step 2 (Select Mode):** Press the button you would like to change working mode. The LED will change to the corresponding color.
3. **Initiate Pairing on Opener:** Press and release the 'Learn' button on your garage door opener motor unit. The 'Learn' LED on the opener will glow steadily for 30 seconds, indicating it is ready to pair.
4. **Program the Remote:** Within 30 seconds of pressing the opener's 'Learn' button, press and hold the desired button on your datonten remote that you wish to use. Release the remote button when the opener unit light blinks or two clicks are heard. This confirms successful pairing.

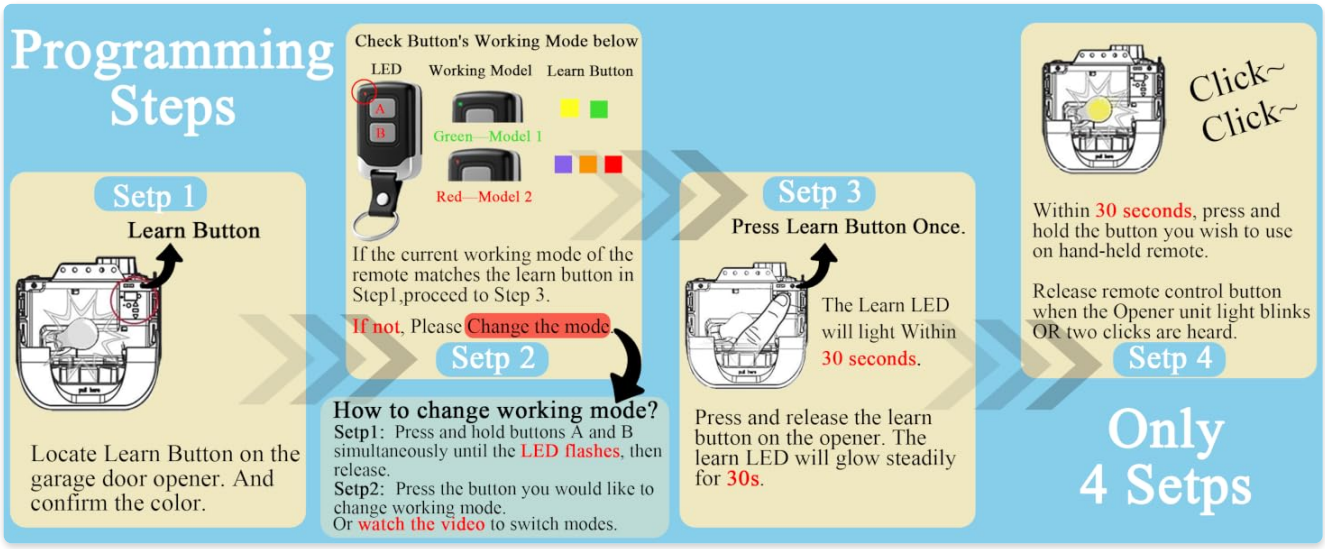


Image: A visual diagram detailing the four steps for programming the datonten garage door opener remote, including locating the learn button, checking/changing the remote's working mode, pressing the learn button on the opener, and programming the remote button.

4. Operating Instructions

Once programmed, operating your datonten remote is straightforward:

- **Opening/Closing:** Press the programmed button on your remote once to open or close your garage door.
- **Range:** The remote offers a long operating range of up to 150 feet, allowing you to open your garage door from a distance.
- **Security:** Equipped with Security+ 2.0 and Rolling Code technology, each signal transmitted is encrypted for enhanced security against unauthorized access.



Image: A car on a driveway, 150 feet from a garage, demonstrating the long-range control of the remote.



Image: An illustration showing a single remote controlling two separate garage doors, highlighting dual door functionality.



Image: A car in front of a modern garage, overlaid with a security shield icon, representing the Security+ 2.0 feature.

5. Key Features

- **Broad Compatibility:** Works with most LiftMaster, Chamberlain, Sears, and Craftsman garage door openers manufactured since 1993, featuring green, red, orange, purple, or yellow 'Learn' buttons.
- **Easy Setup:** Simple, tool-free programming in seconds with clear LED indicators.
- **Compact & Portable:** Lightweight keychain design fits easily in pockets or on keyrings, preventing loss and ensuring convenience.
- **Enhanced Security:** Utilizes Security+ 2.0 and Rolling Code technology to encrypt signals, protecting against unauthorized access.
- **Long Range Performance:** Operates reliably from up to 150 feet away, offering quick access without needing to enter a PIN.



Image: A diagram illustrating the compact dimensions of the remote (3.4 in x 1.2 in x 0.47 in) and showing it as palm-sized, fitting in a cup holder, and light and handy.

6. Specifications

- **Package Dimensions:** 2.95 x 2.48 x 0.65 inches
- **Item Weight:** 2.47 ounces
- **Batteries:** 1 C battery required (included)
- **Color:** Black
- **Max Number of Supported Devices:** 2 (buttons can control two different garage doors)
- **Compatible Devices:** LiftMaster, Chamberlain, Sears Craftsman Garage Door Openers (1993-Current with specific 'Learn' button colors)
- **Special Feature:** Lightweight, Keychain Design

7. Maintenance

Battery Replacement

The remote uses one C battery. When the remote's range decreases significantly or the LED indicator becomes dim, it's time to replace the battery.

1. Carefully open the remote casing.
2. Remove the old C battery.
3. Insert a new C battery, ensuring correct polarity.
4. Close the remote casing securely.

8. Troubleshooting

- **Remote Not Working After Programming:**
  - Ensure the remote's working mode (LED color) matches your garage door opener's 'Learn' button color. Refer to Section 3, Step 2.
  - Verify that the 'Learn' button on your opener was pressed and released correctly, and that you completed the remote programming within the 30-second window.
  - Check the battery in the remote. Replace if necessary.
- **Reduced Operating Range:**
  - Replace the remote's battery.

- Ensure there are no obstructions between the remote and the garage door opener unit.
- Check for sources of radio interference in the area.

- **Remote Accidentally Activates:**
  - Avoid placing the remote in pockets or bags where buttons can be inadvertently pressed by other items.
  - Consider a protective case or a location where the buttons are less likely to be pressed unintentionally.

9. Warranty and Support

For any questions, technical assistance, or warranty information, please contact datonten customer support. Refer to the product packaging or the retailer's website for specific contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FNNJGND8

More documents and user manuals: **https://manuals.plus/**