Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Lefant M210P

Lefant M210P Robot Vacuum Cleaner User Manual

Model: M210P

Introduction

Thank you for choosing the Lefant M210P Robot Vacuum Cleaner. This ultra-thin, anti-tangle robot vacuum is designed to provide efficient and intelligent cleaning for your home. With 2200Pa suction power and a brushless design, it easily reaches under furniture and low beds. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance.

Setup

1. Unboxing and Initial Placement

Carefully remove all components from the packaging. Place the charging base against a wall in an open area, ensuring there are no obstacles within 1 meter (3 feet) to the front and 0.5 meters (1.5 feet) to the sides. Connect the power adapter to the charging base and plug it into a wall outlet.

2. Initial Charging

Place the robot vacuum onto the charging base. Ensure the charging contacts on the robot align with those on the base. The indicator light on the robot will show charging status. Fully charge the robot before its first use, which typically takes 4-5 hours.

3. App Connection

1. Download the Lefant app from your mobile app store.
2. Add your M210P robot vacuum to the app and connect it to a 2.4 GHz Wi-Fi network.
3. Turn the blue power switch on the robot to "I".
4. Press and hold the start button for 6 seconds.
5. Select and connect to the "Smartlife-XXX" Wi-Fi network.
6. Wait for the robot to pair correctly.

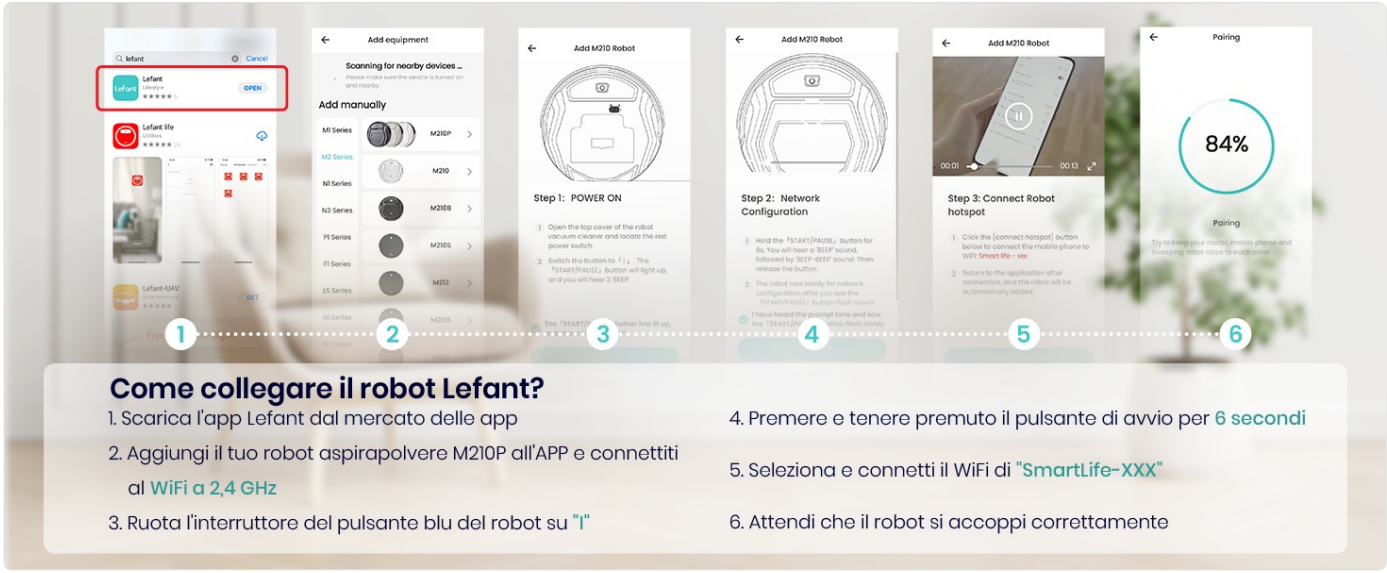


Image: Steps for connecting the Lefant M210P to the mobile application.

Operating Instructions

1. Cleaning Modes

The Lefant M210P offers 6 flexible cleaning modes accessible via the app:

- **Automatic Mode:** General cleaning for entire areas.
- **Random Mode:** Cleans in a random pattern.
- **Spot Mode:** Concentrated cleaning for a specific dirty area.
- **Edge Mode:** Cleans along walls and furniture edges.
- **Scheduled Mode:** Allows you to set specific cleaning times.
- **Manual Control:** Control the robot's movement directly via the app.



Image: Illustration of the different cleaning modes available.

2. Suction Levels

Adjust the suction power to one of 3 levels (up to 2200Pa) to suit different floor types, from hard floors to carpets. The robot can automatically detect carpets and increase suction for deeper cleaning.



Image: Visual representation of adjustable suction levels for various debris.

3. Navigation and Obstacle Avoidance

Equipped with Freemove 3.0 technology and high-precision infrared sensors, the M210P intelligently navigates your home, avoiding collisions with furniture, obstacles, and preventing falls down stairs. Its compact 28cm diameter allows it to clean under beds, sofas, and cabinets effectively.



Image: Robot vacuum demonstrating FreeMove 3.0 navigation.



Image: Comparison of efficient zigzag cleaning path versus random path.

4. Automatic Recharging

When the battery is low, the robot will automatically return to its charging base. Ensure the charging base is always powered on and accessible.



Image: Robot vacuum returning to its charging dock.

5. Voice Control

The Lefant M210P supports voice control through Google Home and Amazon Alexa. Connect your robot to these smart home systems for convenient hands-free operation.



Image: Voice control options with Google Home and Amazon Alexa.

Maintenance

Regular maintenance ensures your Lefant M210P operates efficiently and extends its lifespan.

1. Dustbin Emptying

The 500ml dustbin should be emptied after each cleaning cycle or when full.

1. Press the dustbin release button and pull out the dustbin.
2. Open the dustbin cover and empty its contents into a trash bin.
3. Close the dustbin cover and reinsert it into the robot.



Image: Dustbin capacity and removal.

2. Filter Cleaning and Replacement

The HEPA filter should be cleaned regularly and replaced every 3-6 months, depending on usage.

1. Remove the dustbin.
2. Take out the HEPA filter and primary filter.
3. Tap the filters gently to remove dust. Do not wash HEPA filters with water.
4. Replace the filters if they are heavily soiled or damaged.



Image: Replacement HEPA filters.

3. Side Brush Cleaning

Inspect and clean the side brushes regularly to remove tangled hair or debris. Replace them if they are worn out.

4. Anti-Tangle Design

The Lefant M210P features a brushless suction port design, which significantly reduces hair tangles, especially beneficial for pet owners. This design minimizes the need for frequent brush cleaning.



Image: Tangle-free suction port design comparison.

Troubleshooting

If you encounter issues with your Lefant M210P, refer to the following common solutions:

Problem	Possible Cause	Solution
Robot does not turn on.	Battery is low or depleted; power switch is off.	Ensure the power switch is on. Place the robot on the charging base to charge.
Robot does not charge.	Charging contacts are dirty; charging base is not powered; robot not properly aligned.	Clean charging contacts on both robot and base. Ensure charging base is plugged in. Realign robot on base.

Problem	Possible Cause	Solution
Robot gets stuck frequently.	Too many obstacles; robot is caught on cables or rugs.	Clear the cleaning area of excessive clutter, cables, and thick rugs.
Poor cleaning performance.	Dustbin is full; filters are clogged; side brushes are worn.	Empty the dustbin. Clean or replace filters. Clean or replace side brushes.
Robot cannot connect to Wi-Fi/App.	Incorrect Wi-Fi password; robot is too far from router; only 2.4GHz Wi-Fi supported.	Verify Wi-Fi password. Move robot closer to router. Ensure your Wi-Fi is 2.4GHz. Follow app connection steps carefully.

Specifications

Brand	Lefant
Model Name	M210P
Dimensions (L x W x H)	28L x 28l x 8H cm
Suction Power	Up to 2200Pa
Dustbin Capacity	500 ml
Battery Life	120 Minutes
Battery Type	Lithium Ion
Filter Type	HEPA
Control Method	App, Voice (Alexa, Google Home)
Noise Level	55 Decibels
Recommended Surfaces	Hard floor, Carpet, Parquet, Tiles
Special Features	Precise Gyroscopic Navigation, High Dust Capacity, Efficient Filtration, Slim Design, Extended Autonomy

Warranty and Support

Warranty Information

Lefant products typically come with a manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official Lefant website for detailed warranty terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting not covered in this manual, or general inquiries, please contact Lefant customer support.

- **Online Support:** Visit the official Lefant website for FAQs, support articles, and contact forms.
- **Email Support:** Refer to your product packaging or the official website for the customer service email address.
- **Amazon Seller:** For purchase-related issues, you may contact the seller "Lefant Robotics" directly through your Amazon order history.

© 2023 Lefant. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FNWFJ8KK

More documents and user manuals: **https://manuals.plus/**