Wobble WB43UDAGU2875D25

Wobble K Series 43-inch 4K UHD Smart LED TV User Manual

Model: WB43UDAGU2875D25

1. Introduction

This manual provides essential information for the safe and efficient operation of your Wobble K Series 43-inch 4K UHD Smart LED TV. Please read these instructions thoroughly before using the product and retain them for future reference. The Wobble K Series Smart LED TV features a 43-inch 4K Ultra HD display, Google TV 5.0 operating system, and integrated smart functionalities for an enhanced viewing experience.

2. What's in the Box

Carefully unpack your TV and ensure all items listed below are present and undamaged. If any items are missing or damaged, contact customer support immediately.



Figure 2.1: Contents of the Wobble K Series TV packaging.
The image displays the contents of the TV box: Smart Television, Stand (2N), Screws (4N), Remote Control (1N), AAA Batteries (2N), User Manual (1N), and Wall Mount Bracket (1N).

- Smart Television (1N)
- Stand (2N)
- Screws (4N) for stand installation
- Remote Control (1N)
- AAA Batteries (2N)
- User Manual (1N)
- Wall Mount Bracket (1N)
- Power Cable (1N)

3. Physical Overview

3.1. TV Dimensions

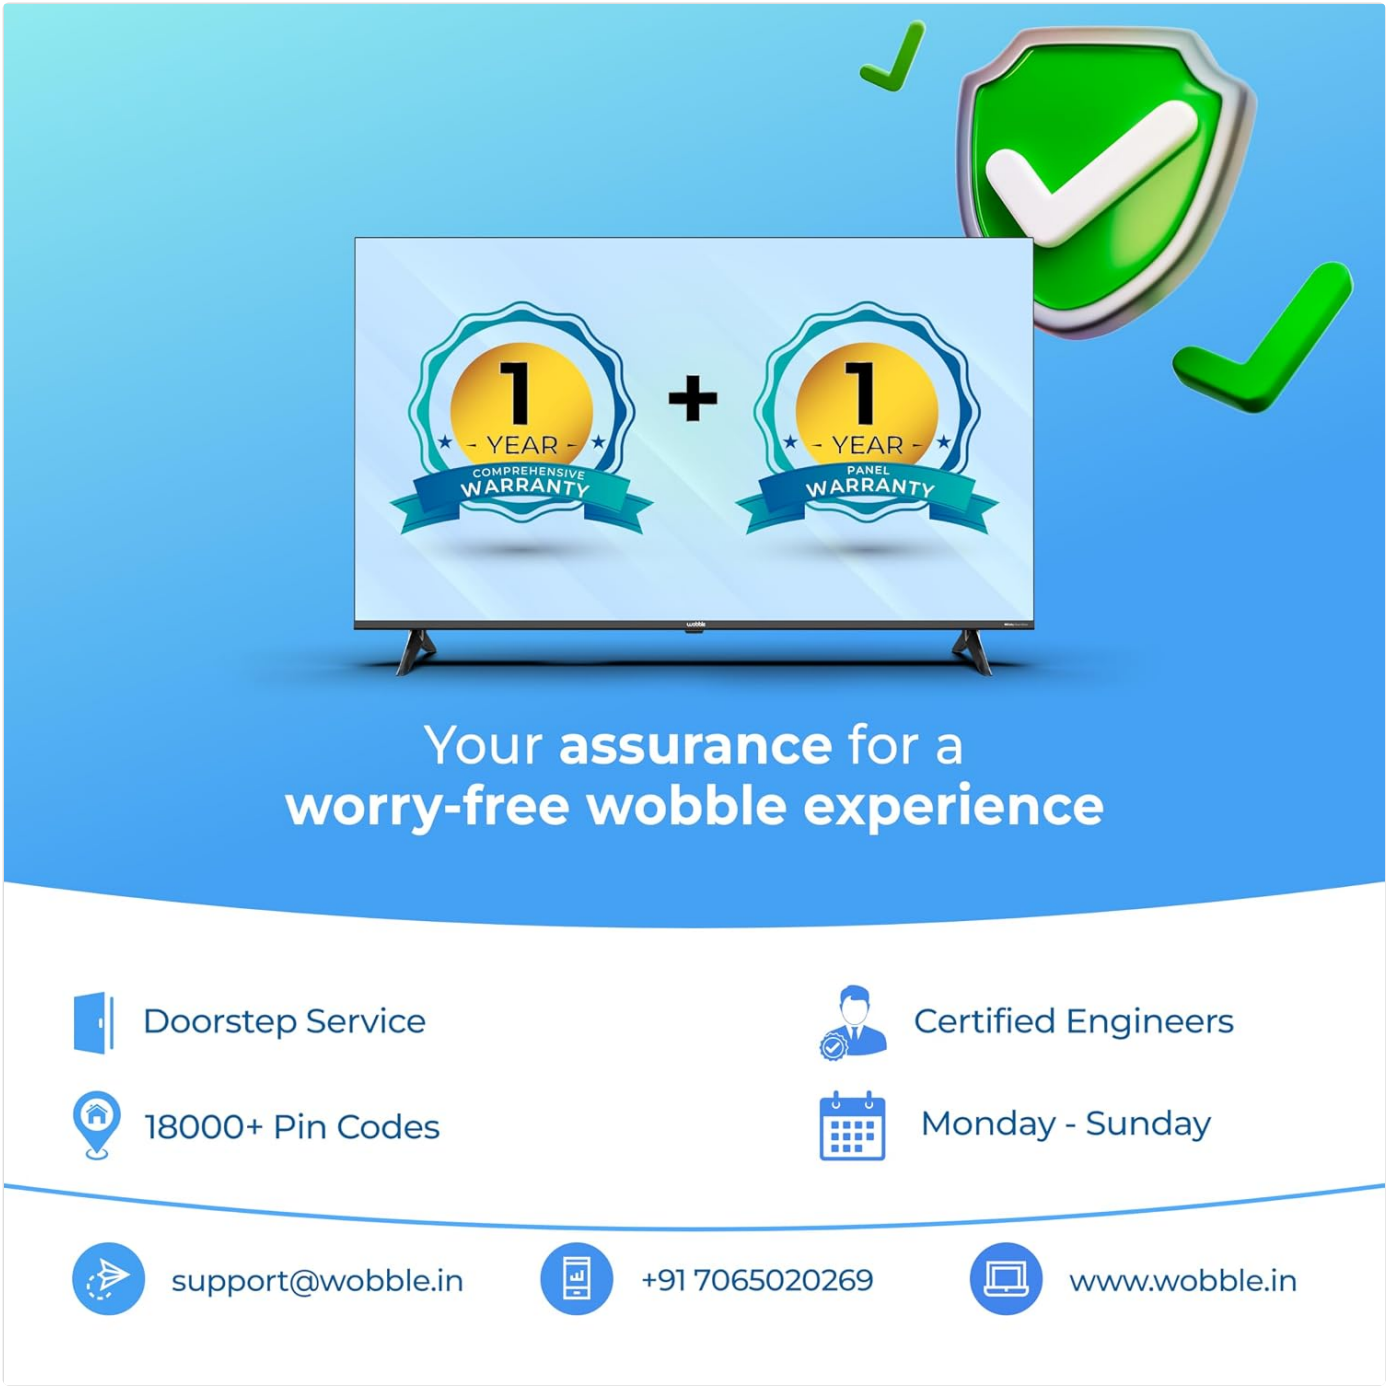


Figure 3.1: Wobble K Series 43-inch TV Dimensions.
The diagram illustrates the TV's dimensions: Length 95.74 cm, Height (without stand) 56.74 cm, Height (with stand) 62.27 cm, Width (without stand) 8.66 cm, Width (with stand) 22.45 cm. Screen size is 108 cm / 43 inches.

- **Screen Size:** 43 inches (108 cm)
- **Product Dimensions (D x W x H):** 22.5D x 95.7W x 62.3H Centimeters (with stand)
- **Weight:** 6.51 Kilograms

3.2. Ports and Connectivity

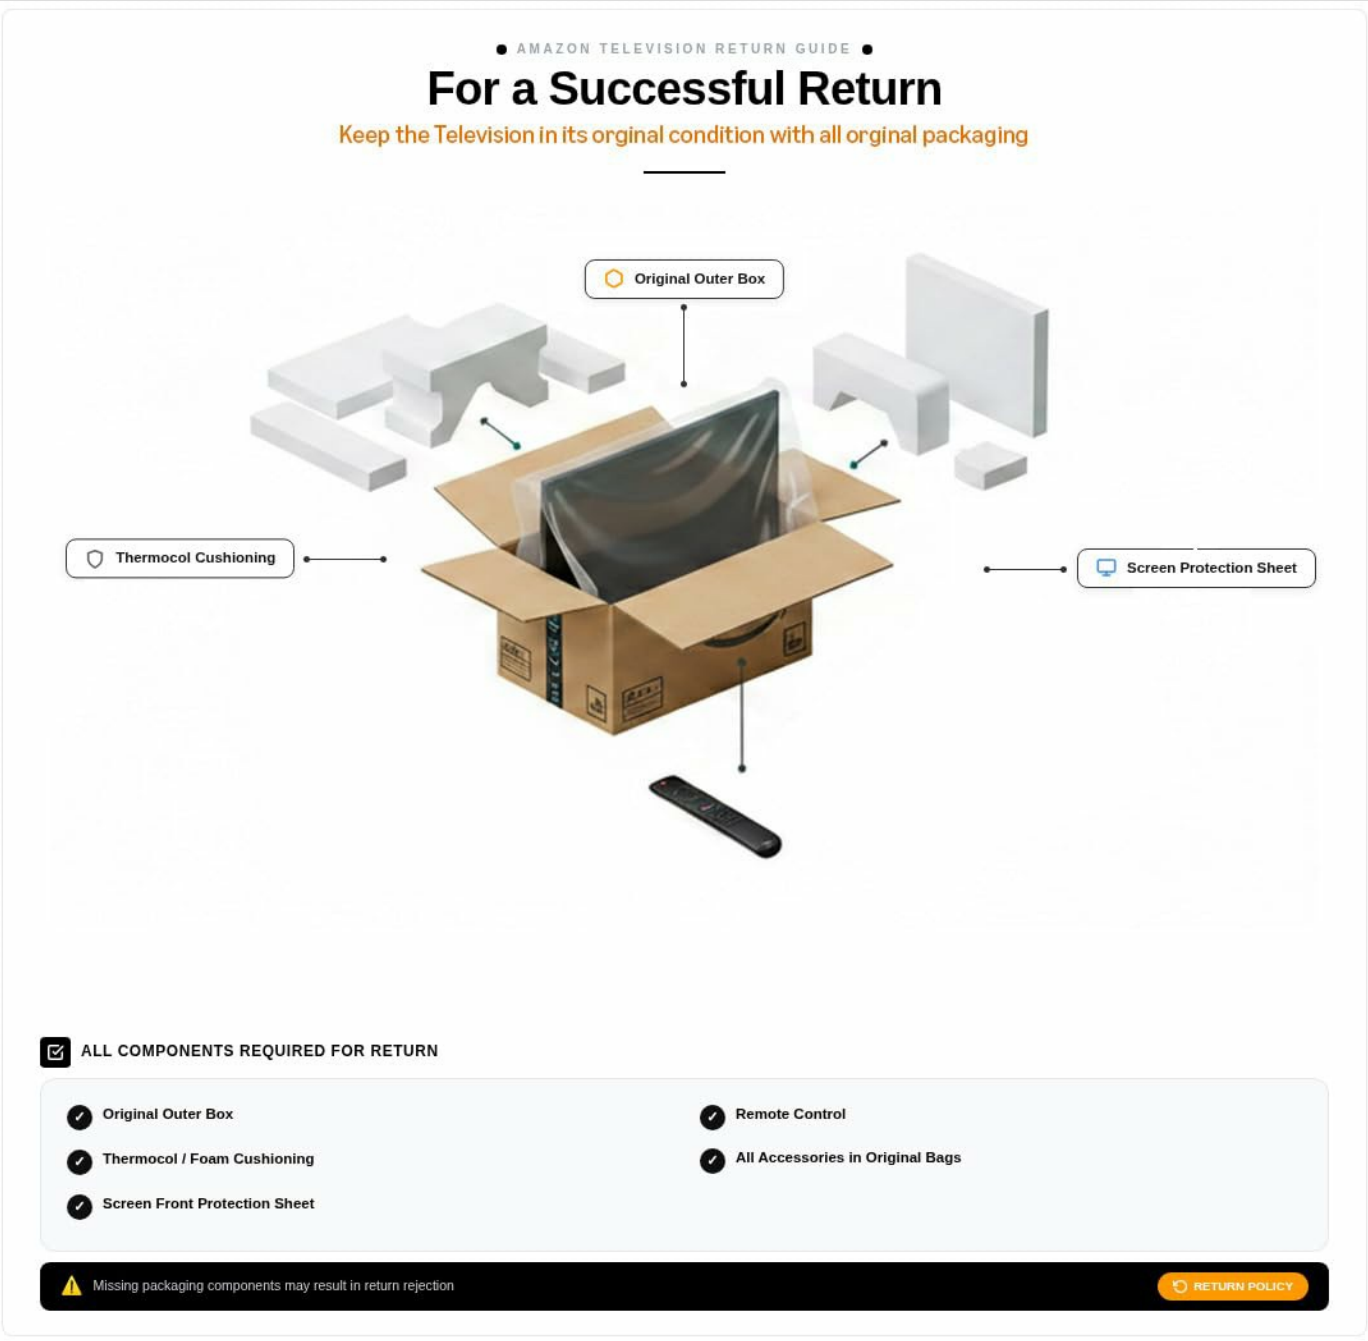


Figure 3.2: Multi-Ports on the Wobble K Series TV.
This image shows the various input and output ports available on the TV, including LAN, USB 2.0 x 1, Optical, AV In, Antenna, Satellite, HDMI 2.1 x 3, and USB 3.0 x 1.

- **HDMI Ports:** 3 (HDMI 2.1 compatible) for connecting set-top boxes, gaming consoles, laptops, etc.
- **USB Ports:** 2 (USB 2.0 x 1, USB 3.0 x 1) for connecting hard drives or other USB devices.
- **Network:** Ethernet (LAN) port, Dual-band Wi-Fi.
- **Wireless:** 2-Way Bluetooth 5.0.
- **Audio/Video:** AV input, Optical audio output, Headphone output.
- **Antenna/Satellite:** RF input for antenna, Satellite input.

4. Setup

4.1. Stand Installation

1. Place the TV screen-down on a soft, flat surface to prevent scratches.
2. Align the TV stands with the corresponding slots on the bottom of the TV.
3. Secure each stand with the provided screws. Ensure they are tightened firmly.

4.2. Wall Mounting

The TV supports VESA mount standard 200 x 200 mm. Use the provided wall mount bracket or a compatible VESA wall mount kit (sold separately) for installation. Professional installation is recommended for wall mounting.

1. Attach the wall mount brackets to the back of the TV using appropriate screws.
2. Mount the wall plate securely to a sturdy wall structure according to the wall mount kit instructions.
3. Carefully lift and attach the TV to the wall plate.

4.3. Connecting Power

1. Connect the power cable to the TV's power input port.
2. Plug the other end of the power cable into a suitable electrical outlet (100 Volts).

4.4. Initial Setup (Google TV)

1. Press the power button on the remote control to turn on the TV.
2. Follow the on-screen instructions to select your language, region, and connect to a Wi-Fi network.
3. Sign in with your Google account to access Google TV features, including the Google Play Store, personalized recommendations, and Google Assistant.
4. Complete the guided setup for channel scanning and other preferences.

5. Operating the TV

5.1. Remote Control

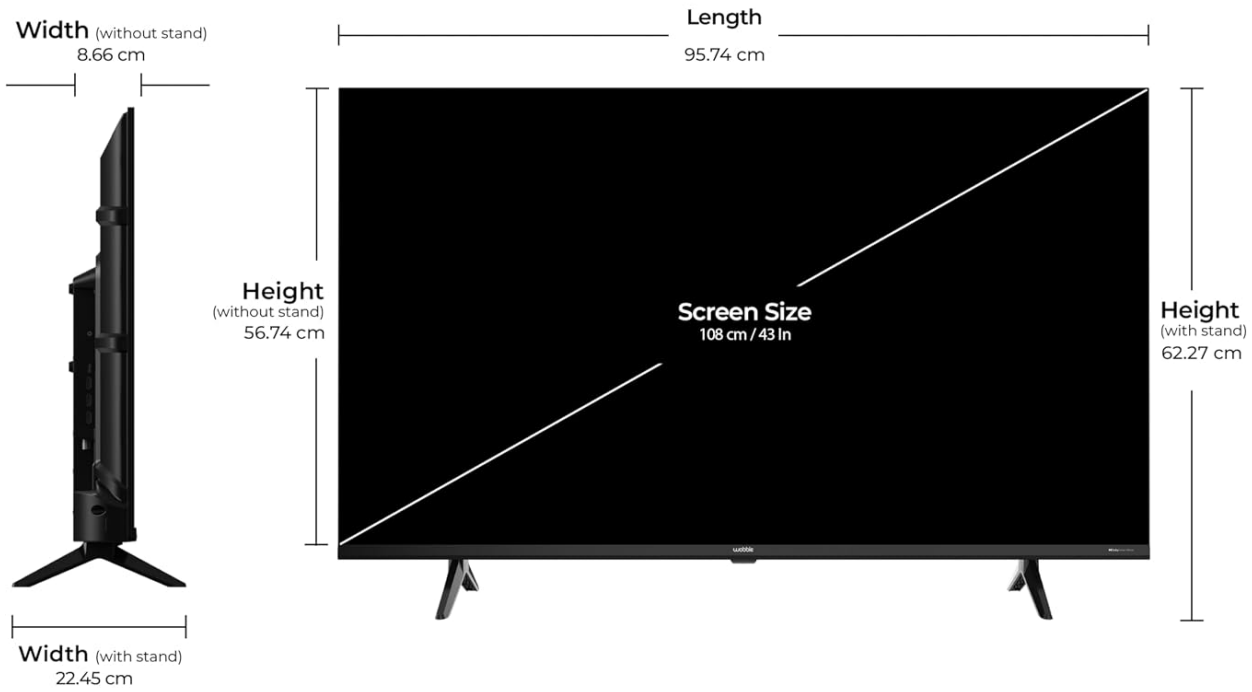


Figure 5.1: Wobble Smart TV Remote Control.

The remote control features dedicated keys for popular streaming services like Netflix, Prime Video, YouTube, and Disney+Hotstar, along with standard navigation and volume controls. It supports voice commands via Google Assistant.

Insert the two AAA batteries into the remote control, observing polarity. The remote uses IR and Bluetooth technology. For voice commands, ensure the remote is paired via Bluetooth.

- **Power Button:** Turns the TV on/off.
- **Google Assistant Button:** Activates voice control.
- **Navigation Pad (OK button):** For menu navigation and selection.
- **Back/Home Buttons:** Return to previous screen or home screen.
- **Volume/Channel Buttons:** Adjust volume and change channels.
- **Dedicated OTT Keys:** Quick access to Netflix, Prime Video, YouTube, Disney+Hotstar.

5.2. Google TV Interface

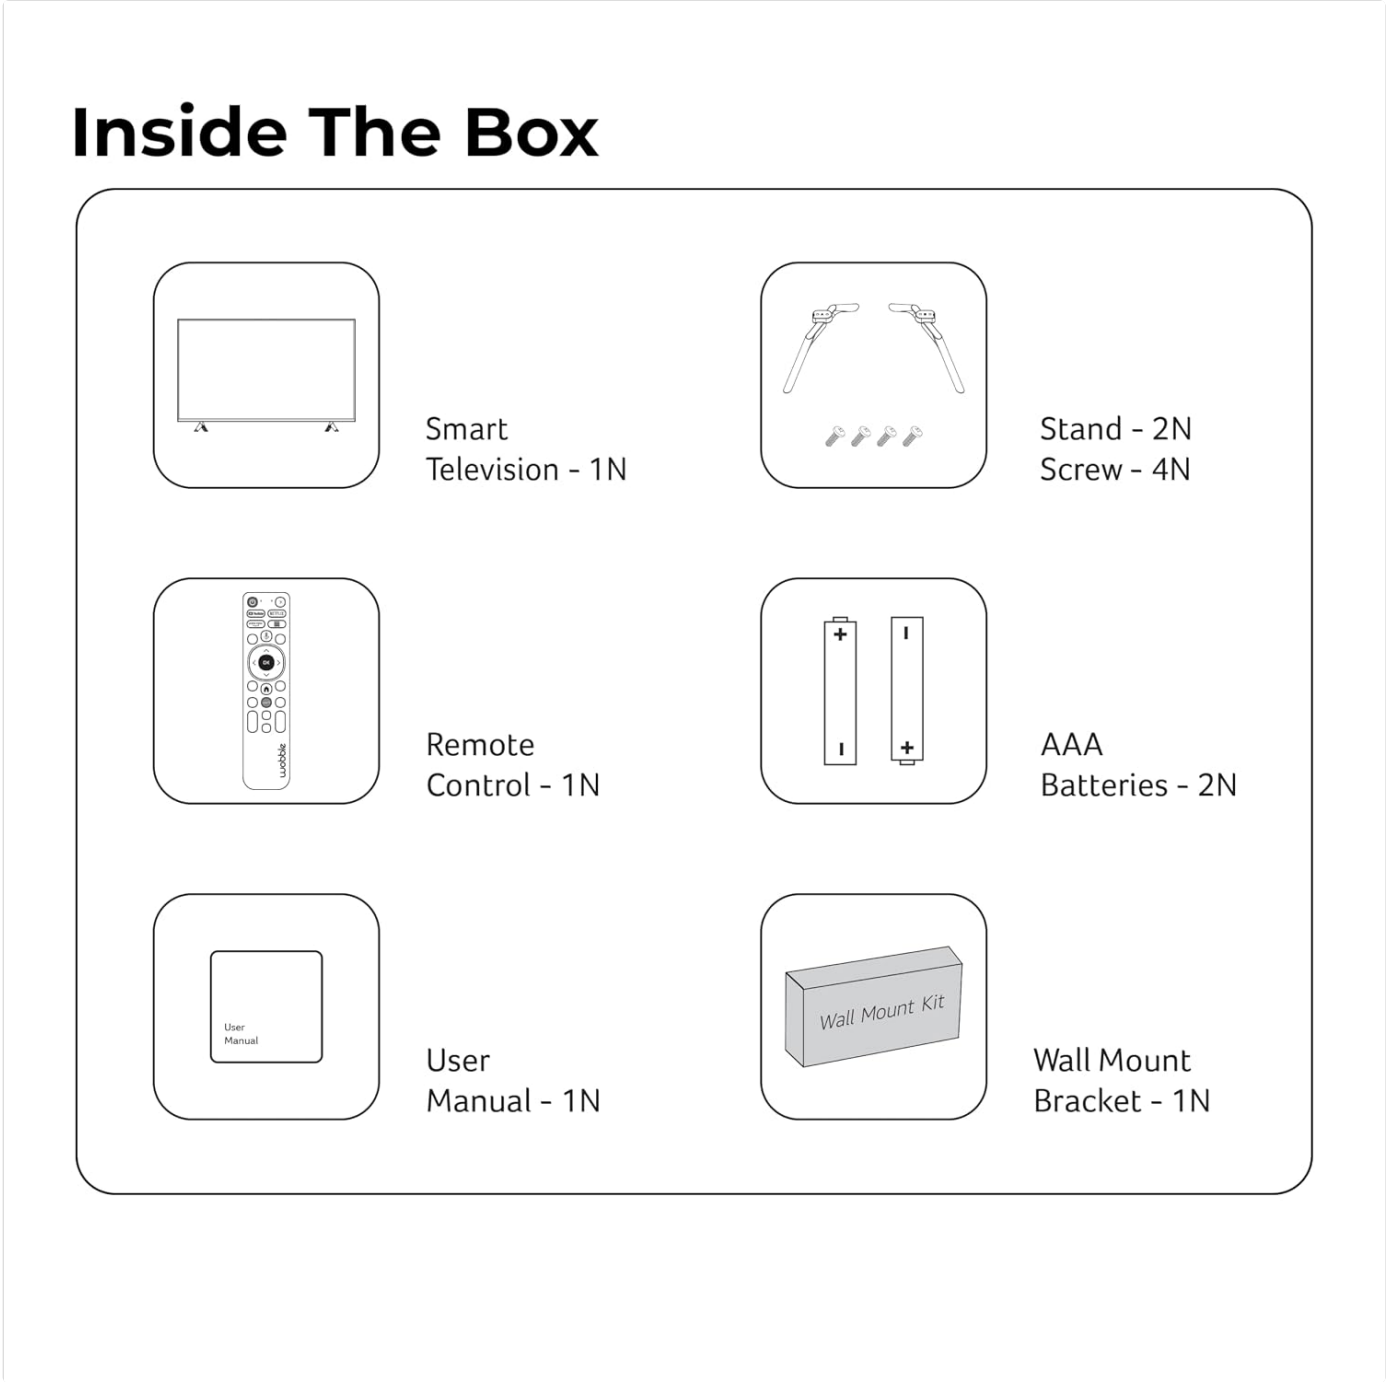


Figure 5.2: Google TV Interface.
The Google TV interface provides personalized content recommendations, access to over 10,000 apps from the Google Play Store, and easy navigation through movies, shows, and apps.

The Google TV 5.0 operating system provides a personalized home screen with content recommendations from your subscriptions. Use the navigation pad on the remote to browse and select content.

- **Storage Content Recommendations:** Get suggestions based on your viewing habits.
- **Casting Options:** Supports Googlecast, Fastcast, and Meeting mode for screen mirroring.
- **Watchlist:** Add movies and shows to watch later.
- **Profiles:** Create Personal and Kids Profiles for tailored experiences.
- **Google Assistant:** Use voice commands for search, control, and information.

5.3. Connecting External Devices

Use the various ports on the TV to connect external devices:

- **HDMI:** Connect set-top boxes, Blu-ray players, gaming consoles, or PCs. Select the corresponding HDMI input from

the TV's source menu.

- **USB:** Plug in USB drives for media playback (photos, videos, music).
- **Bluetooth:** Pair Bluetooth headphones, soundbars, or game controllers. Go to TV Settings > Remotes & Accessories > Add accessory.
- **AV:** Connect older devices using composite video and stereo audio cables.

5.4. Picture and Sound Settings

Access the TV settings menu to customize picture and sound preferences:

- **Picture Modes:** Standard, Vivid, Sport, Movie, Game, User. Adjust brightness, contrast, color, and sharpness.
- **Sound Modes:** Standard, Music, Movie, Sport, User. Features include Dolby Atmos and 5 Preset Smart Equalizer.
- **Display Features:** 4K Ultra HD, HDR10, Super Brightness, Black Level Augmentation, 178-degree Wide viewing angle, MEMC (Motion Estimation, Motion Compensation) for smoother motion.
- **Audio Output:** PRO Tuned Speakers with 30 Watts Output and High Fidelity.

6. Maintenance

6.1. Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-cleaning solution. Do not spray liquid directly onto the screen.
- **Body:** Wipe the TV frame and stand with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure the ventilation openings on the back of the TV are not blocked to prevent overheating.

6.2. Software Updates

Your TV may receive automatic software updates via the internet. Ensure your TV is connected to a stable internet connection to receive these updates, which can improve performance and add new features. You can also manually check for updates in the TV settings.

6.3. Safety Guidelines

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Keep the TV away from direct sunlight and heat sources.
- Ensure proper ventilation around the TV.
- Unplug the TV during lightning storms or when unused for long periods.

7. Troubleshooting

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution

Problem	Possible Solution
No Power	◦ Check if the power cable is securely plugged into the TV and the wall outlet. ◦ Ensure the wall outlet is functioning by plugging in another device. ◦ Try pressing the power button on the TV itself, not just the remote.
No Picture, but Sound is Present	◦ Check the input source. Press the "Source" button on your remote and select the correct input (e.g., HDMI 1, AV). ◦ Ensure all cables (HDMI, AV) are securely connected to both the TV and the external device. ◦ Try restarting the connected device.
No Sound, but Picture is Present	◦ Increase the volume on the TV and the connected device. ◦ Check if the TV is muted. ◦ Verify audio output settings in the TV menu (e.g., ensure internal speakers are selected if not using an external sound system). ◦ If using external speakers, check their power and connections.
Remote Control Not Working	◦ Replace the batteries with new AAA batteries. ◦ Ensure there are no obstructions between the remote and the TV's IR sensor. ◦ If using voice control, ensure the remote is paired via Bluetooth (check TV settings).
Wi-Fi Connectivity Issues	◦ Ensure your Wi-Fi router is on and working correctly. ◦ Restart your router and the TV. ◦ Move the TV closer to the router or consider a Wi-Fi extender if the signal is weak. ◦ Check Wi-Fi settings on the TV to ensure the correct network is selected and the password is entered correctly.
Slow Performance / Apps Crashing	◦ Close unused applications running in the background. ◦ Clear cache for problematic apps in TV settings. ◦ Ensure the TV's software is up to date. ◦ If issues persist, consider a factory reset (*Note: This will erase all personal data and settings*).

8. Specifications

Feature	Detail

Feature	Detail
Model Name	K Series
Model Number	WB43UDAGU2875D25
Screen Size	43 Inches (108 cm)
Display Technology	LED
Resolution	4K Ultra HD (3840 x 2160)
Refresh Rate	60 Hertz
Viewing Angle	178 Degrees
HDR Format Supported	HDR10
Motion Enhancement	MEMC, ALLM
Operating System	Google TV 5.0
Processor	Quad Core Processor (A55+A72 Multi Engine Setup with AI)
RAM	2GB
Storage	32 GB
Wi-Fi	Dual band
Bluetooth	2-Way Bluetooth 5.0
HDMI Ports	3 (HDMI 2.1)
USB Ports	2 (USB 2.0 x 1, USB 3.0 x 1)
Audio Output	30 Watts, High Fidelity Speakers
Sound Technology	Dolby Atmos, 5 Preset Smart Equalizer
Power Consumption	108 Watts
Voltage	100 Volts
VESA Mount Standard	200 x 200 mm
Included Components	Power Cable, Remote Control, Stand, Screws, AAA Batteries, User Manual, Wall Mount Bracket

9. Warranty Information



Figure 9.1: Wobble TV Warranty Details.
The image highlights the warranty coverage: 1 Year Comprehensive Warranty and an additional 1 Year Warranty on the panel.

Your Wobble K Series Smart LED TV comes with a comprehensive warranty to ensure your peace of mind:

- **1 Year Comprehensive Warranty:** Covers manufacturing defects and issues with the TV for one year from the date of purchase.
- **1 Year Warranty on Panel:** An additional one-year warranty specifically for the display panel, which commences after the comprehensive warranty period ends.

The warranty is provided by the manufacturer. Please retain your purchase receipt for warranty claims.

10. Customer Support

For any queries, technical assistance, or warranty claims, please contact Wobble customer support:

- **Importer Contact Information:** Indkal Technologies Pvt Ltd, Customer Care, C-102, Hinduja Lake Front Estate, Hulimavu, Bengaluru, Karnataka, India, Pin-560076
- **Website:** www.wobble.in
- **E-mail:** support@wobble.in
- **Phone:** +91-70650 2026
- **Doorstep Service:** Available in 18000+ Pin Codes with Certified Engineers (Monday - Sunday).

© 2025 Wobble. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question