FLEXISPOT PN1WG-4P79

FLEXISPOT 79"x32" Height Adjustable Commercial Office Standing Desk

Model: PN1WG-4P79

Product Overview

The FLEXISPOT 79"x32" Height Adjustable Commercial Office Standing Desk is designed to provide a versatile and ergonomic workspace. This desk features a motorized lift system for seamless height adjustments, an anti-collision system for safety, and integrated cable management solutions.



Image: The FLEXISPOT 79"x32" Height Adjustable Commercial Office Standing Desk in a typical office setting.

Quality Assurance

FLEXISPOT is committed to producing high-quality office furniture. The following video provides insight into the manufacturing process and quality control measures.

Your browser does not support the video tag.

Video: An inside look at the Flexispot factory, showcasing the manufacturing process and commitment to product quality.

Setup Instructions

Unpacking and Preparation

Upon delivery, verify all packages have arrived. Due to the size and weight of the components, boxes may ship and arrive separately. It is recommended to have two people for assembly.



Image: Illustration showing that desk components may arrive in multiple packages.

Assembly Steps

1. Carefully unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Assemble the desk frame according to the included graphical instructions. Ensure all screws are tightened securely.
3. Attach the desktop to the assembled frame. Note: Some users have reported that certain holes for securing the crossbeam may not be pre-drilled. Exercise caution and use appropriate tools if drilling is required to avoid

damaging the tabletop.

4. Connect all motor and control panel cables as indicated in the diagram. Ensure connections are firm.
5. Plug the desk into a grounded power outlet.

Cable Management

The desk includes features for organizing cables to maintain a tidy workspace. Utilize the integrated cable management tray and cable ties to route and secure power and data cables.

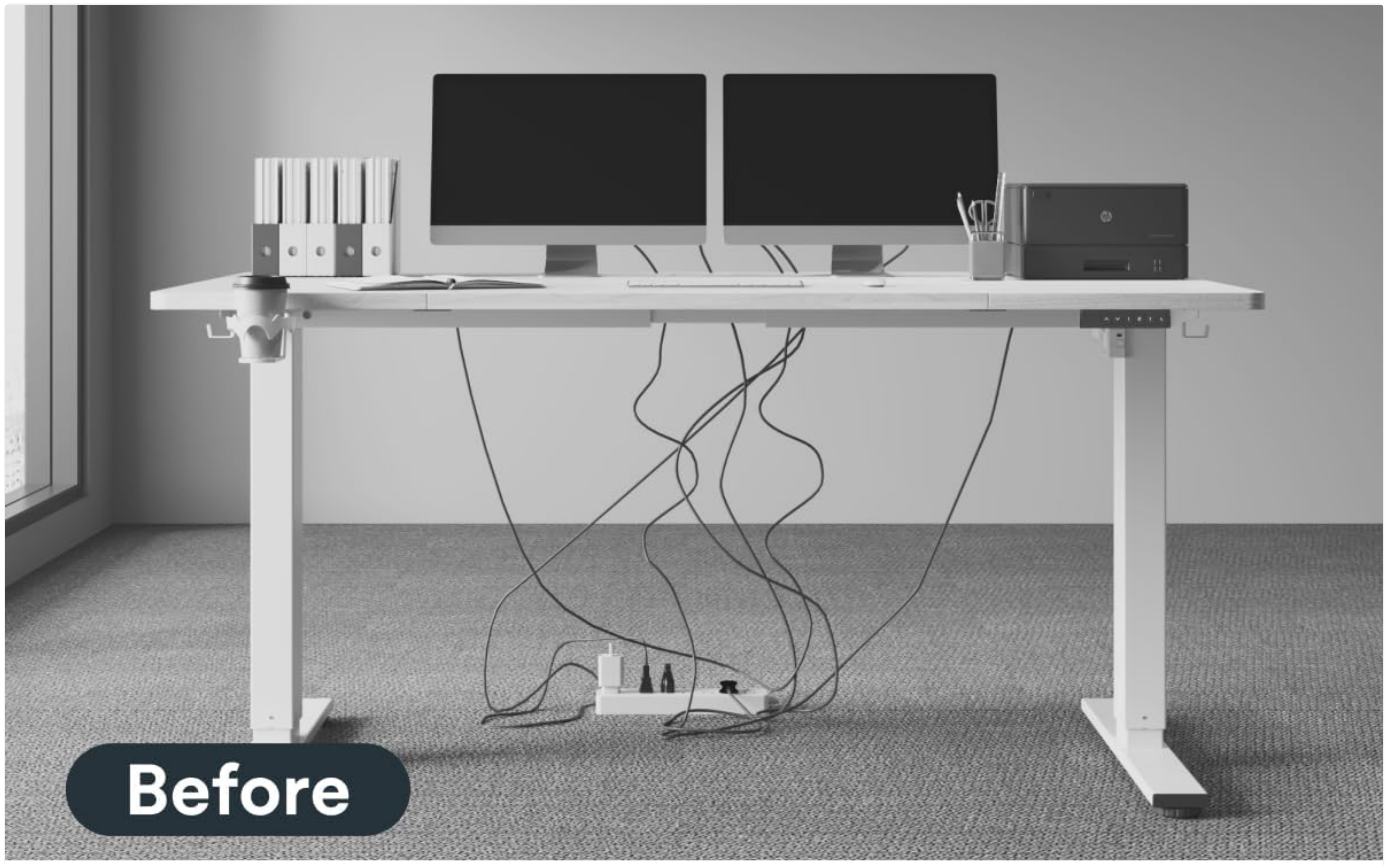




Image: A visual comparison demonstrating effective cable management for a clean workspace.

Operating Instructions

Height Adjustment

The desk features a single-motor lift system that allows for smooth height adjustments from 28.94 inches to 46.46 inches. Use the control panel to raise or lower the desk to your desired ergonomic position.



Image: The desk demonstrating its flexible height adjustment range.

Control Panel Functions

The multifunctional control panel provides precise control over the desk's height and allows for saving preferred positions.



Image: The control panel with up/down arrows, digital display, and four programmable memory presets.

- **Up/Down Arrows:** Press and hold to continuously adjust the desk height. Release to stop.
- **Digital Display:** Shows the current desk height in inches.
- **Memory Presets (1, 2, 3, 4):** To save a height, adjust the desk to the desired position, then press the 'M' button (if present, or a similar 'Set' button) followed by the desired number button (1-4). To recall a saved height, simply press the corresponding number button.

Smart Anti-Collision System

The desk is equipped with an anti-collision system. If the desk encounters an obstruction while adjusting height, it will automatically reverse direction to prevent damage to the desk or objects.

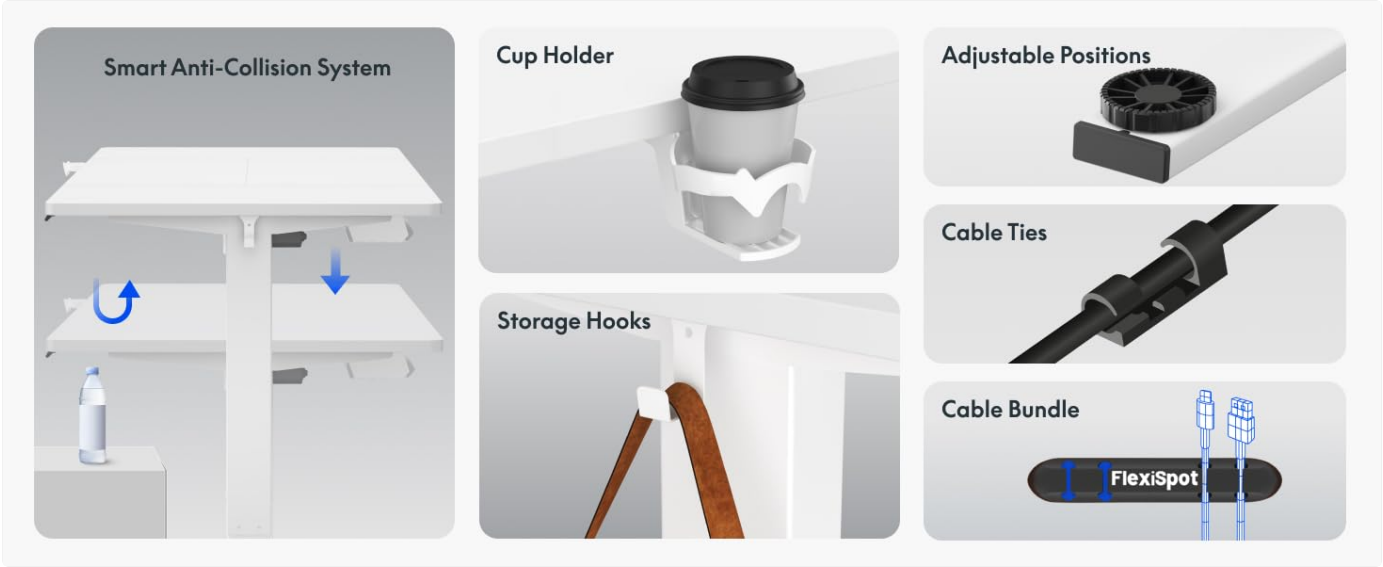


Image: Visual representation of the anti-collision system and other integrated features like the cup holder and cable management accessories.

Maintenance

Cleaning

- Wipe the desktop surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- For the frame and legs, use a dry or slightly damp cloth to remove dust and dirt.

Regular Checks

- Periodically check all screws and bolts to ensure they remain tight. Retighten if necessary.
- Inspect all cables for any signs of wear or damage. Ensure they are securely connected.

Troubleshooting

Common Issues and Solutions

Problem	Possible Cause	Solution
Desk does not move / Motor not working	Power cable disconnected, control panel cable loose, motor overload.	Check power connection to wall outlet and desk. Ensure all control panel and motor cables are securely plugged in. Unplug the desk for 10 minutes, then plug back in to reset.
Desk moves unevenly or stops abruptly	Overload, obstruction, uneven weight distribution.	Reduce weight on the desk (maximum load capacity is 154 lbs). Check for obstructions under or around the desk. Ensure weight is evenly distributed on the desktop.

Problem	Possible Cause	Solution
Error code displayed	Specific system fault.	Refer to the full user manual for specific error code meanings. Often, a power cycle (unplug, wait 10 minutes, plug back in) can resolve temporary errors.

Specifications

Key specifications for the FLEXISPOT 79"x32" Height Adjustable Commercial Office Standing Desk:



Image: Detailed dimensions of the desk, including minimum and maximum height, and maximum load capacity.

Feature	Detail
Brand	FLEXISPOT
Model Number	PN1WG-4P79

Feature	Detail
Product Dimensions (D x W x H)	32" x 79" x 29" (minimum height)
Desktop Size	79" x 32"
Height Adjustment Range	28.94" to 46.46"
Maximum Weight Capacity	154 lbs
Base Material	Alloy Steel
Top Material Type	Engineered Wood
Color	White Wood Grain
Special Features	Height Adjustable, Memory Controller, Anti-Collision System, Cable Management Tray, Cup Holder

Warranty and Support

Warranty Information

This FLEXISPOT product comes with a Limited Warranty. Please refer to the warranty card included with your purchase or visit the official FLEXISPOT website for detailed terms and conditions.

Customer Support

For technical assistance, missing parts, or warranty claims, please contact FLEXISPOT customer support. Contact information can typically be found on the manufacturer's website or in the packaging materials.

Online resources and FAQs may also be available on theFLEXISPOT Brand Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question