PINDOWS PDS-8021

PINDOWS PDS-8021 Women's Digital Sport Watch Instruction Manual

Model: PDS-8021

1. Introduction

Thank you for choosing the PINDOWS PDS-8021 Digital Sport Watch. This manual provides detailed instructions for setting up, operating, and maintaining your watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your device.





Figure 1.1: PINDOWS PDS-8021 Digital Sport Watch (Black)

2. Product Overview

2.1 Key Features

- Transparent Case Design
- High-Brightness LED Backlight
- 5ATM Water Resistance
- Stopwatch Function
- Alarm with Countdown Timer
- Calendar (Date/Day)
- Dual Time Display
- Hourly Signal
- 12/24 Hour Format
- Durable Silicone Band
- Scratch-Resistant Mineral Glass

2.2 Watch Components



Figure 2.1: Functional Overview of Watch Buttons

- **LIGHT Button:** Activates the LED backlight.
- **MODE Button:** Cycles through different watch modes (Time, Stopwatch, Alarm, Dual Time, Countdown Timer).
- **START/PAUSE Button:** Used to start/stop functions like the stopwatch or to adjust settings.
- **RESET/ADJUSTMENT Button:** Used to reset functions or confirm settings during adjustment.

3. Initial Setup: Time and Date Setting

Follow these steps to set the current time and date on your PINDOWS PDS-8021 watch:

1. From the Timekeeping Mode, press the **MODE** button repeatedly until the seconds begin to flash. This indicates you are in setting mode.
2. Press the **RESET/ADJUSTMENT** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day → 12/24H Format.
3. Use the **START/PAUSE** button to increase the flashing value. Hold the button to rapidly advance the value.

4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to Timekeeping Mode.

4. Operating Instructions

4.1 Mode Navigation

Press the **MODE** button to cycle through the watch's functions in the following order:

Timekeeping → Stopwatch → Alarm → Dual Time → Countdown Timer

4.2 Stopwatch Function

1. From Timekeeping Mode, press the **MODE** button once to enter Stopwatch Mode. The display will show '00:00:00'.
2. Press the **START/PAUSE** button to start the stopwatch.
3. Press the **START/PAUSE** button again to pause the stopwatch.
4. While paused, press the **RESET/ADJUSTMENT** button to reset the stopwatch to '00:00:00'.
5. Press the **MODE** button to return to Timekeeping Mode.

4.3 Alarm Setting

1. From Timekeeping Mode, press the **MODE** button twice to enter Alarm Mode. The alarm time will be displayed.
2. Press the **RESET/ADJUSTMENT** button to select the hour or minute to set. The selected value will flash.
3. Use the **START/PAUSE** button to adjust the flashing value.
4. Press the **MODE** button to exit Alarm Setting Mode.
5. To turn the alarm ON/OFF, press the **START/PAUSE** button while in Alarm Mode (without flashing digits). An alarm icon will appear/disappear.

4.4 Dual Time Setting

1. From Timekeeping Mode, press the **MODE** button three times to enter Dual Time Mode.
2. Press the **RESET/ADJUSTMENT** button to select the hour or minute to set. The selected value will flash.
3. Use the **START/PAUSE** button to adjust the flashing value.
4. Press the **MODE** button to exit Dual Time Setting Mode.

4.5 Hourly Chime

To activate or deactivate the hourly chime:

1. From Timekeeping Mode, press the **MODE** button twice to enter Alarm Mode.
2. Press the **RESET/ADJUSTMENT** button once. The hourly chime indicator (often a small bell icon or 'CHM') will flash.
3. Press the **START/PAUSE** button to toggle the hourly chime ON or OFF.
4. Press the **MODE** button to return to Timekeeping Mode.

4.6 LED Backlight

Press the **LIGHT** button (typically on the upper left side) to illuminate the watch display. The backlight will remain active for a few seconds.



Figure 4.1: LED Backlight in use

5. Water Resistance Guidelines

Your PINDOWS PDS-8021 watch is rated for 5ATM (50 meters) water resistance. This means it is suitable for:

- Splashes
- Rain
- Showering (cold water)
- Swimming in shallow water

Caution:

- DO NOT press any buttons underwater.
- DO NOT expose the watch to hot water, steam, or extreme temperature changes (e.g., hot showers, saunas).
- Not suitable for diving or high-speed water sports.

Water resistance is not a permanent condition and may weaken over time with normal wear and tear. Avoid exposing the watch to chemicals, soaps, or detergents, as these can damage the seals.



Figure 5.1: Water Resistance Illustration

6. Maintenance and Care

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and then dry thoroughly. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery:** The watch is powered by a long-lasting battery. When the display becomes dim or functions become erratic, it may be time for a battery replacement. This should be performed by a qualified watch technician to maintain water resistance.
- **Impact:** While durable, avoid strong impacts or dropping the watch, as this can damage internal components or the transparent case.

7. Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to Section 3: Initial Setup to reset the time.
Buttons are unresponsive.	Moisture or debris under buttons; internal malfunction.	Ensure buttons are clean and dry. If issue persists, contact customer support.
Water inside the watch.	Water resistance compromised; buttons pressed underwater.	Immediately stop using the watch and seek professional repair to prevent further damage.

8. Specifications

Feature	Detail
Model Number	PDS-8021
Case Material	ABS
Band Material	Skin-friendly silicone
Bottom Cover Material	Stainless Steel
Clasp Type	Buckle
Water Resistance	5ATM (50 meters)
Case Diameter	1.65 inches / 42 mm
Case Thickness	0.51 inches / 13 mm
Band Width	0.86 inches / 22 mm
Band Length	5.6 inches - 7.4 inches (adjustable)
Weight	50g

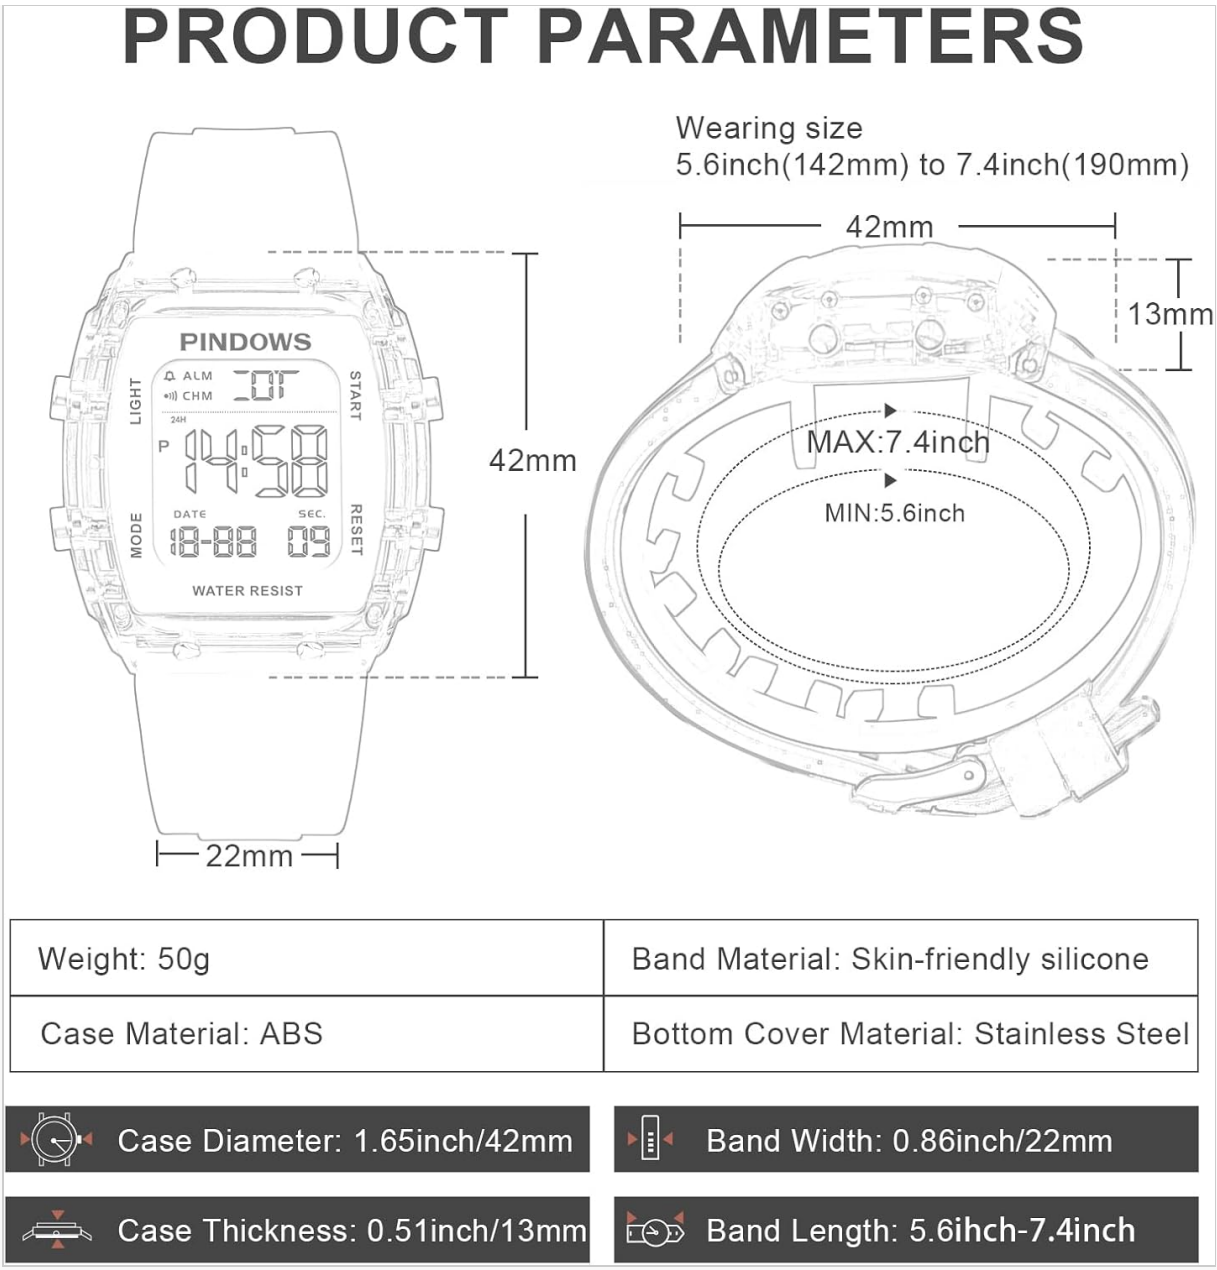


Figure 8.1: Product Dimensions and Materials

9. Warranty and Support

PINDOWS provides a **12-month warranty service** for this product from the date of purchase. This warranty covers manufacturing defects under normal use.
The warranty does not cover:

- Damage caused by improper use or negligence.
- Damage caused by unauthorized repair or modification.
- Normal wear and tear, including scratches on the case or band.
- Battery replacement.

For warranty claims or technical support, please contact PINDOWS customer service through the retailer where the product was purchased or visit the official PINDOWS website for contact information.

© 2025 PINDOWS. All rights reserved.