T4TREAM ILSC48VDW9-2

T4TREAM ILSC48VDW9-2 48-inch Fluted Makeup Vanity Desk with Lighted Mirror User Manual

Model: ILSC48VDW9-2 | Brand: T4TREAM

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your T4TREAM 48-inch Fluted Makeup Vanity Desk. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product. Keep this manual for future reference.

Safety Information

- Always assemble the vanity on a soft, clean surface to prevent scratches.
- Ensure all parts are securely fastened before use. Loose connections can lead to instability.
- Do not overload drawers or shelves. Distribute weight evenly.
- Keep electrical components (mirror lights, charging station) away from water.
- Unplug the vanity from the power source before cleaning or performing any maintenance.
- This product is designed for indoor use only.

Setup and Assembly

Assembly of the T4TREAM vanity desk requires careful attention to detail. It is recommended that**two people** perform the assembly to ensure safety and ease of construction.

Unpacking and Part Identification

1. Carefully unpack all components from the packaging. Retain packaging materials until assembly is complete.
2. Verify all parts and hardware are present against the provided parts list. All parts and accessories are easily identified with numbered stickers. A pack of spare parts is included in case of loss of hardware during assembly.
3. Place all components on a soft, clean, and flat surface to prevent damage during assembly.

Assembly Steps

Follow the detailed, step-by-step instructions provided in the separate assembly manual included with your product. Ensure each step is completed accurately before proceeding to the next.



Figure 1: Overall dimensions and key components of the vanity desk. Refer to the assembly manual for detailed diagrams.

Placement Considerations

- Choose a location with access to a standard electrical outlet for the lighted mirror and charging station.
- Ensure the vanity is placed on a level surface to prevent wobbling.
- Avoid direct sunlight or extreme temperature changes, which can affect the wood finish.

Operating Instructions

Lighted Mirror Operation

The 48-inch HD mirror features integrated LED lighting with adjustable settings.

- **Power On/Off:** Tap the touch control button located on the mirror surface to turn the lights on or off.
- **Adjust Light Mode:** Tap the touch control button repeatedly to cycle through three color modes:
  - Cool Light
  - Natural Light
  - Warm Light
- **Adjust Brightness:** Press and hold the touch control button to smoothly adjust the brightness level from 0% to 100%. Release the button when the desired brightness is reached.



Figure 2: Mirror touch controls for light modes and brightness adjustment.

Charging Station and Hair Dryer Holder

The vanity includes a built-in charging station and a convenient hair dryer holder.

- **Charging Station:** The integrated power strip features two 125V/12A AC outlets and one USB/Type-C port (5V/2.1A). Use

these to power or charge electronic devices.

- **Hair Dryer Holder:** A dedicated holder is located on the side of the vanity to keep your hair dryer accessible and your countertop clear.



Figure 3: Built-in power strip and hair dryer holder for convenience.

Drawer and Storage Utilization

The vanity desk offers ample storage with nine drawers and a specialized organizer.

- **Nine Drawers:** Utilize the eight spacious drawers for general storage of beauty essentials, accessories, and other items. The drawers are equipped with smooth-gliding metal rails for easy opening and closing.
- **12-Slot Wooden Organizer:** The central drawer features a removable 12-slot wooden organizer, ideal for sorting smaller items like cosmetics, jewelry, and lipsticks.
- **Glass Top:** The transparent glass tabletop provides a clear view of items stored in the central compartment, allowing for quick access and an organized display.



Figure 4: Overview of the nine drawers and central storage with glass top.

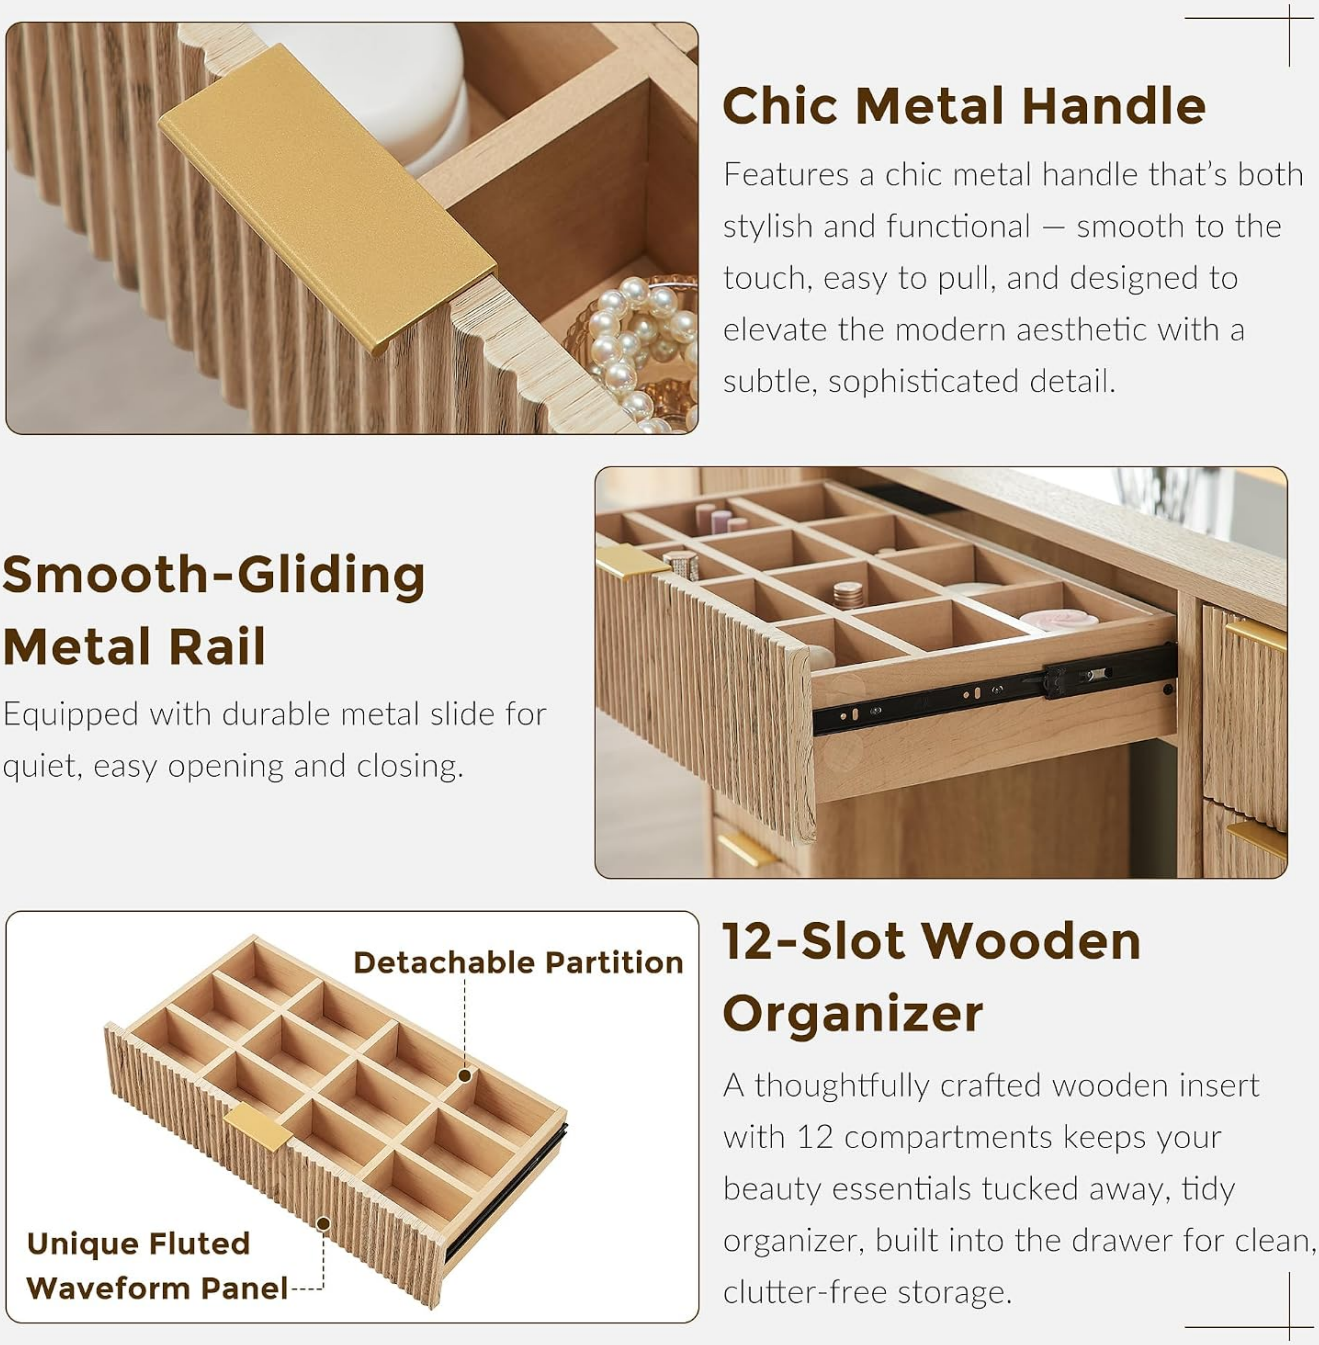


Figure 5: Close-up of drawer features, including handles, rails, and the organizer.

Care and Maintenance

Regular care will help maintain the appearance and functionality of your vanity desk.

- **Wood Surfaces:** Wipe wood surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that can damage the finish. Dry immediately with a clean, soft cloth.
- **Glass Top:** Clean the glass surface with a glass cleaner and a lint-free cloth. Avoid spraying cleaner directly onto the wood frame.
- **Mirror:** Use a soft, lint-free cloth and a non-abrasive glass cleaner specifically designed for mirrors. Do not spray cleaner directly onto the mirror; apply to the cloth first.
- **Fluted Panels:** Use a soft brush or a damp cloth to gently clean dust or debris from the fluted design.
- **Electrical Components:** Ensure the vanity is unplugged before cleaning around the mirror lights or charging station. Wipe with a dry, soft cloth.

- **Hardware:** Periodically check all screws and fasteners to ensure they are tight. Tighten if necessary.

Troubleshooting Guide

Problem	Possible Cause	Solution
Mirror lights do not turn on.	• Vanity not plugged in. • Power outlet not functioning. • Loose connection.	• Ensure the power cord is securely plugged into a working electrical outlet. • Test the outlet with another device. • Check all electrical connections within the vanity (if accessible and safe to do so).
Mirror touch switch LED is too bright at night.	• This is a characteristic of the design.	• While the main mirror lights are adjustable, the indicator LED for the touch switch remains constant. Consider placing a small, opaque object over the LED at night if it causes disturbance.
Charging station (AC outlets/USB) not working.	• Vanity not plugged in. • Device not properly connected. • Overload/circuit tripped.	• Verify the vanity is plugged into a live outlet. • Ensure devices are fully inserted into the outlets/ports. • Unplug all devices, wait a few minutes, and try again. Avoid connecting high-power devices simultaneously.
Drawers are stiff or do not slide smoothly.	• Misalignment during assembly. • Obstruction in the drawer rail. • Overloaded drawer.	• Review assembly instructions for drawer rail installation. • Check for any objects blocking the drawer's path. • Reduce the weight or volume of items in the drawer.
Missing or damaged parts during assembly.	• Packaging error or transit damage.	• Check the included spare parts bag. • Contact T4TREAM customer support for assistance (see Support section).

Product Specifications

Feature	Detail
Brand	T4TREAM
Model Number	ILSC48VDW9-2

Feature	Detail
Product Dimensions (D x W x H)	13.7" x 48" x 53.6" (34.8 cm x 121.9 cm x 136.1 cm)
Item Weight	145 pounds (65.77 kg)
Frame Material	Engineered Wood (FSC-Certified)
Furniture Finish	Oak (Natural Oak color)
Mirror Size	48 inches (width)
Mirror Lighting	Integrated LED, 3 color modes (Cool, Natural, Warm), adjustable brightness
Charging Station	2 x 125V/12A AC Outlets, 1 x USB/Type-C (5V/2.1A)
Storage	9 drawers, 12-slot wooden organizer, glass top compartment
Assembly Required	Yes

Warranty Information

T4TREAM products are manufactured with quality and care. While specific warranty details are not provided in this manual, please retain your proof of purchase. For any warranty claims or inquiries regarding defects in materials or workmanship, please contact T4TREAM customer support.

Customer Support

For further assistance, missing parts, or technical support, please contact T4TREAM customer service. Refer to the contact information provided with your purchase or visit the official T4TREAM website.
You can visit the T4TREAM Store on Amazon for more information: T4TREAM Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question