V-Guard VIC 150

V-Guard VIC 150 Induction Cooktop User Manual

Model: VIC 150 | Brand: V-Guard

1. Important Safety Instructions

Please read all instructions carefully before using the V-Guard VIC 150 Induction Cooktop. Retain this manual for future reference.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Ensure the power supply voltage matches the rating label on the appliance.
- Always place the cooktop on a stable, flat, heat-resistant surface.
- Do not operate the appliance with a damaged cord or plug. Contact authorized service personnel for repairs.
- Keep the appliance away from children and pets during operation.
- Do not touch the hot surface immediately after cooking. The ceramic plate will retain residual heat.
- Ensure proper ventilation around the cooktop. Do not block air vents.
- Use only induction-compatible cookware.
- Avoid placing metallic objects like knives, forks, spoons, or lids on the induction surface as they can become hot.
- Unplug the cooktop from the power outlet when not in use and before cleaning.

2. Product Overview

The V-Guard VIC 150 is a 2000W induction cooktop designed for efficient and quick cooking. It features a sleek touch panel and multiple cooking functions.

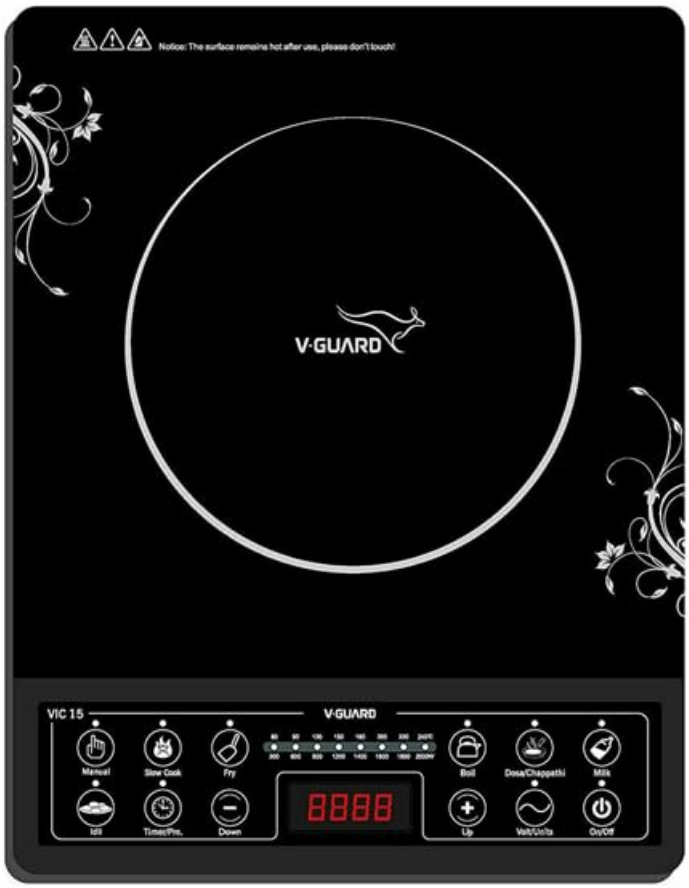


Image: Side view of the V-Guard VIC 150 Induction Cooktop, showcasing its compact design and black finish.

Key components include the ceramic cooking surface, the touch control panel, and ventilation openings.

3. Setup

3.1 Unpacking

- Carefully remove the induction cooktop from its packaging.
- Check for any damage during transit. If damaged, do not use and contact customer support.
- Remove all packaging materials, stickers, and labels from the appliance.

3.2 Placement

- Place the cooktop on a dry, stable, and level surface.
- Ensure there is at least 10 cm of clear space around all sides of the cooktop for adequate ventilation.
- Do not place the cooktop near heat sources, flammable materials, or on metallic surfaces that could interfere with induction.

3.3 Power Connection

- Plug the power cord into a grounded electrical outlet that matches the voltage requirements of the cooktop.
- Ensure the outlet is easily accessible for quick disconnection if needed.

4. Operating Instructions

4.1 Control Panel Overview



Image: Top view of the V-Guard VIC 150 Induction Cooktop, highlighting the control panel with its 7 cooking modes.

The cooktop features an intuitive touch panel for easy operation. The digital display shows power levels, temperature, or timer settings.

4.2 Basic Operation

- **Power On:** Place induction-compatible cookware on the center of the cooking zone. Plug in the cooktop. Press the On/Off button. The display will light up.
- **Select Function:** Choose one of the 7 cooking functions or use the manual mode.
- **Adjust Settings:** Use the + and - buttons to adjust power, temperature, or time.
- **Power Off:** Press the On/Off button again to turn off the cooktop. Unplug from the power outlet after use.

4.3 Cooking Functions

The V-Guard VIC 150 offers 7 pre-programmed cooking functions for various culinary needs. Select the desired function by pressing its corresponding icon on the touch panel.

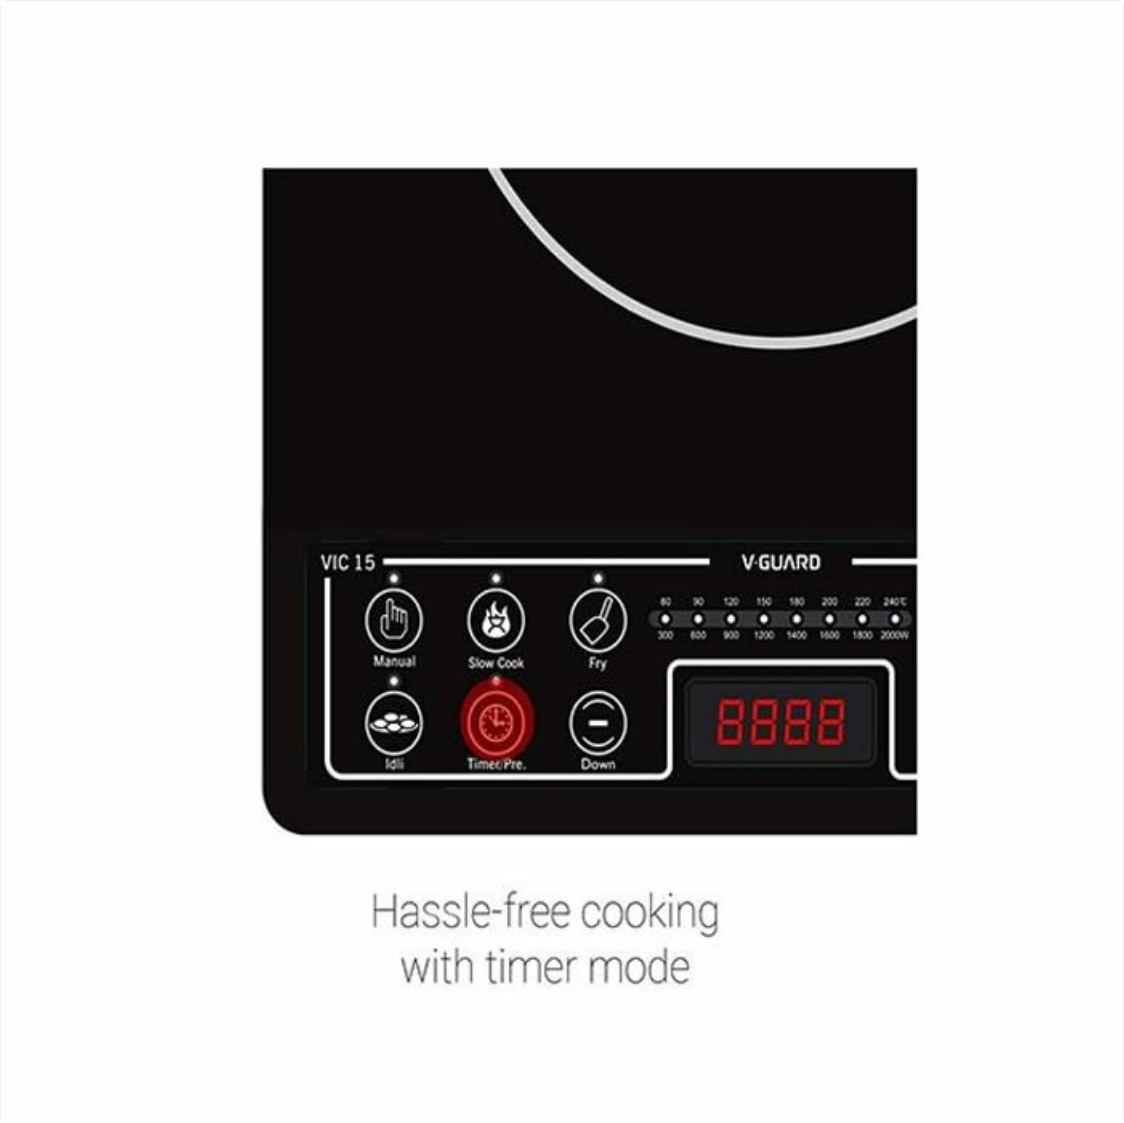


Image: Close-up of the V-Guard VIC 150 control panel, showing the 'Timer/Pre.' button and power/temperature indicators.

- **Manual Mode:** Allows for custom power/temperature settings.
- **Slow Cook:** Ideal for dishes requiring longer cooking times at lower temperatures.
- **Fry:** Optimized for frying with higher, consistent heat.
- Other specific functions are indicated by icons on the control panel, designed for common Indian cooking methods.

4.4 Timer Function

- Press the **Timer/Pre.** button to activate the timer.
- Use the **+** and **-** buttons to set the desired cooking time (up to 24 hours).
- The cooktop will automatically turn off once the set time has elapsed.

4.5 Child Lock

- To activate the child lock, press and hold the **Child Lock** button (often indicated by a lock icon) for a few seconds until the lock indicator appears on the display.
- When activated, all other buttons will be unresponsive.
- To deactivate, press and hold the **Child Lock** button again until the indicator disappears.

5. Maintenance and Cleaning

5.1 Cleaning the Cooktop

- Always unplug the cooktop and allow it to cool completely before cleaning.
- Wipe the ceramic glass surface with a soft, damp cloth and mild detergent. For stubborn stains, use a non-abrasive ceramic cooktop cleaner.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as they can scratch or damage the surface.
- Wipe the control panel and exterior body with a soft, damp cloth. Ensure no water enters the internal components.
- Dry all surfaces thoroughly before plugging the cooktop back in.

5.2 Storage

- Store the cooktop in a dry, cool place when not in use.
- Avoid placing heavy objects on the cooktop surface during storage.

6. Troubleshooting

If you encounter issues with your V-Guard VIC 150 Induction Cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on	No power supply; Cooktop not plugged in; Power button not pressed.	Check power outlet and plug connection; Press the On/Off button.
No heating	Non-induction compatible cookware; Cookware not centered; Small cookware.	Use induction-compatible cookware; Center the cookware; Ensure cookware base covers at least 80% of the cooking zone.
Display shows an error code (e.g., E0, E1)	Overheating; Voltage fluctuation; Internal fault.	Unplug and let cool; Check power supply; If error persists, contact customer support.
Fan continues to run after turning off	Normal operation to cool internal components.	This is normal. The fan will stop automatically once cooled.

If the problem persists after attempting these solutions, please contact V-Guard customer support.

7. Specifications

Key technical specifications for the V-Guard VIC 150 Induction Cooktop:

Feature	Specification
Model Number	VIC 150
Power Output	2000 Watts
Control Type	Touch Panel
Cooking Functions	7 Pre-programmed functions
Timer	24-hour timer
Safety Features	Child Lock, Low/High Voltage Cut-off Protection

Feature	Specification
Color	Black
Item Weight	500 g
Item Dimensions (LxWxH)	12 x 5 x 12 Centimeters
Included Components	User Manual

8. Warranty and Support

8.1 Warranty Information

The V-Guard VIC 150 Induction Cooktop comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration of the warranty.

8.2 Customer Support

For any product-related queries, service requests, or technical assistance, please contact V-Guard customer support. Contact details can typically be found on the V-Guard official website or on the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question