Viribus 26″ (5′2″–6′1″ Rec. Height)

Viribus Adult Tricycle User Manual

Model: 26″ (5′2″–6′1″ Rec. Height) | Brand: Viribus

Introduction

This manual provides essential information for the safe assembly, operation, and maintenance of your Viribus Adult Tricycle. Please read this manual thoroughly before using the tricycle to ensure proper function and longevity. Retain this manual for future reference.



Image: The Viribus Adult Tricycle, showcasing its gray frame, front basket with decorative flowers, and a rear basket with a small dog, highlighting its utility and design.

Safety Information

Always prioritize safety when operating your tricycle. Failure to follow safety guidelines can result in injury or damage to the product.

- Always wear a helmet when riding.
- Ensure all bolts, nuts, and quick-release levers are securely fastened before each ride.
- Check brake functionality before each use.
- Be aware of your surroundings and obey all traffic laws.
- Do not exceed the maximum weight recommendation of 400 pounds.
- Avoid riding in adverse weather conditions or on uneven terrain that may compromise stability.

Components List

Your Viribus Adult Tricycle package includes the following main components:

- Tricycle Frame (High Carbon Steel)
- Three 26-inch Wheels with Duplex Aluminum Rims and 1.95" Wide Rubber Tires
- Front Basket with Removable Canvas Bag
- Rear Removable Wheeled Basket
- Padded Faux Leather Saddle with Coil Spring
- Adjustable Handlebar
- 7-Speed Shimano Derailleur and Thumb Shifter
- Linear Pull Brakes
- Bell
- Lock
- Mudguards (Fenders)
- Tool Kit

Setup and Assembly

The Viribus Adult Tricycle requires assembly. For detailed, step-by-step instructions, please refer to the dedicated assembly video or the comprehensive user manual provided with your purchase. Professional assembly is recommended if you are unfamiliar with bicycle mechanics.
Key assembly points include:

- Attaching the front wheel and fender.
- Installing the handlebar and adjusting its height.
- Mounting the saddle and adjusting its height.
- Assembling and attaching the rear axle, wheels, and derailleur system.
- Installing the front and rear baskets.
- Adjusting brakes and gears for optimal performance.

Note: Incorrect assembly can lead to mechanical failure and injury. If you are unsure, seek professional assistance.

Operating Instructions

1. Adjusting for Comfort



Image: Details of the tricycle's comfort features, including the adjustable handlebar, extra-wide saddle, and the convenient step-through frame design.

- **Saddle Height:** Adjust the saddle height so that your feet can comfortably touch the ground while seated, allowing for proper leg extension during pedaling. The wide padded faux leather saddle with coil spring is designed for shock-absorbing comfort.

- **Handlebar Height:** Adjust the handlebar to a comfortable height that allows for an upright riding posture, reducing strain on your back and wrists.
- **Step-Through Frame:** The tricycle features a step-through frame for easy mounting and dismounting.



Image: A detailed view of the large, comfortable saddle, highlighting its padding and coil spring suspension for enhanced riding comfort.

2. Using the 7-Speed Gear System



Image: The 7-speed Shimano derailleur system, showing the thumb shifter on the handlebar and the gear mechanism, designed for smooth transitions across various terrains.

Your tricycle is equipped with a 7-speed Shimano derailleur system for versatile riding. Use the thumb shifter on the handlebar to change gears:

- **Lower Gears (1-3):** Ideal for climbing hills or riding against strong headwinds, providing easier pedaling.
- **Middle Gears (4-5):** Suitable for flat terrain and general cruising.

- **Higher Gears (6-7):** Best for increasing speed on flat or downhill sections, reducing pedaling effort at higher speeds.

Shift gears smoothly by pedaling lightly while operating the shifter. Avoid shifting multiple gears at once or shifting under heavy load.

3. Utilizing the Baskets



Image: The tricycle in use, demonstrating the spacious front and rear baskets filled with items, with detailed views of the wheeled rear basket and the front basket with its removable canvas bag.

- **Front Basket:** Features a removable canvas bag for convenient carrying of smaller items or groceries. Ensure the basket is securely attached before riding.
- **Rear Wheeled Basket:** This large basket is detachable and equipped with wheels, allowing it to be easily removed

and used for shopping or transporting heavier items up to 110 lbs. Securely reattach it to the tricycle before riding.

- **Weight Distribution:** Distribute weight evenly between the baskets to maintain tricycle stability. Do not exceed the maximum capacity of 55 lbs for the front basket and 110 lbs for the rear basket.

Maintenance

Regular maintenance ensures the longevity and safe operation of your Viribus Adult Tricycle.


- **Cleaning:** Clean the tricycle regularly with a damp cloth and mild soap. Avoid harsh chemicals. The three-spray and four-bake painted frame resists rust.
- **Tire Pressure:** Check tire pressure before each ride. Maintain the recommended PSI (usually found on the tire sidewall) for optimal performance and safety. The 1.95" wide rubber tires and duplex aluminum rims contribute to stability.
- **Brakes:** Inspect brake pads for wear and ensure brake levers engage smoothly and effectively. Adjust brake cable tension as needed.
- **Chain:** Keep the chain clean and lubricated to prevent rust and ensure smooth pedaling.
- **Fasteners:** Periodically check all nuts, bolts, and screws for tightness. Tighten any loose fasteners.
- **Storage:** Store the tricycle in a dry, covered area to protect it from the elements.

Troubleshooting

This section addresses common issues you might encounter. For problems not listed here, please contact customer support.

Problem	Possible Cause	Solution
Brakes feel weak	Worn brake pads, loose cable, misaligned calipers	Inspect and replace brake pads, tighten brake cable, adjust caliper alignment.
Difficulty shifting gears	Derailleur out of adjustment, dirty/dry chain, bent hanger	Adjust derailleur, clean and lubricate chain, inspect for damage.
Tires losing air quickly	Puncture, loose valve stem, faulty tube	Inspect tires for punctures, tighten valve stem, replace inner tube if necessary.
Squeaking or grinding noises	Lack of lubrication, loose components, worn bearings	Lubricate moving parts (chain, pedals), check and tighten all fasteners, inspect bearings.

Specifications

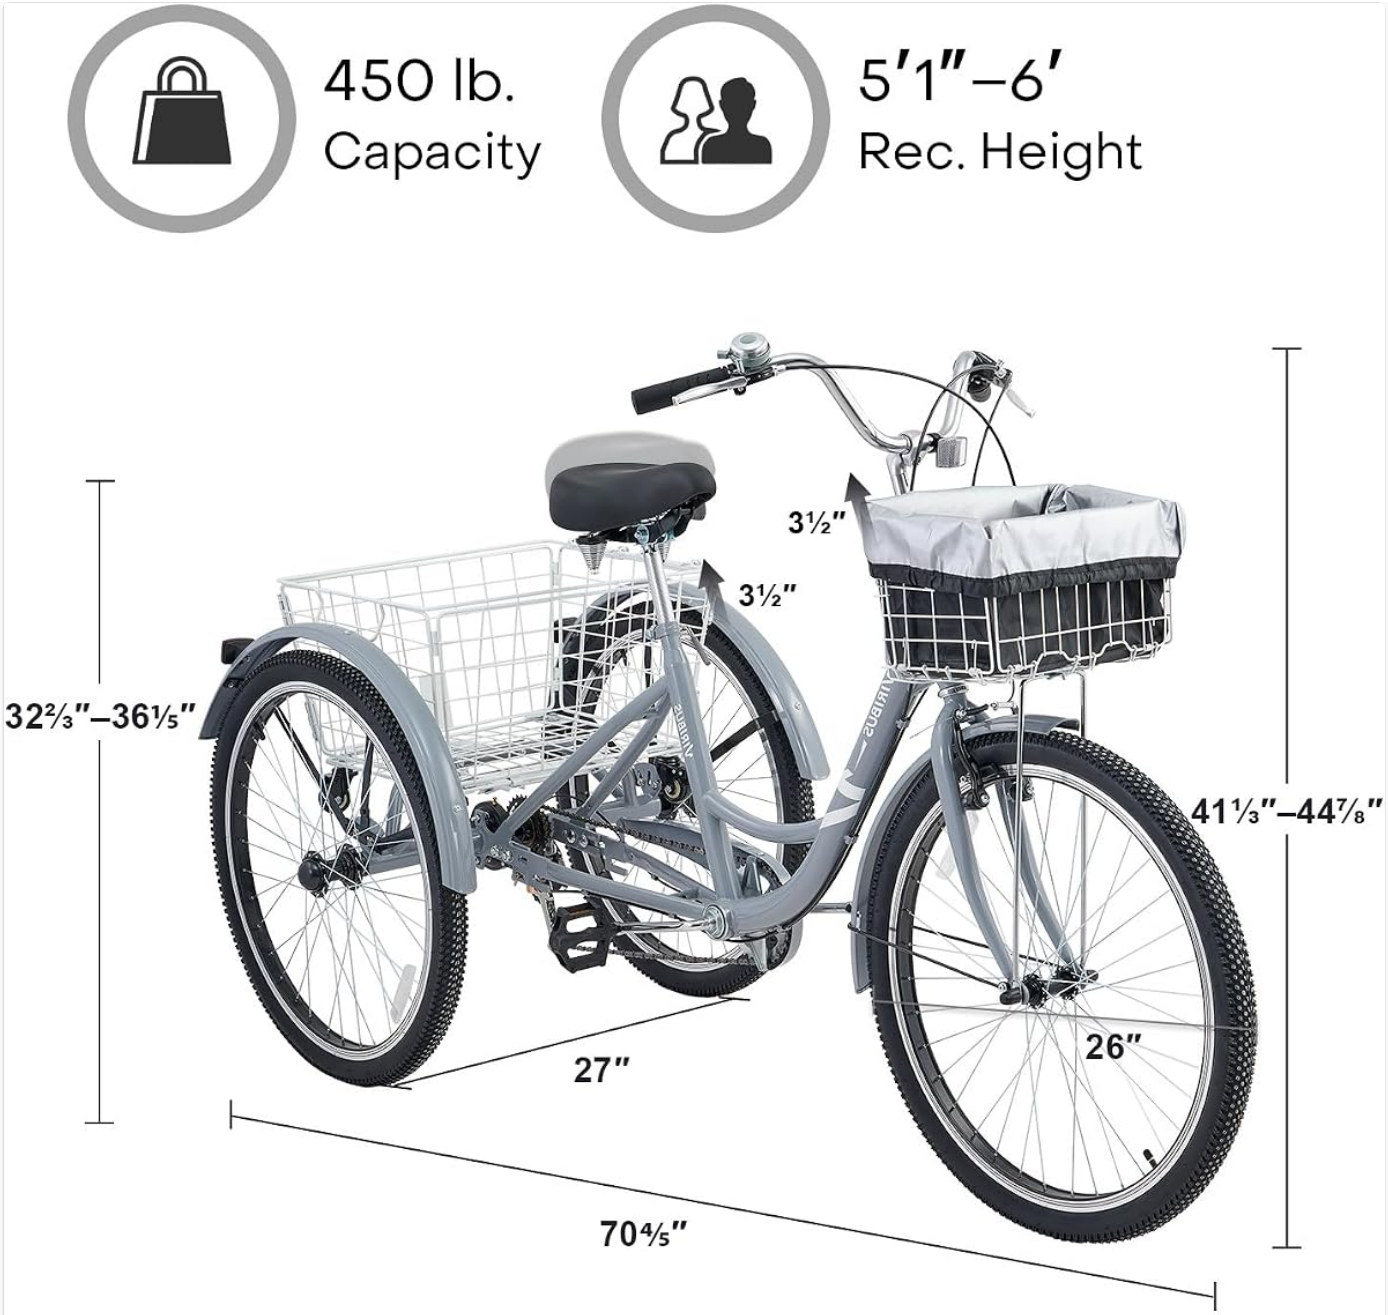

Rear Basket Dimensions	Rear Basket Capacity
21.3 x 16.5 x 14 in.	110 lb.
Front Basket Dimensions	**Front Basket Capacity**
12 x 8.7 x 9 in.	55 lb.

Image: A technical diagram illustrating the key dimensions and weight capacities of the tricycle, providing a clear overview of its physical attributes.

Feature	Detail
Bike Type	Cruiser Bike
Age Range	Adult

Feature	Detail
Brand	Viribus
Number of Speeds	7
Color	Gray
Wheel Size	26 Inches
Frame Material	High Carbon Steel
Suspension Type	Rigid
Brake Style	Linear Pull
Maximum Weight Recommendation	400 Pounds
Minimum User Height	5.2 Feet (62.4 inches)
Front Basket Dimensions	12 x 8.7 x 9 inches
Front Basket Capacity	55 lbs
Rear Basket Dimensions	21.3 x 16.5 x 14 inches
Rear Basket Capacity	110 lbs
Special Features	Removable wheeled rear basket, front basket with canvas bag, shock-absorbing seat, rust-resistant painted frame.

Warranty and Support

Viribus is committed to providing quality products and excellent customer service.

- **Official Warranty:**
  - 30-Day Return for Quality Issues
  - 12-Month Warranty
  - Lifetime Technical Support
- **Customer Service:**
  - **Call Center:** +1 (320) 377-3106 (Monday – Friday, 9:00 AM – 5:00 PM PST)
  - **Email Support:** support@viribusbikes.com



Image: Information regarding Viribus's customer support, including contact details and warranty policy, ensuring users have access to

assistance.

© 2025 Viribus. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question