Nitemode 43279 Touch Edition

Nitemode Light Kit for Lego WALL-E and EVE 43279 (Touch Edition) Instruction Manual

Brand: Nitemode

Model: 43279 Touch Edition

1. Introduction

This instruction manual provides guidance for the installation and operation of the Nitemode Light Kit for the Lego WALL-E and EVE model 43279 Touch Edition. This kit is designed to enhance your Lego model with adjustable lighting features.
Please note: The Lego building block model is not included with this light kit.



Image: Important notice indicating that only the LED lighting kit is included, not the Lego model.

2. What's Included

The Nitemode Light Kit package typically includes the following components:

- LED light components
- Connecting cables
- Touch switch module
- Power supply (charger)
- Instruction manual (electronic version)



Image: The light kit package showing the packing box, charger, and instruction manual.

3. Setup and Installation

The Nitemode light kits are designed for straightforward installation. Detailed, step-by-step online installation instructions are available to guide you through the process. These instructions are provided in an electronic format to ensure clarity and accessibility.

Accessing Electronic Instructions:

1. Locate the QR code provided in your packaging or on the product page.
2. Scan the QR code with your smartphone or tablet.
3. Alternatively, visit the official support website: http://support.nitemodetoy.com
4. Input the product model number (43279) to find the specific instructions for your kit.
5. Preview the PDF instructions for detailed installation steps.



Image: Guide to accessing the electronic instruction manual, including scanning a QR code or visiting a support website.

4. Operating Instructions

The Nitemode Light Kit for model 43279 features a touch-sensitive switch for controlling the lighting. This allows for easy activation and brightness adjustment.

Power On/Off:

- To turn the lights **on**, gently tap the touch switch.
- To turn the lights **off**, gently tap the touch switch again.

Adjusting Brightness:

- To adjust the brightness, **long-press** the touch switch. The brightness will gradually increase or decrease.
- Release the switch when the desired brightness level is reached.



Image: Visual representation of the touch switch controlling brightness levels from 30% to 100%.



Image: Comparison of the Lego WALL-E and EVE models with the light kit turned on versus turned off.



Image: Detailed views of the illuminated WALL-E and EVE models, showcasing the light effects.

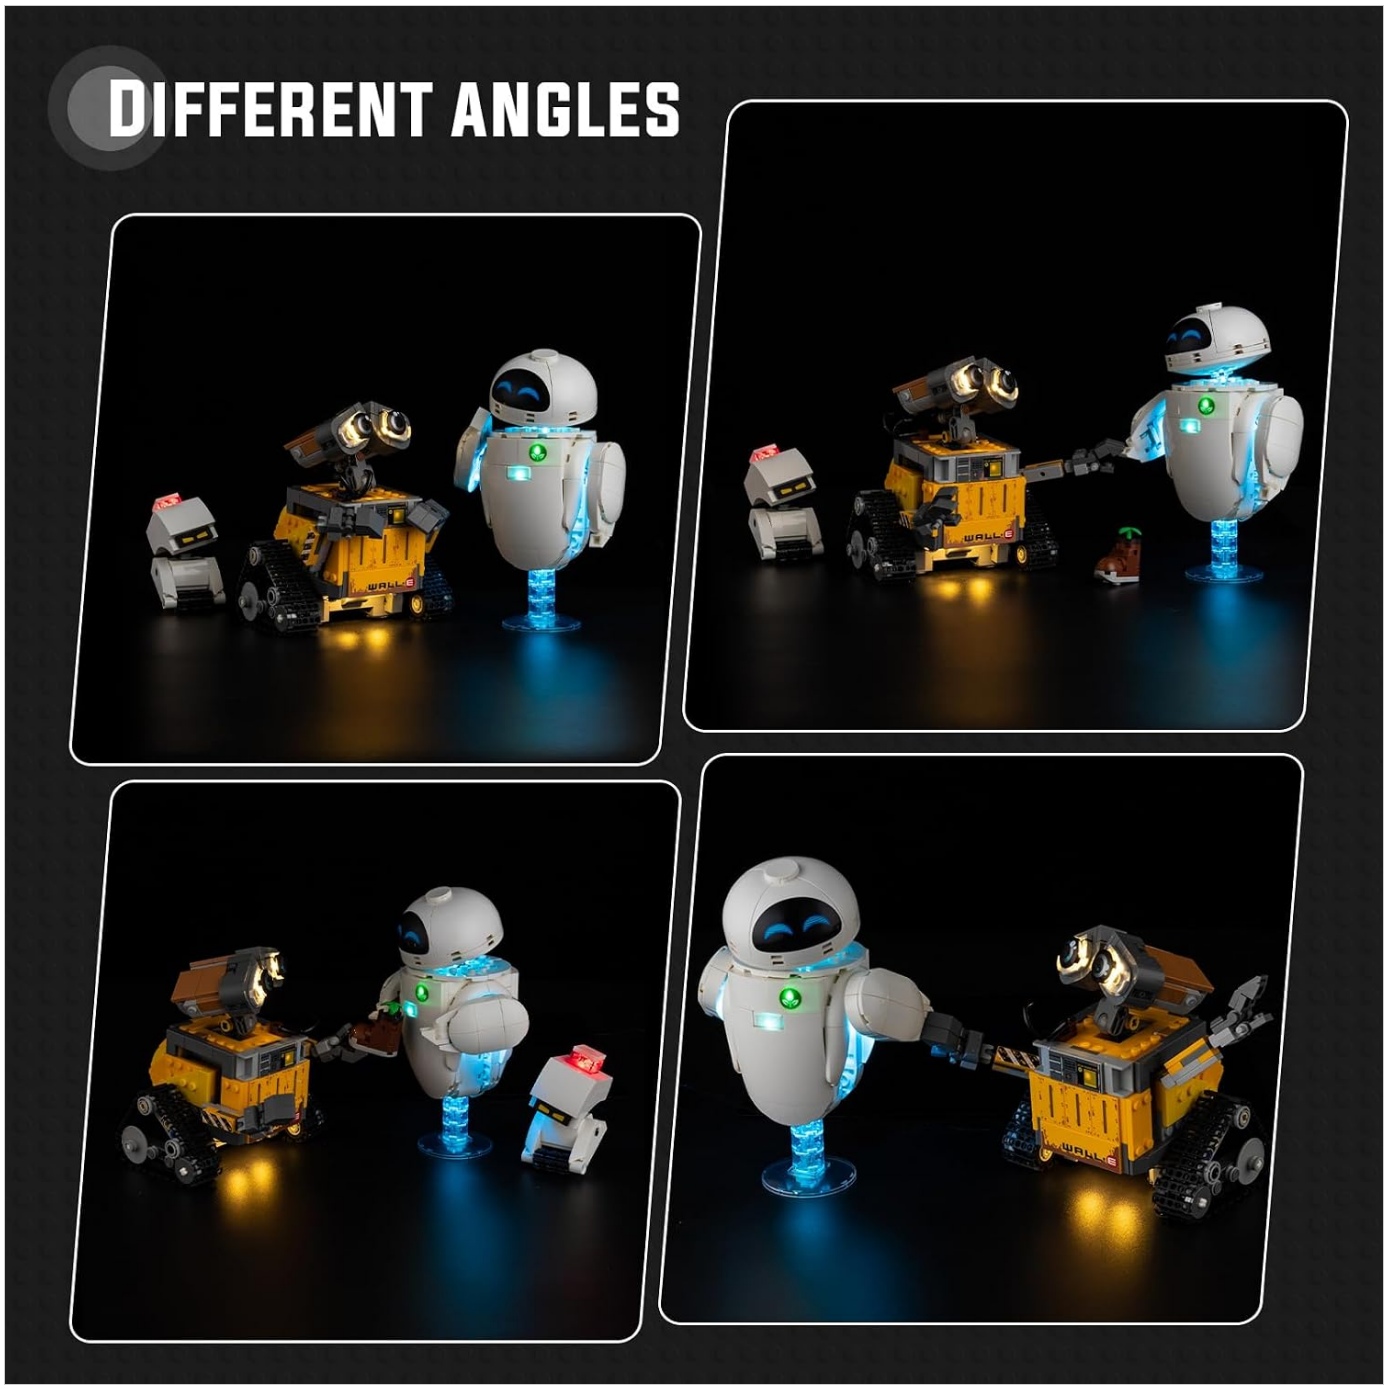


Image: Multiple perspectives of the illuminated Lego WALL-E and EVE models.

5. Maintenance

To ensure the longevity and optimal performance of your Nitemode Light Kit, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe the LED components and cables. Avoid using abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the light kit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the delicate wires and LED components with care to prevent damage.

6. Troubleshooting

If you encounter any issues with your Nitemode Light Kit, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Lights do not turn on.	◦ Loose connection. ◦ Power supply issue. ◦ Faulty touch switch.	◦ Check all cable connections to ensure they are secure. ◦ Verify the power supply is correctly connected and functional. ◦ Ensure the touch switch is properly installed and functioning.
Lights flicker or are dim.	◦ Insufficient power. ◦ Loose connection. ◦ Brightness setting too low.	◦ Ensure the power supply provides adequate power. ◦ Check all cable connections. ◦ Long-press the touch switch to increase brightness.

If the problem persists after attempting these solutions, please contact Nitemode customer support.

7. Specifications

- **Brand:** Nitemode
- **Model:** 43279 Touch Edition
- **Material Type:** Plastic
- **Number of Pieces:** 5 (for the light kit)
- **Item Dimensions:** 7.36 x 4.32 x 1.33 inches
- **Operation Mode:** Manual (Touch Control)
- **Power Source:** Battery
- **Additional Features:** Glow in the Dark (referring to the light effect)
- **Assembly Required:** Yes

8. Official Product Video

Watch the official product video for a visual guide on the Nitemode Light Kit for Lego WALL-E and EVE 43279 Touch Edition.

Your browser does not support the video tag.

Video: Official demonstration of the Nitemode Light Kit for Lego WALL-E and EVE 43279, showcasing its features and operation.

9. Support and Warranty

Nitemode is committed to providing high-quality products and excellent customer service. If you have any questions about the product, require assistance with installation, or need to address any issues, please contact us.
For support, please refer to the contact information provided in your product packaging or visit our official support website: http://support.nitemodetoy.com
Information regarding product warranty can be found on our support website or by contacting customer service directly.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question