Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

NBDDIGITAL S100F

NBDDIGITAL S100F 5K 64MP Digital Camera Instruction Manual

MODEL: S100F

Introduction

Thank you for choosing the NBDDIGITAL S100F 5K 64MP Digital Camera. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your camera. Please read it thoroughly before use to ensure proper functionality and to maximize your photography and videography experience.

1. Setup

1.1 Package Contents

Verify that all items listed below are included in your package:

- NBDDIGITAL S100F Camera Body
- 52mm Wide-Angle Lens
- Macro Lens
- 2 x Rechargeable Batteries
- Battery Charger
- Shoulder Strap
- Camera Bag
- 64GB TF Card
- Card Reader
- USB Data Cable



Image: All included accessories for the NBDDIGITAL S100F camera.

1.2 Unboxing and Initial Setup

Watch this video for a visual guide on unboxing your camera and performing the initial setup steps, including battery and TF card installation.

Your browser does not support the video tag.

Video: Unboxing the NBDDIGITAL S100F 5K 64MP Digital Camera and initial component overview.

1.3 Battery Installation

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert the battery into the compartment, ensuring the correct orientation as indicated by the markings.
3. Close the battery compartment cover until it clicks securely into place.

1.4 TF Card Installation

1. Locate the TF card slot, typically near the battery compartment or on the side of the camera.
2. Insert the TF card with the metal contacts facing down and the logo facing the icon, pushing it gently until it clicks into place.
3. To eject, push the TF card in again until you hear a click, and it will spring out.



Image: Instructions for TF card installation and removal.

1.5 Lens Attachment

The camera comes with a wide-angle lens and a macro lens. These can be attached to the main camera lens.

1. Align the threads of the desired lens (wide-angle or macro) with the threads on the front of the camera's primary lens.
2. Gently rotate the accessory lens clockwise until it is securely fastened.
3. To remove, rotate counter-clockwise.



Image: The NBDDIGITAL S100F camera with its wide-angle and macro lens attachments.

2. Operating Instructions

2.1 Power On/Off

Press and hold the power button (usually located on the top of the camera) for a few seconds to turn the camera on or off.

2.2 Basic Photography

The NBDDIGITAL S100F captures high-resolution 64MP photos with various features to enhance your shots.

- **Autofocus (AF):** The camera features contrast detection autofocus. Half-press the shutter button to focus, then fully press to capture the image.



Image: Guide on activating autofocus by half-pressing the shutter button.



Image: Demonstrating autofocus and anti-shake features with a moving subject.

- **Self-Timer:** Set a delay of 2s, 5s, or 10s before the photo is taken, allowing you to be in the shot.



Image: Examples of self-timer photography at 2, 5, and 10 seconds.

- **Continuous Shooting:** Capture a rapid sequence of photos (3P/5P/10P) by holding down the shutter button, ideal for action shots.



Image: Continuous shooting mode capturing a skateboarder's movement.

2.3 Video Recording

Record ultra-crisp 5K videos at 25fps or 4K videos at 30fps.

1. Switch the camera to video mode using the mode dial.
2. Press the record button to start and stop recording.

Image: The camera capturing 5K video footage of a sports event.

2.4 Zoom Function

Utilize the 16X digital zoom to magnify distant subjects.

1. In photo or video mode, use the zoom controls (often marked 'W' for wide and 'T' for telephoto) to adjust the digital zoom level.



Image: Visual representation of the 16X digital zoom capability.

2.5 Flash Usage

The built-in flash provides additional illumination in low-light conditions.

1. Access flash settings through the camera menu or a dedicated flash button.
2. Select from Auto, On, or Off modes based on your lighting environment.



Image: Demonstrating the effect of the built-in flash in low light.

2.6 Shooting Modes and Filters

Explore various built-in modes and filters to enhance your creative output.

- **Modes:** Includes time-lapse, scene, and other preset modes. Select these via the mode dial or menu.
- **Filters:** Apply various filters (e.g., Normal, Warm, Contrast, Negative, Natural, B&W) to your photos for different artistic effects.



Image: Overview of creative shooting modes and filter options.

2.7 Wi-Fi Connectivity and Webcam Functionality

Connect your camera to a smartphone via Wi-Fi for remote control and file transfer, or use it as a webcam.

1. **Wi-Fi Connection:** Enable Wi-Fi in the camera settings. Scan the QR code displayed on the camera screen with your smartphone to download the companion app and connect.
2. **USB Transfer:** Connect the camera to a computer using the USB data cable to transfer files directly.
3. **Webcam Mode:** Connect the camera to your computer via USB and select webcam mode from the camera's menu to use it for live streaming or video calls.



Image: Demonstrating Wi-Fi connectivity, USB transfer, and webcam functionality.



Image: Step-by-step guide for Wi-Fi connection setup.

3. Maintenance

3.1 Cleaning the Camera and Lenses

- Use a soft, lint-free cloth to gently wipe the camera body.
- For lenses, use a specialized lens cleaning solution and a microfiber cloth to avoid scratches. Never use abrasive materials.
- Use a blower brush to remove dust from the lens surface before wiping.

3.2 Battery Care

- Charge batteries fully before first use.
- Store batteries in a cool, dry place when not in use.
- Avoid exposing batteries to extreme temperatures.

3.3 Storage

When not in use, store the camera in its provided bag in a dry, dust-free environment away from direct sunlight and moisture.

4. Troubleshooting

This section addresses common issues you might encounter with your NBDDIGITAL S100F camera.

Q: How do I adjust the picture quality?

A: Press the 'Fn' (Function) button, then use the directional pad to select 'Photo Resolution'. Press 'OK' to confirm and choose your desired image quality (e.g., 64MP) and aspect ratio.

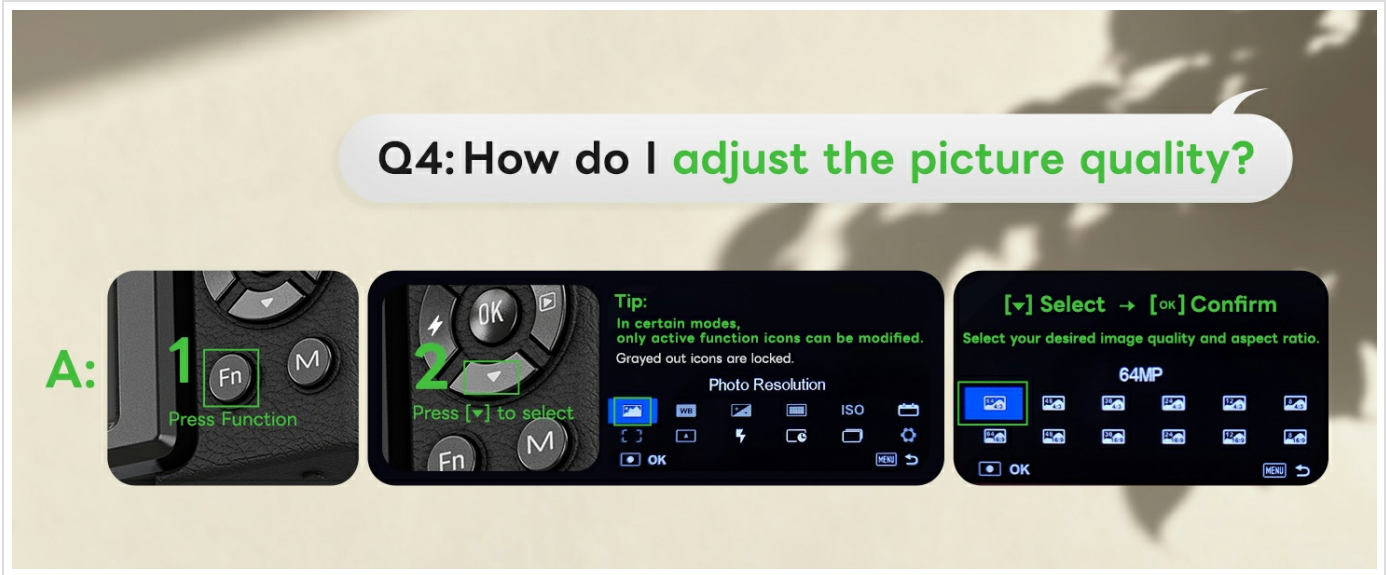


Image: Guide for adjusting picture quality settings.

General Troubleshooting Tips:

- **Camera not turning on:** Ensure the battery is fully charged and correctly inserted.
- **Images are blurry:** Check if autofocus is enabled and functioning. Ensure lenses are clean.
- **TF card error:** Reinsert the TF card. If the issue persists, try formatting the card (this will erase all data) or use a different TF card.

- **Wi-Fi connection issues:** Ensure the camera's Wi-Fi is enabled and your smartphone is connected to the camera's Wi-Fi network. Restart both devices if necessary.

5. Specifications

Feature	Description
Model Name	S100F
Brand	NBDDIGITAL
Effective Still Resolution	64 MP
Video Resolution	5K
Digital Zoom	16 x
Screen Size	3 Inches (180° Flip Screen)
Image Stabilization	Anti-Shake
Autofocus Technology	Contrast Detection
Connectivity Technology	Wi-Fi
Supported File Format	MOV, JPG
Lens Type	Macro & Wide-angle (52mm)
Memory Storage Capacity	64 GB (TF Card included)
Battery Type	Lithium-Ion Polymer
Item Weight	0.94 Kilograms
Water Resistance Level	Not Water Resistant

6. Warranty and Support

6.1 Warranty Information

The NBDDIGITAL S100F camera comes with a**1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

6.2 Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact NBDDIGITAL customer support through the retailer where you purchased the product or visit the official NBDDIGITAL store on Amazon: NBDDIGITAL Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FQSJ5BBX

More documents and user manuals: **https://manuals.plus/**