Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

HOMCOM 7.5ft

HOMCOM 7.5ft Smart Prelit Christmas Tree

User Manual

1. Introduction

Thank you for choosing the HOMCOM 7.5ft Smart Prelit Christmas Tree. This artificial Christmas tree is designed to bring festive cheer with its full-spectrum RGB dimmable LEDs, offering over 100 lighting modes, DIY customization, and music synchronization. It features convenient control via a smartphone app, remote control, or an adapter button. The hinged branch design ensures straightforward assembly and shaping.

2. Safety Information

- **Indoor Use Only:** This product is intended for indoor use in dry locations. Do not expose to rain or moisture.
- **Electrical Safety:** Ensure the power outlet matches the voltage requirements of the tree. Do not overload electrical outlets.
- **Flame Resistant:** The tree is constructed with flame-retardant materials. However, keep it away from open flames or heat sources.
- **Children and Pets:** Keep small parts and electrical cords out of reach of children and pets to prevent choking hazards or electrical shock.
- **Unplug When Not in Use:** Always unplug the tree from the power source when not in use or before performing any maintenance.

3. Package Contents

Verify that all components are present before beginning assembly:

- Tree Sections (typically 3-4 sections depending on height)
- Metal Stand Base
- Power Adapter
- Remote Control
- Instruction Manual (this document)

4. Assembly Instructions

1. **Assemble the Stand:** Open the metal stand base and insert the provided screws to secure it. Place the stand in your desired location.
2. **Insert Tree Sections:** Begin with the bottom section of the tree. Insert it firmly into the stand. The hinged branches will automatically fall into place.
3. **Connect Remaining Sections:** Continue by inserting the middle and top sections, ensuring each section is securely connected to the one below it. The integrated wiring will automatically connect the lights as sections are joined.
4. **Fluff the Branches:** Once all sections are in place, carefully spread out and shape each branch tip to achieve a full and natural appearance. This process may take 45-60 minutes to ensure optimal fullness.

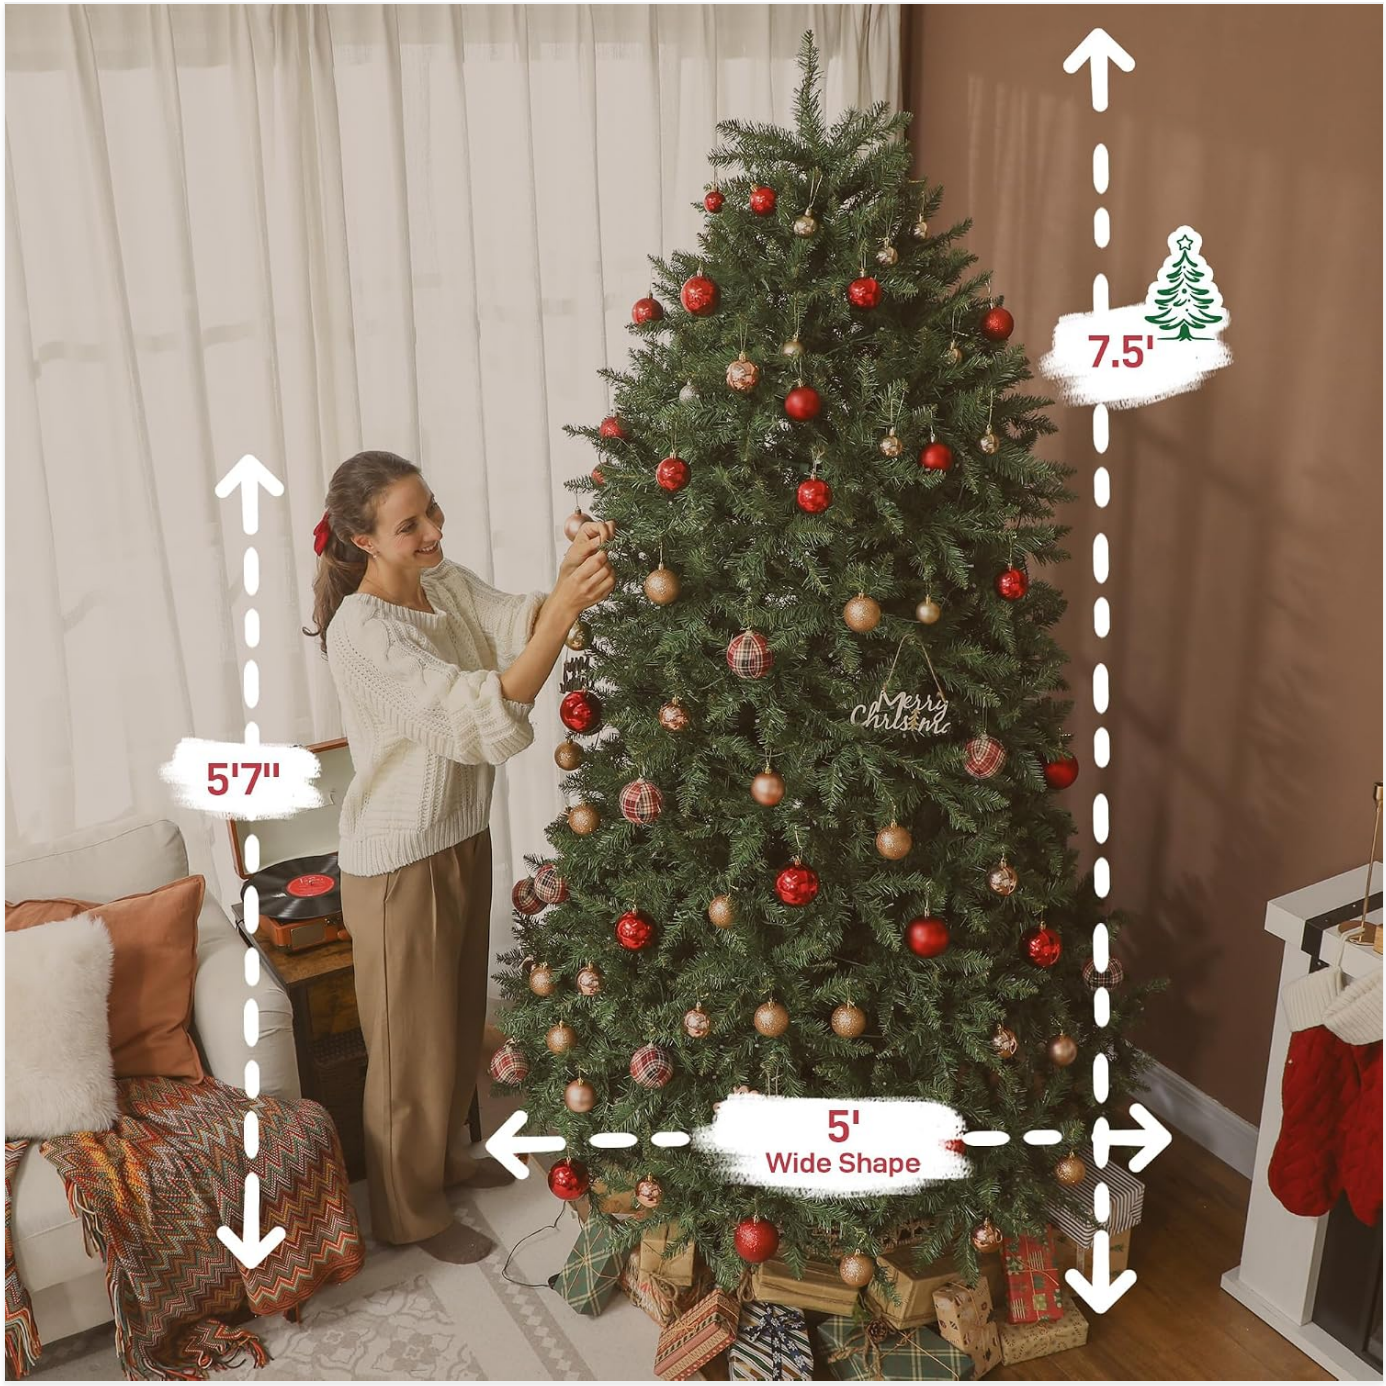


Image: Person carefully fluffing the branches of the Christmas tree to achieve a full shape.



Image: A close-up view of the hinged branch construction, illustrating how branches drop into place for easy assembly.

5. Operating Instructions

Your HOMCOM Smart Prelit Christmas Tree offers multiple ways to control its lighting features.

5.1 Powering On/Off

Plug the power adapter into a standard electrical outlet. The tree lights will illuminate. To turn off, unplug the adapter or use the remote/app.

5.2 Control Methods

The tree can be controlled using the 'HELLO FAIRY' Bluetooth app, the included remote control, or the adapter button.

A. Smartphone App Control (Recommended)

1. Download the 'HELLO FAIRY' app from your device's app store.

2. Enable Bluetooth on your smartphone.
3. Open the 'HELLO FAIRY' app and follow the on-screen instructions to connect to your Christmas tree.
4. Once connected, you can access various features:
    - **100+ Preset Modes:** Choose from a wide array of dynamic lighting effects.
    - **DIY Function:** Customize light colors and patterns in specific positions on the tree.
    - **Brightness & Speed Adjustment:** Fine-tune the intensity and pace of the lights.
    - **Music Sync:** The lights can change colors and patterns in rhythm with music played through your device.
    - **Scheduling:** Set daily timers for the lights to turn on and off automatically.



Image: A smartphone displaying the 'HELLO FAIRY' app interface, showing options for light customization and effects.



Image: A collage demonstrating various multi-color changing light patterns achievable with the tree's RGB LEDs.



Image: The 'HELLO FAIRY' app showing options to schedule the tree's lighting times.



Image: A person dancing next to the Christmas tree, illustrating the music synchronization feature of the lights.

B. Remote Control

Use the included remote control for quick adjustments to light modes, brightness, and speed without needing your phone.

C. Adapter Button

A button on the power adapter allows for basic control of the lights, typically cycling through preset modes.

Your browser does not support the video tag.

Video: An overview of the HOMCOM Christmas Tree, demonstrating its features and lighting capabilities.

6. Maintenance

- **Cleaning:** Dust the tree regularly with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Light Replacement:** The LED lights are integrated and not user-replaceable. If a section of lights fails, contact customer support.

- **Storage:** Before storing, ensure the tree is completely dry. Disassemble the tree in reverse order of assembly. Gently compress the branches and store the tree sections and stand in their original packaging or a suitable storage bag in a cool, dry place.

7. Troubleshooting

Problem	Possible Cause	Solution
Lights not turning on	Power adapter not connected; loose section connection; power outlet issue.	Ensure the power adapter is securely plugged into both the tree and the wall outlet. Check all tree section connections. Test the power outlet with another device.
Remote control not working	Dead battery; obstruction; out of range.	Replace the remote control battery. Ensure there are no obstructions between the remote and the tree's receiver. Operate within the specified range.
App not connecting to tree	Bluetooth off; app not updated; tree not in pairing mode.	Ensure Bluetooth is enabled on your device. Update the 'HELLO FAIRY' app to the latest version. Follow app instructions for pairing.
Lights flickering or inconsistent	Loose connection; power fluctuation.	Check all tree section connections and the power adapter connection. Ensure the power source is stable.

8. Specifications

Feature	Detail
Brand	HOMCOM
Model	7.5ft Smart Prelit Christmas Tree
Product Dimensions	59.1"D x 59.1"W x 90"H
Color	Green
Material	Alloy Steel, Plastic
Item Weight	39.7 Pounds
Item Package Quantity	1
Recommended Uses	Indoor
Special Features	App Controlled, Bluetooth Enabled, Flame Resistant, Prelit, Remote Controlled
Tree Type	Pine
Base Type	Stand
Built-in Light	Yes
Light Color	Full-Spectrum RGB
Number of Branch Tips	2247

Feature	Detail
Number of LEDs	698

9. Warranty and Support

For warranty information or technical support, please refer to the product packaging or contact HOMCOM customer service directly. Keep your purchase receipt for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FRL55Q9V

More documents and user manuals: **https://manuals.plus/**