Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Timethink B0FRLQ8J5H

Timethink 12-Inch LED Digital Wall Clock

Model: B0FRLQ8J5H

Introduction

Thank you for choosing the Timethink 12-Inch LED Digital Wall Clock. This clock features a large display, automatic dimming, and shows time, date, day of the week, and indoor temperature. This manual provides detailed instructions for proper setup, operation, and maintenance to ensure optimal performance and longevity of your device.

Product Features

- Large 12-inch LED display for clear visibility.
- Displays time (12/24 hour format), date (day/month), day of the week, and indoor temperature.
- Automatic dimming function adjusts brightness based on ambient light.
- Memory function retains settings during power outages (requires backup batteries).
- Versatile placement: suitable for wall mounting or desk use with a removable stand.
- Built-in temperature sensor with ±2°F accuracy.

Package Contents

- Digital Clock (1)
- USB Power Cord (1)
- Instruction Manual (1)

Note: Power adapter, 2 x AAA batteries, and 1 x CR2032 battery are not included and must be purchased separately.

Setup

1. Powering the Clock

The clock requires continuous power via the included USB cord. An adapter (not included) is necessary to connect the USB cord to a standard wall outlet. The clock will not operate without being plugged in.



Image: The clock requires a USB power supply and an adapter (not included) to function. It does not run on batteries alone.

2. Installing Backup Batteries

For the memory function, install 2 x AAA batteries and 1 x CR2032 battery (not included) into their respective compartments on the back of the clock. These batteries ensure that time and settings are retained in case of a power outage, preventing the need for re-setup when power is restored.



Image: Back panel details, including the CR2032 battery compartment (for memory function) and the concealed power jack.

3. Placement

The clock can be placed on a desk using the included standing sticks or mounted on a wall using the hanging hole on the back. Ensure the clock is placed in a location with access to a power outlet.



Image: The clock's dimensions, indicating its suitability for both wall and desk placement.

Operating Instructions

1. Initial Power On

Once plugged in, the clock will power on and display the default time. If backup batteries are installed, it will attempt to retrieve previous settings.

2. Setting Time and Date

Refer to the 'Easy Setting Buttons' located on the back of the clock (see 'Back Details' image in Setup section). Typically, there are buttons for 'SET', 'UP', and 'DOWN'.

1. Press the **SET** button to enter setting mode. The first adjustable item (e.g., hour) will flash.
2. Use the **UP** and **DOWN** buttons to adjust the value.
3. Press **SET** again to confirm the current setting and move to the next item (e.g., minute, 12/24hr format, year, month,

day).

4. Repeat steps 2 and 3 until all desired settings are configured.
5. Press **SET** one last time or wait for a few seconds for the clock to exit setting mode automatically.

3. 12/24 Hour Format

During time setting, you will encounter an option to switch between 12-hour (with AM/PM indicator) and 24-hour formats. Use the UP/DOWN buttons to select your preference.

4. Automatic Dimming

The clock features an automatic dimming function. From approximately 10:00 PM to 6:59 AM, the display brightness will automatically reduce to prevent glare and ensure comfortable viewing in low-light conditions. During daytime hours, the brightness will return to its standard level.



Image: The clock's automatic dimming feature, which adjusts brightness for day and night viewing.

5. Display Information

The clock continuously displays the current time, day of the week, date (month/day), and indoor temperature. The temperature is measured by a built-in sensor.

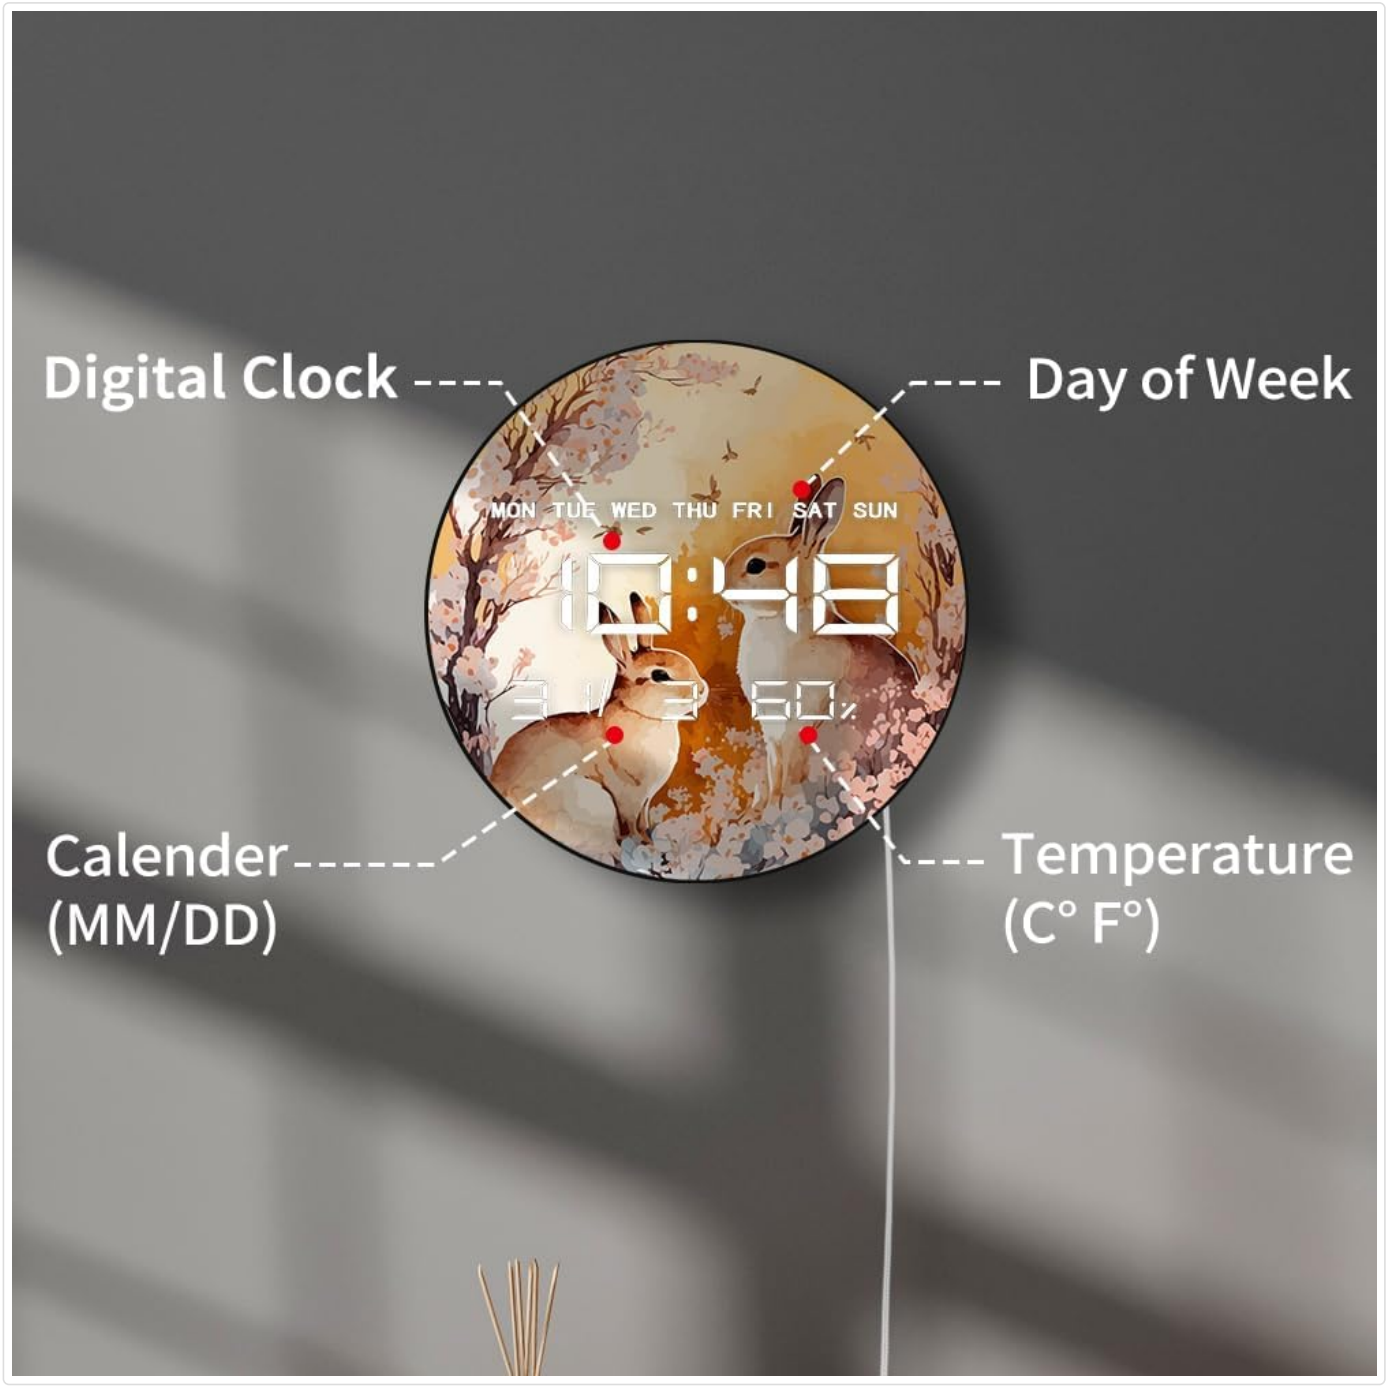


Image: Detailed view of the clock display, highlighting the digital time, day of the week, calendar, and temperature readings.

Maintenance

- **Cleaning:** Wipe the clock surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as they may damage the display or casing.
- **Battery Replacement:** Replace the AAA and CR2032 backup batteries annually or when you notice settings are no longer retained during power interruptions. Ensure correct polarity when inserting new batteries.
- **Power Cord:** Regularly check the USB power cord for any signs of damage. If damaged, discontinue use and replace it with a compatible cord.

Troubleshooting

Problem	Possible Cause	Solution
Clock display is off.	Not plugged in; power outage; faulty power cord/adapter.	Ensure the USB cord is securely plugged into the clock and a working power outlet via an adapter. Check if the outlet has power. Replace power cord/adapter if damaged.
Settings are lost after power disconnection.	Backup batteries are dead or not installed.	Install new 2 x AAA and 1 x CR2032 batteries, ensuring correct polarity.
Display is too dim or too bright.	Automatic dimming function is active; ambient light conditions.	The clock automatically adjusts brightness. This is normal operation. Ensure the light sensor is not obstructed.
Time/Date is incorrect.	Incorrectly set; power interruption without backup batteries.	Follow the 'Setting Time and Date' instructions to reset. Ensure backup batteries are installed.
Temperature reading seems inaccurate.	Clock placed near heat/cold source; sensor obstruction.	Relocate the clock away from direct sunlight, vents, or other temperature-influencing sources. Allow time for the sensor to stabilize.

Specifications

Feature	Detail
Brand	Timethink
Model	B0FRLQ8J5H
Display Type	Digital LED
Product Dimensions	30.48 x 3.81 x 30.48 cm (12 x 1.5 x 12 inches)
Item Weight	816.47 g (1.8 lbs)
Material	Plastic
Power Supply	USB (DC5V input), adapter not included
Backup Batteries	2 x AAA, 1 x CR2032 (not included)
Special Features	Auto-Brightness, Corded, Temperature Display, Wall & Desk Use, Large LED Display

Warranty and Support

For warranty information or technical support, please refer to the retailer's return policy or contact the manufacturer directly through their official website or customer service channels. Please retain your purchase receipt for any warranty claims.

© 2025 Timethink. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FRLQ8J5H

More documents and user manuals: **https://manuals.plus/**