**PEICHENG Q8SPRO**

# PEICHENG Q8SPRO Android 14.0 Tablet 7-inch User Manual

Model: Q8SPRO

## INTRODUCTION

Thank you for choosing the PEICHENG Q8SPRO Android 14.0 Tablet. This manual provides essential information for setting up, operating, and maintaining your device. Please read it carefully to ensure proper use and to maximize your tablet's performance.

## WHAT'S IN THE BOX

Upon unpacking, please verify that all items listed below are present and in good condition:

- PEICHENG Q8SPRO Android 14.0 Tablet
- USB Charging Cable
- User Manual (this document)

## PRODUCT OVERVIEW

Familiarize yourself with the physical features and components of your PEICHENG Q8SPRO Tablet.

**Figure 1:** Front view of the PEICHENG Q8SPRO Tablet, illustrating its 7-inch IPS screen, Android 14.0 OS, RK3326S CPU, 3+5GB RAM, 32GB ROM, 2MP/2MP cameras, 3000mAh battery, and WiFi6 connectivity.

**Figure 2:** Rear and front views of the tablet, highlighting the 2MP front and 2MP back cameras.

## SETUP

### 1. Charging the Tablet

Before first use, fully charge your tablet. Connect the provided USB charging cable to the tablet's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side or top edge) until the screen lights up and the PEICHENG logo appears.
- **To Power Off:** Press and hold the Power button until a power menu appears on the screen. Select "Power off" and confirm.
- **To Restart:** From the power menu, select "Restart".

### 3. Initial Setup Wizard

The first time you power on your tablet, you will be guided through an initial setup process. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Set up your Google account (or skip for later).
- Review and accept terms and conditions.

## 4. Inserting a MicroSD Card

The tablet supports up to 1TB of expandable storage via a MicroSD card. Locate the MicroSD card slot (often covered by a small flap on the side). Gently insert the MicroSD card with the gold contacts facing down until it clicks into place. You may need to format the card via the tablet's settings for optimal use.

## OPERATING THE TABLET

### 1. Basic Navigation

The PEICHENG Q8SPRO uses a touch-sensitive screen for navigation:

- **Tap:** To open an app, select an item, or press a button.
- **Tap & Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages, lists, or switch between home screens.
- **Pinch:** To zoom in or out on images and web pages.

### 2. Connecting to Wi-Fi

To connect to the internet:

1. Go to **Settings** > **Network & internet** > **Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

### 3. Pairing Bluetooth Devices

To connect Bluetooth headphones, speakers, or other devices:

1. Go to **Settings** > **Connected devices** > **Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the "Available devices" list and follow any on-screen prompts to complete pairing.

### 4. Using the Camera

The tablet features a 2MP front camera and a 2MP rear camera.

1. Open the **Camera** app.
2. Tap the camera switch icon to alternate between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

### 5. Managing Applications

You can download new applications from the Google Play Store. To manage installed apps:

- **Install:** Open the **Play Store** app, search for your desired app, and tap**Install**.
- **Uninstall:** Go to **Settings** > **Apps** > **See all apps**. Select the app you wish to uninstall and tap **Uninstall**.
- **Force Stop/Clear Cache:** If an app is misbehaving, you can force stop it or clear its cache from the app info page in Settings.
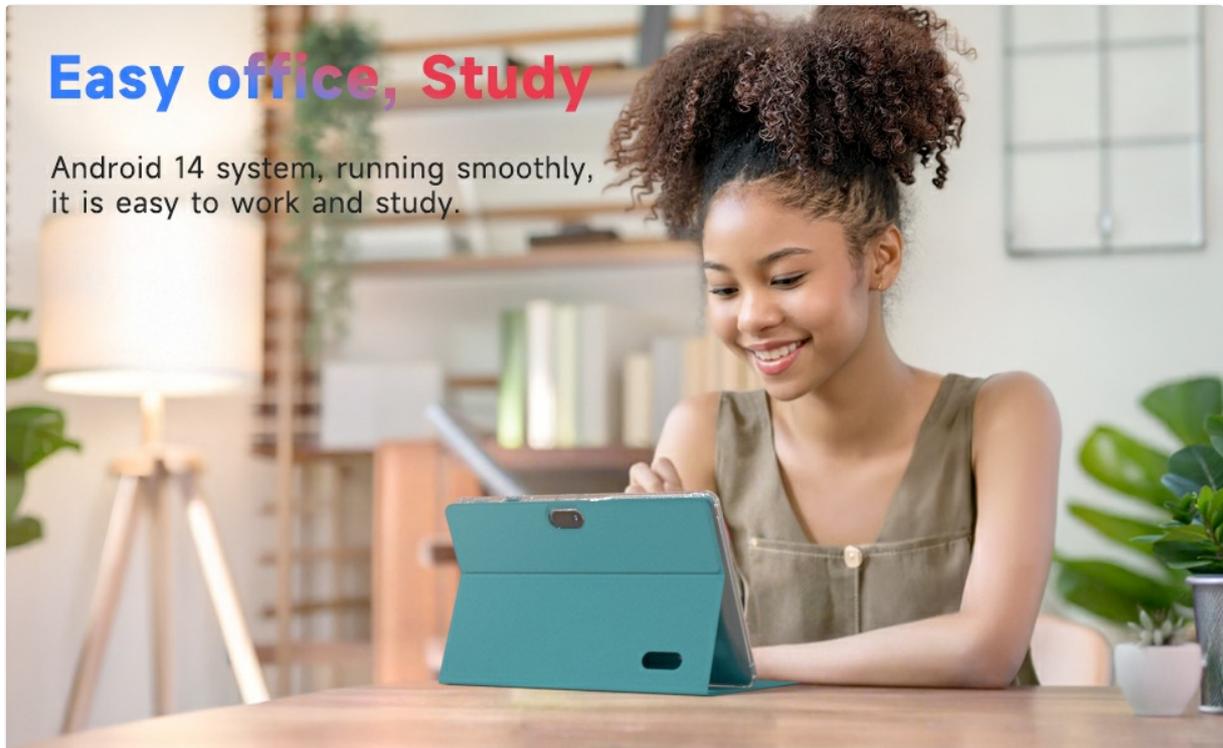


Figure 3: The tablet in use, demonstrating its suitability for various tasks.

## MAINTENANCE

### 1. Cleaning the Tablet

To clean your tablet, power it off and disconnect all cables. Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Avoid harsh chemicals, abrasive materials, or excessive moisture.

### 2. Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold).
- Do not allow the battery to fully discharge frequently. Charge it before it drops below 20%.
- Use only the provided or certified charging cables.

### 3. Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to **Settings** > **System** > **System update**.

**Figure 4:** The tablet's protective case helps prevent damage from accidental drops.

## TROUBLESHOOTING

If you encounter issues with your tablet, try the following solutions:

- **Tablet will not turn on:**

  - Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on.
  - Perform a forced restart by holding the Power button for 10-15 seconds.

- **Slow performance or apps crashing:**

  - Close unused applications running in the background.
  - Clear the cache of problematic apps (**Settings** > **Apps** > select app > **Storage & cache** > **Clear cache**).
  - Restart the tablet.
  - Ensure sufficient free storage space.

- **Wi-Fi connection issues:**

  - Ensure Wi-Fi is enabled on the tablet.
  - Restart your Wi-Fi router.
  - Forget the network and reconnect (**Settings** > **Network & internet** > **Wi-Fi** > tap network > **Forget**).

- **Screen not responding:**

  - Perform a forced restart.
  - Ensure the screen is clean and free of debris.

## SPECIFICATIONS

| Feature | Specification |
| --- | --- |
| Model | Q8SPRO |
| Operating System | Android 14.0 |
| Processor | 1.5 GHz Quad-core (RK3326S) |
| RAM | 8GB (3GB fixed + 5GB extended) |
| Internal Storage (ROM) | 32GB |
| Expandable Storage | Up to 1TB via MicroSD card |
| Screen Size | 7-inch IPS |
| Screen Resolution | 1024 x 600 pixels |
| Cameras | Front 2MP, Rear 2MP |
| Wireless Connectivity | Wi-Fi (802.11ac, WiFi6), Bluetooth |
| Battery | 3000mAh Lithium Ion (included) |
| Dimensions (LxWxH) | 7 x 3.2 x 0.3 inches |
| Weight | 1.19 pounds |

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the time of purchase or contact PEICHENG customer service through their official channels. Keep your purchase receipt as proof of purchase for warranty claims.

## SAFETY INFORMATION

- Do not attempt to disassemble, repair, or modify the tablet yourself. This may void the warranty and cause damage.
- Keep the tablet away from water, moisture, and extreme temperatures.
- Avoid dropping or subjecting the tablet to strong impacts.
- Use only approved accessories and chargers.
- Dispose of the tablet and its battery responsibly according to local regulations.