Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Stromberg Carlson Groove 30W, Zing Mini 5W

Stromberg Bluetooth Speaker Bundle User Manual

Groove 30W Portable Speaker & Zing Mini 5W Waterproof Speaker

Introduction

This manual provides detailed instructions for the Stromberg Groove 30W Portable Speaker and the Stromberg Zing Mini 5W Waterproof Speaker. Please read this manual thoroughly before using your speakers to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.

Product Overview

Stromberg Groove 30W Portable Speaker



The Stromberg Groove is a powerful 30W portable speaker designed for immersive audio. It features crystal-clear sound with deep bass, integrated RGB lighting, and offers up to 12 hours of continuous playtime. Connectivity options include Bluetooth, AUX, and FM radio. Its robust design is splash-resistant (IPX4).

Stromberg Zing Mini 5W Waterproof Speaker



The Stromberg Zing Mini is a compact 5W speaker delivering balanced, high-quality sound through its 1.75-inch tweeter. It provides up to 6 hours of playtime and supports Bluetooth and 3.5mm AUX input. The Zing Mini is lightweight and waterproof, making it ideal for on-the-go use. It also features Stromberg Connect technology for stereo pairing.

Setup

1. Unboxing and Initial Charge

Carefully remove both speakers and their accessories from the packaging. It is recommended to fully charge both the Groove and Zing Mini speakers before first use. Connect the provided charging cables to the respective charging ports on each speaker and to a suitable USB power adapter (not included).

- **Groove Speaker:** Charging indicator will show charging status.
- **Zing Mini Speaker:** Charging indicator will show charging status.

2. Powering On/Off

- **To Power On:** Press and hold the Power button on either speaker until you hear an audible prompt or see the indicator lights illuminate.
- **To Power Off:** Press and hold the Power button again until the speaker powers down.

Operating Instructions

Bluetooth Pairing (Groove & Zing Mini)

1. Ensure the speaker is powered on and in Bluetooth pairing mode (usually indicated by a flashing LED).
2. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
3. Select "Stromberg Groove" or "Stromberg Zing Mini" from the list.
4. Once paired, you will hear a confirmation sound, and the LED indicator will become solid.

AUX Input (Groove & Zing Mini)

For devices without Bluetooth, use a 3.5mm audio cable (not included) to connect your device to the AUX input port on the speaker. The speaker will automatically switch to AUX mode.



The Zing Mini speaker supports both Bluetooth and 3.5mm AUX input for versatile audio playback.

Stromberg Groove Specific Features

- **FM Radio:** Press the Mode button to switch to FM radio mode. Use the volume buttons to scan for stations.
- **RGB Lighting:** The Groove speaker features integrated RGB lighting. Refer to the speaker's controls for adjusting lighting modes or turning them off.



The Stromberg Groove speaker is IPX4 splash-proof, making it suitable for various environments. Its illuminated panels enhance the listening experience.

Stromberg Connect (Zing Mini & Groove)

Stromberg Connect technology allows you to pair two Zing Mini speakers together for a stereo experience, or link a Zing Mini with a compatible Groove speaker for synchronized audio. Follow the specific pairing instructions provided with each speaker for TWS (True Wireless Stereo) or multi-speaker linking.



Stromberg Connect enables pairing of compatible speakers for an enhanced stereo sound experience.

General Controls (Both Speakers)

- **Volume Up/Down:** Press the '+' or '-' buttons.
- **Play/Pause:** Press the Play/Pause button.
- **Skip Track:** Double-press the '+' or '-' buttons (functionality may vary by model).

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker surfaces. Do not use abrasive cleaners or solvents.
- **Storage:** Store speakers in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speakers regularly, even if not in use for extended periods.
- **Water Resistance (Zing Mini):** While the Zing Mini is waterproof, avoid prolonged submersion. Ensure charging port covers are securely closed before exposure to water.
- **Splash Resistance (Groove):** The Groove speaker is IPX4 splash-resistant. Avoid direct water jets or submersion.

Troubleshooting


Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source and try again.
No sound from the speaker.	Check the volume level on both the speaker and your connected device. Ensure the correct input mode (Bluetooth/AUX) is selected. Re-pair the Bluetooth device.
Bluetooth pairing fails.	Ensure the speaker is in pairing mode and within range of your device. Turn off and on Bluetooth on your device. Forget the speaker from your device's Bluetooth list and try pairing again.
Poor sound quality.	Move the speaker closer to your Bluetooth device. Ensure there are no obstructions. Try a different audio source or cable (for AUX).

Specifications

Stromberg Groove 30W Portable Speaker

- **Output Power:** 30W
- **Playtime:** Up to 12 hours
- **Connectivity:** Bluetooth, 3.5mm AUX, FM Radio
- **Special Features:** Integrated RGB Lighting, IPX4 Splash-Resistant

Stromberg Zing Mini 5W Waterproof Speaker

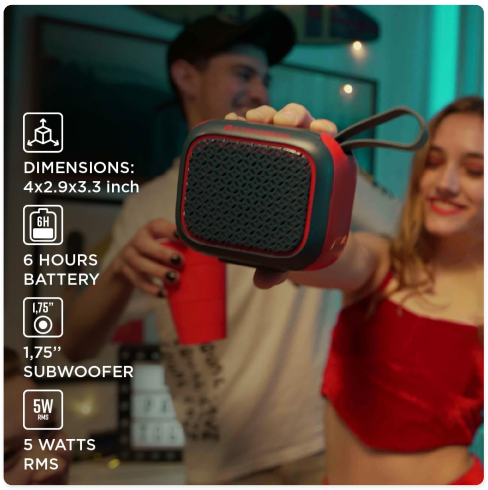

- **Output Power:** 5W RMS
- **Playtime:** Up to 6 hours
- **Tweeter Size:** 1.75 inches
- **Connectivity:** Bluetooth, 3.5mm AUX
- **Special Features:** Waterproof, Stromberg Connect Technology
- **Dimensions:** Approximately 4 x 2.9 x 3.3 inches

Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Stromberg Carlson website. You may also contact customer service through the retailer where the product was purchased.

© 2024 Stromberg Carlson. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FVPHV81Y

More documents and user manuals: **https://manuals.plus/**