Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PROGRACE T8

PROGRACE Kids Smart Phone T8 Instruction Manual

Model: T8

Introduction What's in the Box Setup Operating Instructions Parental Controls Specifications Maintenance Troubleshooting Warranty & Support

1. Introduction

The PROGRACE Kids Smart Phone T8 is an all-in-one device designed for children aged 5-14, combining safe communication, education, and entertainment. This smart phone supports talking and texting, allowing children to stay connected with parents. It functions as a learning tablet, inspiring curiosity and creativity through preloaded educational apps, STEM activities, logic games, and children's videos. The device features a 4.2" IPS eye-protection touchscreen, dual cameras, large storage capacity, and advanced parental controls to ensure a safe and engaging digital experience.

2. What's in the Box

- 1x Kids Phone
- 32GB Card (Pre-installed)
- User Manual
- Lanyard
- Type-C Cable

3. Setup Guide

3.1. Initial Charging

Before first use, fully charge the PROGRACE Kids Smart Phone T8 using the provided Type-C cable. Connect the cable to the phone's charging port and a compatible USB power adapter (not included). The device features a 3500mAh polymer battery for long-lasting use.

3.2. Power On/Off

- **To Power On:** Press and hold the Power button located on the side of the device until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off menu appears on the screen. Select 'Power Off' and confirm.

3.3. SIM Card Installation (Optional)

The PROGRACE Kids Smart Phone T8 accepts a standard Nano SIM card for talk and text functionality. A SIM card is NOT included and must be purchased separately from your carrier (compatible with AT&T SIM cards for stable calling and Wi-Fi connection).

1. Locate the SIM card slot on the side of the device.
2. Carefully open the SIM card tray using the provided SIM ejector tool (if included) or a small paperclip.
3. Place the Nano SIM card into the tray with the gold contacts facing down.
4. Gently push the tray back into the device until it clicks into place.

3.4. SD Card (Storage)

The phone comes with 16GB built-in storage and a free 32GB SD card pre-installed, providing ample space for photos, videos, and learning materials. The SD card slot is typically located near the SIM card slot.

3.5. Setting Date and Time

Upon first power-on or after a factory reset, you may be prompted to set the correct date and time. Follow the on-screen instructions to adjust these settings.

Video: Initial setup and date/time configuration on the PROGRACE Kids Smart Phone.

4. Operating Instructions

4.1. Navigation

The phone features a 4.2" IPS touchscreen. Swipe left or right to navigate between app screens. Tap on icons to open applications. Use the Home button (physical button below the screen) to return to the main home screen.

4.2. Calls & Texts

With a Nano SIM card installed, children can make and receive calls and send text messages to approved contacts. Parental controls allow for managing contacts and communication limits.



Image: The PROGRACE Kids Smart Phone displaying its call and text messaging interface, including an approved contacts list.

Video: Demonstration of text and call features on the PROGRACE Kids Smart Phone.

4.3. Camera Functions

The device is equipped with dual cameras: a 2MP front camera and a 13MP rear camera. It supports autofocus, selfies, video recording, and burst shooting. The vivid image quality helps capture childhood moments.

- **Take Photos:** Open the Camera app and tap the shutter button.
- **Record Videos:** Switch to video mode within the Camera app and tap to start/stop recording.
- **Selfies:** Use the front camera for self-portraits.



Image: The PROGRACE Kids Smart Phone showcasing its 2MP front and 13MP rear dual cameras, capable of 1080P Full HD video.

4.4. Music & Video Player

Children can enjoy preloaded music and videos, or parents can add their own content via the SD card. The device supports various media formats for entertainment.

4.5. Educational & Entertainment Content

The phone comes preloaded with over 200 educational games and apps, including Montessori learning apps, STEM activities, logic games, and creative tools like Art & Craft. These encourage problem-solving and healthy screen time.



Image: The PROGRACE Kids Smart Phone showing a variety of educational games and apps, including Montessori, STEM, and Brain Training.

Video: A demonstration of brain-teasing games available on the PROGRACE Kids Smart Phone.

Video: Overview of the general content and features of the PROGRACE Kids Smart Phone.

Video: A user demonstrating how to learn and interact with the PROGRACE Kids Smart Phone.

Video: A child happily interacting with the PROGRACE Kids Smart Phone.

5. Parental Controls

The PROGRACE Kids Smart Phone T8 features advanced parental controls through the iWawa kids system, providing peace of mind for parents. These controls help manage app access, set screen time limits, and monitor usage.

- **App Restrictions:** Manage which apps your child can access. The phone comes with preloaded, hand-picked educational apps, and no-download design prevents unauthorized purchases or exposure to unsuitable material.

- **Screen Time Limits:** Set daily or weekly limits for device usage to encourage healthy digital habits.
- **Usage Reports:** View reports on your child's activity and app usage.
- **Whitelist Mode:** Enable a whitelist to ensure safe browsing and communication only with approved contacts.
- **Password Protection:** Secure parental settings with a password to prevent children from altering them.



Image: The PROGRACE Kids Smart Phone displaying its parental control interface, including options for app restrictions, time limits, and usage statistics.

6. Specifications

Model Number	T8
Screen Size	4.2 inches IPS Eye-Protection Display
Front Camera	2MP

Rear Camera	13MP
Video Recording	1080P Full HD
Internal Storage	16GB
Expandable Storage	32GB SD Card (pre-installed)
Battery Capacity	3500mAh Polymer Battery
Connectivity	Wi-Fi, Nano SIM (not included, AT&T compatible)
Operating System	iWawa Kids System
Protection	Soft Silicone Case (shockproof, drop-resistant)
Product Dimensions	6.72 x 3.85 x 1.65 inches
Item Weight	9.9 ounces
Recommended Age	36 months - 14 years

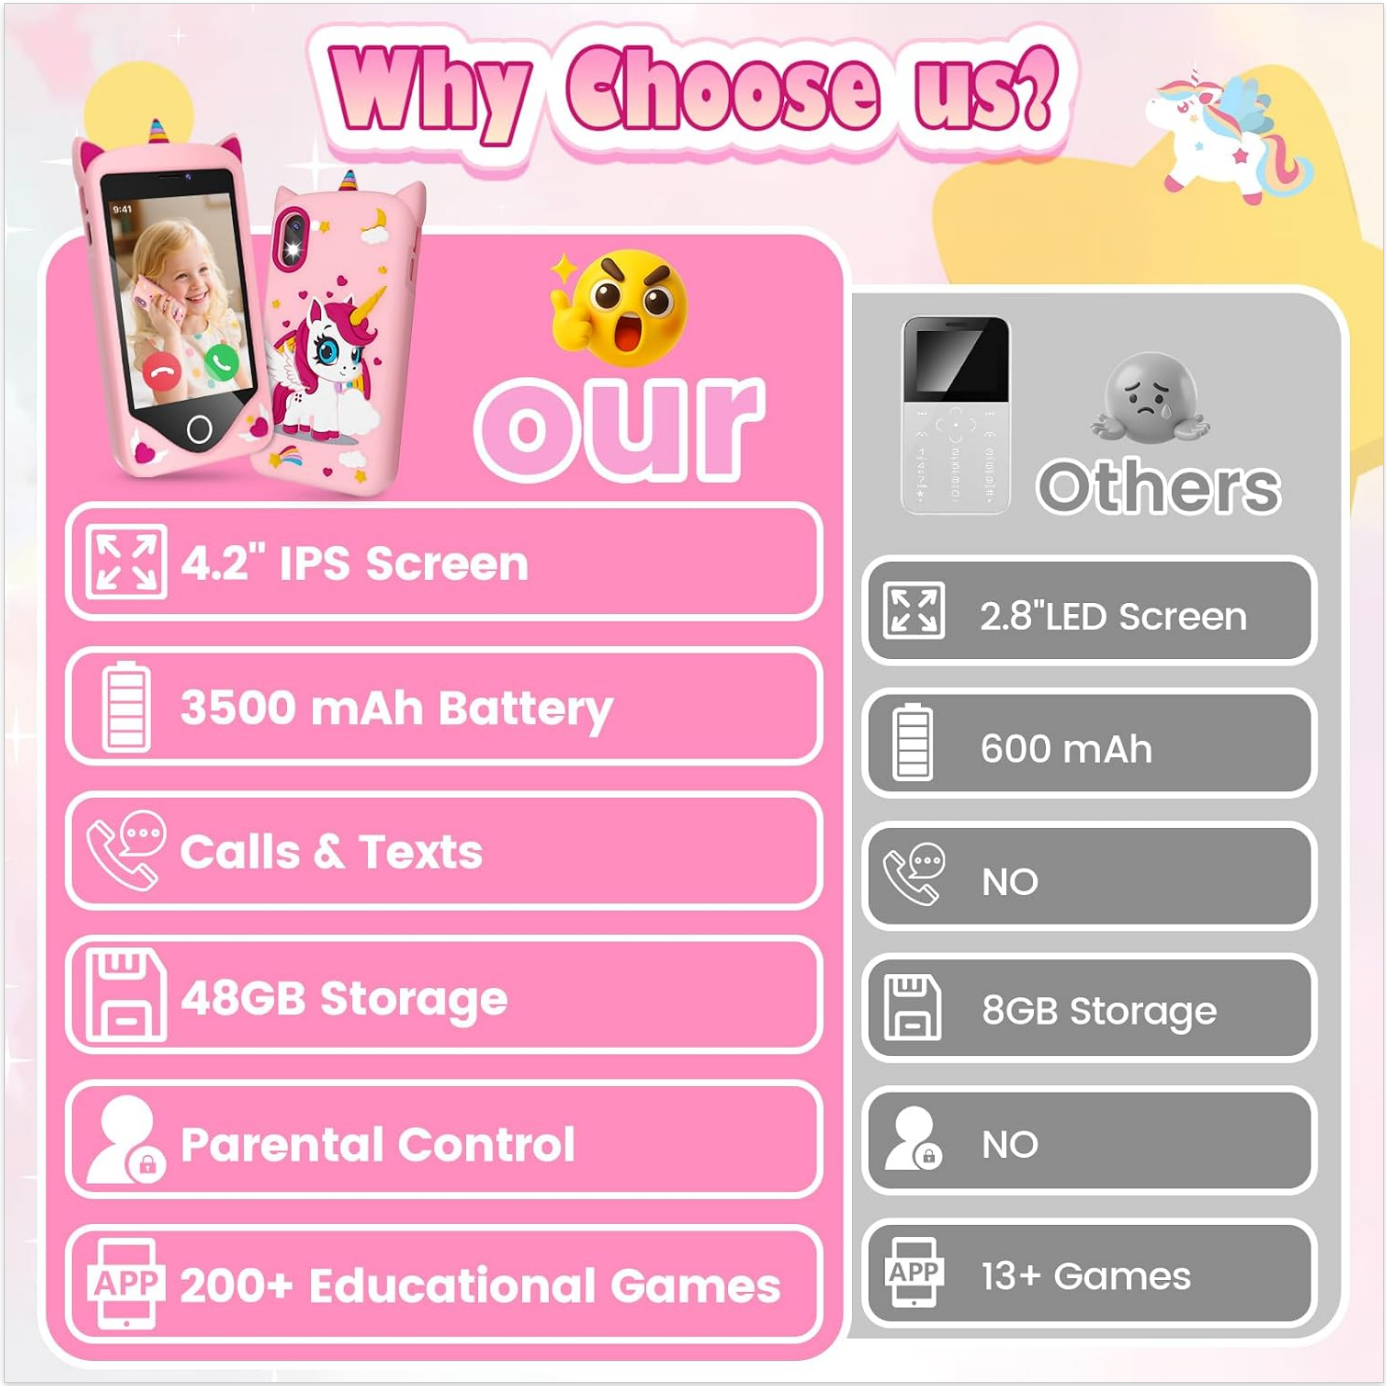


Image: The PROGRACE Kids Smart Phone highlighting its 3500mAh battery for 24 hours of use and 16GB built-in storage plus 32GB SD card for over 10,000 photos and videos.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the device. Avoid using harsh chemicals or abrasive materials.
- **Protection:** The phone comes with a soft silicone case for shockproof and drop-resistant protection. Ensure the case is properly fitted to maximize protection.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly.

8. Troubleshooting

- **Device Not Turning On:** Ensure the battery is charged. Connect the device to the charger and try powering it on after a few

minutes.

- **Screen Unresponsive:** Try restarting the device by holding down the Power button. If unresponsive, allow the battery to fully drain and then recharge.
- **Apps Not Working:** Check parental control settings to ensure the app is not restricted. Restart the device.
- **No Calls/Texts:** Verify that a Nano SIM card is correctly installed and activated with a compatible carrier. Check network signal strength.
- **Storage Full:** Delete unnecessary photos, videos, or apps. The device supports expandable storage via the pre-installed 32GB SD card.

9. Warranty & Support

For warranty information and customer support, please refer to the documentation included in your product packaging or visit the official PROGRACE website. The manufacturer is PROGRACE.
You can also visit the **PROGRACE Store on Amazon** for additional product information and support resources.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FVS1XGXK

More documents and user manuals: **https://manuals.plus/**