Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FXWONTY FX-ANC043

FXWONTY Hybrid Active Noise Cancelling Headphones

Model: FX-ANC043

Introduction

This manual provides detailed instructions for the use and care of your FXWONTY Hybrid Active Noise Cancelling Headphones, model FX-ANC043. These headphones feature advanced hybrid active noise cancellation, Hi-Res audio, Bluetooth 5.4 connectivity, and a transparency mode for enhanced situational awareness. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your listening experience.

What's in the Box

- FXWONTY Hybrid Noise Cancelling Headphones (Black)
- Portable Storage Bag
- AUX 3.5mm Audio Cable
- USB-A to USB-C Charging Cable
- User Manual (this document)

Product Overview

Familiarize yourself with the various components and controls of your headphones.



Image: Front view of the FXWONTY Hybrid Active Noise Cancelling Headphones.



Image: Close-up view of the control buttons located on the earcup. These typically include power, volume, and ANC/Transparency mode buttons.



Image: Close-up view of the USB-C charging port on the headphone earcup.



Image: Close-up view of the 3.5mm AUX audio jack on the headphone earcup.

Setup

1. Charging the Headphones

Before first use, fully charge your headphones. Connect the provided USB-A to USB-C charging cable to the charging port on the headphones and to a USB power source (e.g., computer, wall adapter). The charging indicator light will show the charging status. A full charge takes approximately 1.5 hours.



Image: The headphones connected to a charger, illustrating the charging process and battery life.

2. Bluetooth Pairing

1. Ensure the headphones are charged and powered off.
2. Press and hold the Power button for approximately 3-5 seconds until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, laptop, tablet), enable Bluetooth and search for available devices.
4. Select "FX-ANC043" from the list of devices.

5. Once connected, the LED indicator will flash blue slowly or turn solid blue (depending on model).

The headphones support Bluetooth V5.4 for stable and low-latency audio transmission.



Image: The headphones shown connected wirelessly to a laptop and a tablet, demonstrating dual connectivity.

3. Dual Connectivity

The FX-ANC043 headphones can connect to two Bluetooth devices simultaneously. After pairing with the first device, disable Bluetooth on that device. Pair the headphones with the second device. Then, re-enable Bluetooth on the first device, and the headphones should automatically connect to both. This allows for seamless switching between audio sources.

4. Wired Connection (AUX Mode)

For non-Bluetooth devices or when battery is low, use the included 3.5mm AUX audio cable. Plug one end into the headphone's 3.5mm jack and the other end into your audio source's AUX output. The headphones will automatically switch to wired mode.



Image: An exploded view of the headphone earcup, showcasing the internal audio driver components responsible for Hi-Res audio quality.

Operating Instructions

1. Power On/Off

- **Power On:** Press and hold the Power button for 2 seconds.
- **Power Off:** Press and hold the Power button for 3 seconds.

2. Active Noise Cancellation (ANC)

The headphones feature hybrid ANC technology to reduce ambient noise by up to 42dB. This is ideal for environments with low-frequency sounds like airplane engines or city traffic.

- **Activate ANC:** Press the ANC button (usually a dedicated button or a short press on the power button, refer to specific button layout).
- **Deactivate ANC:** Press the ANC button again.



Image: A man wearing the headphones in a busy outdoor setting, illustrating the effectiveness of Hybrid ANC technology in reducing external noise, accompanied by a graph showing noise reduction levels.



Image: A woman wearing the headphones, smiling, with visual cues suggesting an immersive audio experience due to active noise cancellation.

3. Transparency Mode

Transparency mode allows you to hear your surroundings clearly without removing the headphones, useful for conversations or announcements.

- **Activate Transparency Mode:** Press the ANC button repeatedly until Transparency Mode is activated (indicated by a voice prompt or specific LED pattern).
- **Deactivate Transparency Mode:** Press the ANC button again to cycle back to ANC or normal mode.

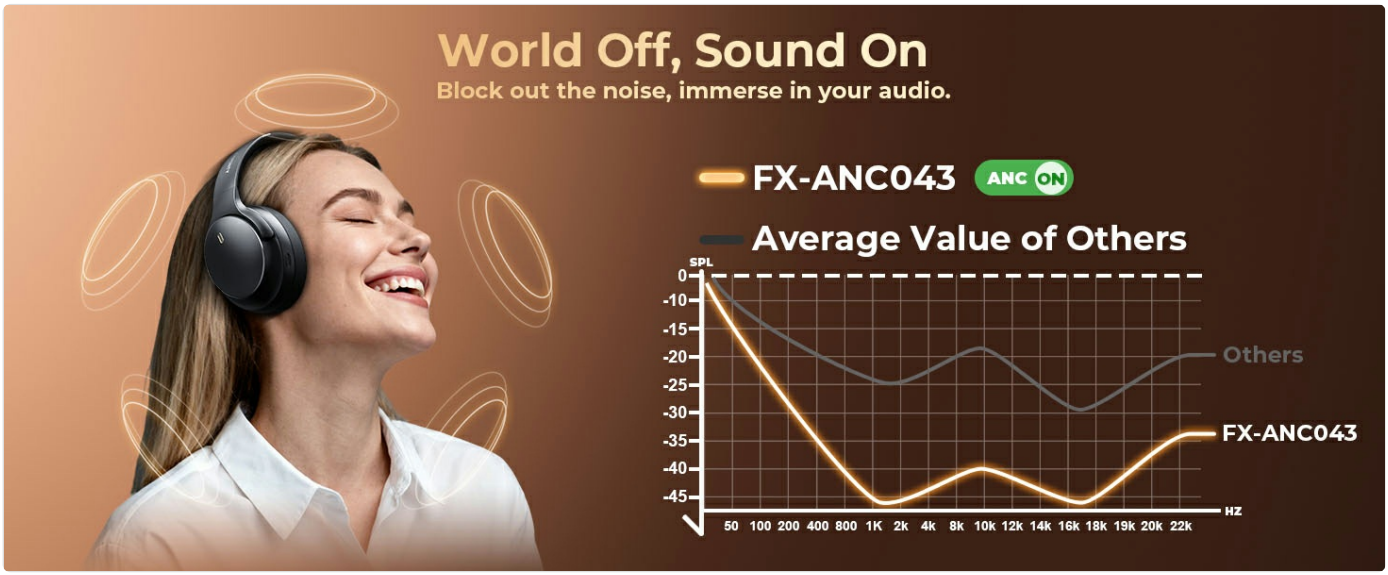


Image: Two women conversing, one wearing the headphones with "Transparency mode ON" indicated, demonstrating the ability to hear external sounds.



Image: A man wearing headphones on a subway platform, with a thought bubble indicating he can hear an announcement, highlighting the transparency mode feature.

4. Music Playback

- **Play/Pause:** Press the Multi-function button once.
- **Next Track:** Press and hold the Volume Up button for 2 seconds.
- **Previous Track:** Press and hold the Volume Down button for 2 seconds.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

5. Phone Calls

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.
- **Activate Voice Assistant:** Double-press the Multi-function button.



Image: A woman wearing the headphones while engaged in a phone call at a desk, demonstrating call functionality.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in the provided portable storage bag to protect them from dust and scratches.
- **Avoid Moisture:** The headphones are not water-resistant. Avoid exposure to water, rain, or excessive humidity.
- **Temperature:** Do not expose the headphones to extreme temperatures (hot or cold).

Troubleshooting

Problem	Possible Solution
Headphones won't power on.	Ensure the headphones are fully charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	Ensure headphones are in pairing mode (LED flashing blue/red). Disable and re-enable Bluetooth on your device. Move headphones closer to your device. Clear previous Bluetooth connections on your device and try pairing again.
No sound or low volume.	Check volume levels on both headphones and your connected device. Ensure headphones are properly connected via Bluetooth or AUX cable. If using AUX, ensure the cable is fully inserted.
ANC not working effectively.	Ensure ANC mode is activated. ANC is most effective against low-frequency, constant noise. It may not completely block out voices or sudden high-frequency sounds.
Intermittent connection.	Ensure there are no obstructions between the headphones and your device. Move closer to your device (Bluetooth range is up to 15 meters). Avoid strong electromagnetic interference.

Specifications

Feature	Detail
Model Name	FX-ANC043

Feature	Detail
Noise Control	Hybrid Noise Cancellation, Transparency Mode
Connectivity Technology	Bluetooth 5.4, AUX 3.5mm
Bluetooth Range	15 Meters
Audio Driver Size	40 Millimeters
Frequency Response	2000 Hz *(Note: This value from source data may represent a specific frequency point rather than the full range, which is typically 20Hz-20kHz for headphones.)*
Sensitivity	105 dB
Impedance	32 Ohms
Battery Life (ANC Off)	Up to 70 Hours
Battery Life (ANC On)	Up to 35 Hours
Charging Time	1.5 Hours
Audio Latency	40 Milliseconds
Weight	14.9 ounces (approx. 422 grams)
Material	ABS, Faux Leather, Stainless Steel
Water Resistance Level	Not Water Resistant
Included Components	Headphones, Portable Storage Bag, AUX Cable, USB-C Charging Cable, User Manual

Warranty and Support

For warranty information and customer support, please refer to the official FXWONTY website or contact their customer service directly. Details can typically be found on the product packaging or the manufacturer's official online channels.
Manufacturer: FXWONTY

© 2025 FXWONTY. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FVT7H9YZ

More documents and user manuals: **https://manuals.plus/**