Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DGIVOVO G1520-GR1

DGIVOVO G1520-GR1 Adjustable Touch Screen Pressure Washer User Manual

Model: G1520-GR1 | Brand: DGIVOVO

1. Introduction

This manual provides essential information for the safe and efficient operation of your DGIVOVO G1520-GR1 Adjustable Touch Screen Pressure Washer. Please read all instructions carefully before use and retain this manual for future reference.

Key Features:

- High-Performance: Up to 5000 PSI water pressure and 3.2 GPM water flow with a 2000W motor.
- Adjustable Pressure: Touch screen with 3 pressure modes (SOFT, MEDIUM, HARD) and 15 adjustable pressure levels.
- Versatile Nozzles: Includes 4 quick-connect nozzle tips (0°, 15°, 25°, 40°) and a 600ML soap bottle.
- Safety Features: Total Stop System (TSS) and Safety Lock for enhanced user protection and energy saving.
- Extended Reach: Equipped with a 35FT power cord and a 20FT high-pressure hose.
- Portability: Features 6.5-inch diameter wheels and a humanized handle for easy movement.

2. Product Overview



Figure 1: DGIVOVO G1520-GR1 Pressure Washer and included accessories.

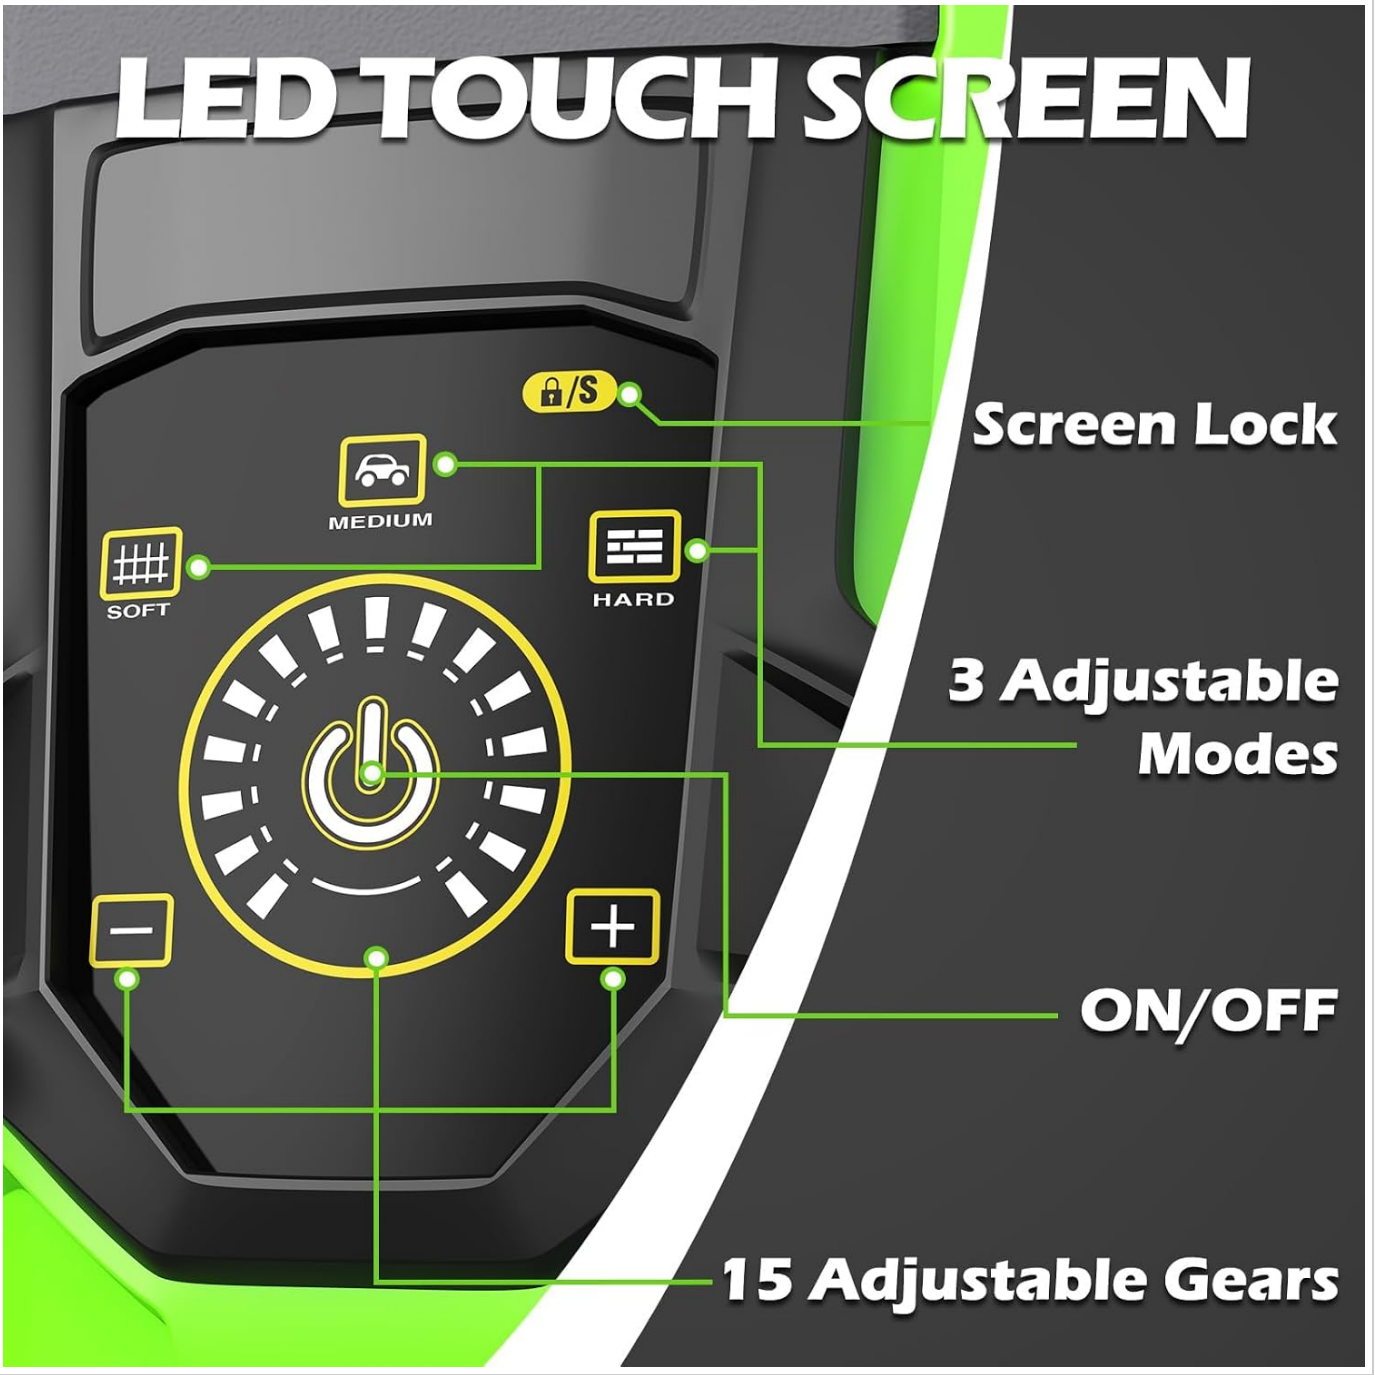


Figure 2: Detailed view of the LED touch screen for adjusting pressure modes and levels.



Figure 3: Illustration of the four quick-connect nozzles (0°, 15°, 25°, 40°) and the foam cannon attachment.

3. Setup

Follow these steps to assemble and prepare your pressure washer for operation:

1. **Attach the Handle:** Secure the handle to the main unit using the provided screws.
2. **Install Hose Reel:** Mount the hose reel onto the top of the machine and secure it with screws.
3. **Connect High-Pressure Hose:** Connect one end of the 20FT high-pressure hose to the water outlet on the pressure washer and the other end to the spray gun. Ensure connections are tight to prevent leaks.
4. **Connect Water Supply:** Attach your garden hose (not included) to the water inlet of the pressure washer.
5. **Connect Power:** Plug the 35FT power cord into a grounded electrical outlet.
6. **Attach Spray Wand:** Insert the spray wand into the spray gun and rotate to lock it securely.
7. **Select Nozzle:** Choose the appropriate quick-connect nozzle for your task and insert it into the end of the spray wand. Ensure it clicks into place.

Video 1: Demonstration of pressure washer setup and hose connections. (Source: Yuinjx, Seller)

Video 2: Overview of electric pressure washer features including hose and power cord. (Source: WISSIPRO USA, Seller)

4. Operating Instructions

Powering On:

1. Ensure all connections are secure and the water supply is turned on.
2. Press the ON/OFF button on the touch screen to power on the unit. The pump will pressurize.

Adjusting Pressure:

- Use the touch screen to select one of the 3 pressure modes: SOFT, MEDIUM, or HARD.
- Further fine-tune the pressure using the +/- buttons to choose from 15 adjustable levels.



Figure 4: Visual representation of the SOFT, MEDIUM, and HARD pressure modes for various cleaning tasks.

Nozzle Selection:

The pressure washer comes with 4 quick-connect nozzles and a soap bottle. Select the appropriate nozzle for your cleaning task:

- **0° Nozzle (Red):** Provides a concentrated, high-impact stream for tough stains and hard-to-reach areas. Use with caution on delicate surfaces.
- **15° Nozzle (Yellow):** Offers a powerful, narrow spray for heavy-duty cleaning on hard surfaces like driveways and concrete.
- **25° Nozzle (Green):** Delivers a wider spray for general cleaning of decks, patios, fences, and siding.
- **40° Nozzle (White):** Provides a broad, gentle spray for delicate surfaces such as vehicles, windows, and outdoor furniture.
- **Soap Bottle (600ML):** Attach to the spray wand for applying detergent or cleaning solutions.

Safety Features:

- **Total Stop System (TSS):** The pump automatically shuts off when the trigger is not engaged, saving energy, reducing wear, and prolonging the unit's lifespan.
- **Safety Lock:** The spray gun features a safety lock to prevent accidental activation when not in use. Always engage the safety lock when pausing or finishing your cleaning task.



Figure 5: Illustration of the safety lock mechanism on the spray gun.

5. Maintenance

Proper maintenance ensures the longevity and optimal performance of your pressure washer.

- **Cleaning:** After each use, flush the system with clean water to remove any detergent residue.
- **Nozzle Care:** Clean clogged nozzles using the included nozzle cleaning tool.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Utilize the integrated hooks for the high-pressure hose and power cord, and the dedicated spot for the soap dispenser, to keep all accessories organized and prevent damage.



Figure 6: The 6.5-inch wheels and handle facilitate easy transport and storage.

6. Troubleshooting

No specific troubleshooting information is provided in the product data. For common issues such as low pressure, motor not starting, or water leaks, please refer to the detailed troubleshooting section in the full product manual or contact customer support.

7. Specifications

Specification	Value
Brand	DGIVOVO
Model Number	G1520-GR1
Power Source	AC
Maximum Pressure	5000 PSI
Maximum Flow Rate	3.2 Gallons Per Minute
Motor Power	2000W
Hose Length	20 Feet
Power Cord Length	35 Feet
Item Weight	15 pounds
Product Dimensions	13"L x 13"W x 33"H
UPC	717373087636, 717373087537

8. Warranty & Support

Specific warranty details are not available in the provided product information. For warranty claims, technical support, or any inquiries regarding your DGIVOVO pressure washer, please contact the manufacturer directly or refer to the warranty card included with your purchase.
Manufacturer: DGIVOVO

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FVV8J6WL

More documents and user manuals: **https://manuals.plus/**