Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Liksiy FG-M03B

Liksiy FG-M03B 4-in-1 Milk Frother Instruction Manual

Model: FG-M03B

1. Introduction

Thank you for choosing the Liksiy FG-M03B 4-in-1 Milk Frother. This versatile appliance is designed to enhance your coffee experience by creating various milk textures and temperatures. Please read this manual carefully before use to ensure safe and optimal operation.

Key Features:

- **4-in-1 Multifunctional Frothing:** Easily create dense hot foam, cold foam, chocolate milk, or heat milk up to about 149°F (65°C).
- **Quiet One-Button Operation:** Simple control with LED indicators for selected function.
- **Auto Shut-Off:** For secure operation and to prevent overheating.
- **Easy to Clean:** Scratch-resistant materials and a non-stick coating for effortless maintenance.

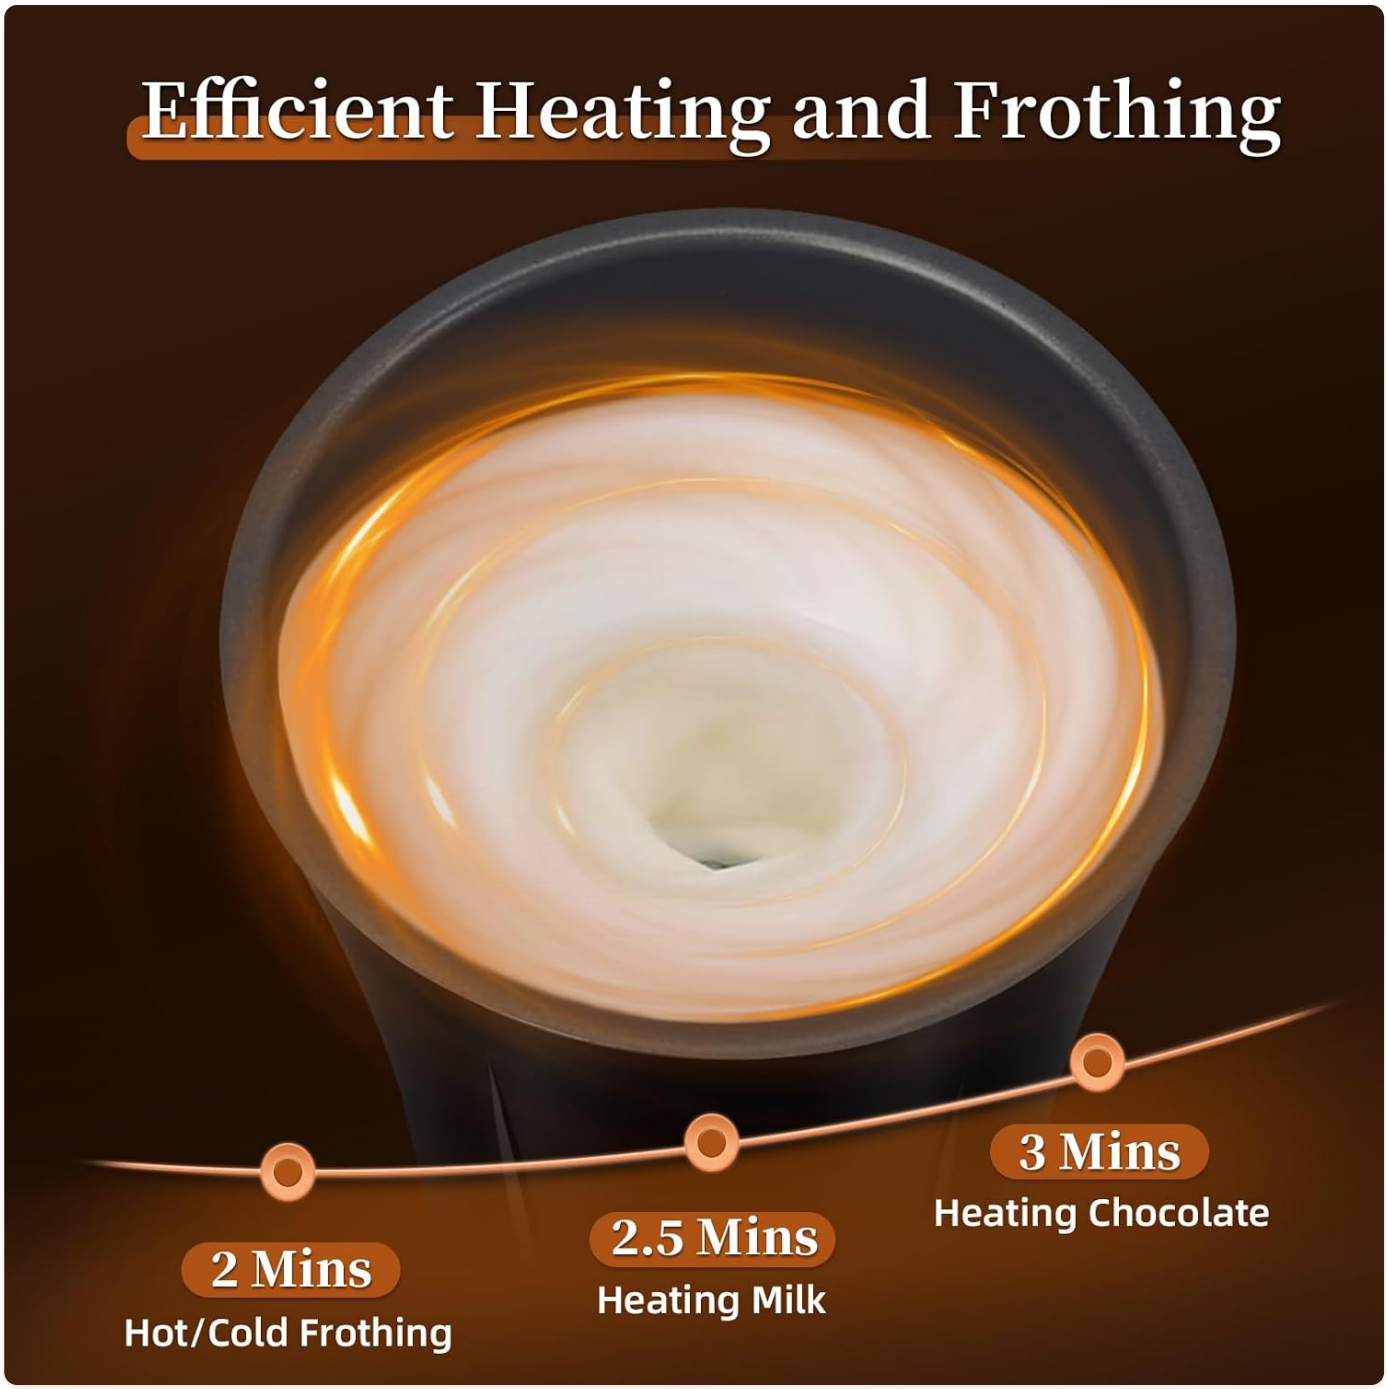


Image: The Liksiy Milk Frother displaying its four functions: warm silky milk foam, warm milk, cold milk foam, and chocolate milk.

2. Product Components

Your Liksiy Milk Frother package includes the following items:

- Milk Frother Unit (with power base)
- Froth/Whisk Accessory (pre-installed for frothing)
- Heating/Stirring Accessory (for heating milk/chocolate milk)
- Cleaning Brush Head
- User Manual



Image: All components of the Liksiy Milk Frother, including the main unit, power base, whisk, and cleaning brush.

3. Setup

1. **Placement:** Place the frother base on a dry, flat, and stable surface.
2. **Power Connection:** Connect the power base to a standard electrical outlet. You will hear a "beep" sound, and all 4 indicator lights will flash for 1 second, then turn off, indicating the frother is in standby mode.
3. **Whisk/Stirrer Selection:** Choose the appropriate accessory for your desired function. The frothing whisk (spring coil) is for creating foam. The stirring accessory (no spring coil) is for heating milk or chocolate milk without frothing. Ensure it is securely placed on the bottom of the frother.
4. **Milk Volume:** Pour milk into the frother. Observe the MAX and MIN marks inside the frother. Do not exceed the MAX mark for frothing (3.8oz/110ml) or heating (8.4oz/240ml) to prevent overflow.



Image: Internal view of the frother cup with clear MAX and MIN indicators for different milk volumes.

4. Operating Instructions

After setup, place the lid on the frother. Press the power button to cycle through the different modes. The indicator light for the selected mode will flash twice and then stay on, while other indicators will turn off. The frother will then begin operation.

Available Modes:

- **Hot Frothing:** Creates dense, warm milk foam. (Indicator: Hot coffee cup with foam)
- **Heating Milk:** Heats milk without frothing. (Indicator: Steaming milk cup)
- **Cold Frothing:** Creates cold milk foam. (Indicator: Snowflake with foam)
- **Heating Chocolate Milk:** Heats and stirs chocolate milk. (Indicator: Chocolate cup)



Image: The control panel of the Liksiy Milk Frother, showing the four distinct function icons.

Demonstration Videos:

Your browser does not support the video tag.

Video: A seller demonstrates the frother's functionality, including adding milk and selecting a frothing mode.

Your browser does not support the video tag.

Video: A seller provides an honest review, showcasing the frother's ease of use and foam quality.

Your browser does not support the video tag.

Video: A seller puts the milk frother to the test, demonstrating its performance and foam creation.

Your browser does not support the video tag.

Video: A seller reviews the milk frother, highlighting its features and ease of use for various milk preparations.

Your browser does not support the video tag.

Video: A seller provides an honest review of the milk frother and steamer, demonstrating its capabilities.

5. Cleaning and Maintenance

Proper cleaning and maintenance will ensure the longevity and optimal performance of your Liksiy Milk Frother.

Cleaning Instructions:

1. **Disconnect Power:** Always unplug the frother from the power outlet before cleaning.
2. **Remove Lid and Whisk:** Carefully remove the lid and the whisk/stirrer accessory.
3. **Clean Interior:** The interior of the frother has a non-stick coating. Wipe the interior with a soft, damp cloth and mild detergent. Rinse with clean water and dry thoroughly. Do not use abrasive cleaners or scourers.
4. **Clean Exterior:** Wipe the exterior surface with a soft, dry cloth.
5. **Wash Accessories:** Hand wash the lid and whisk/stirrer accessories with warm, soapy water. Rinse thoroughly and air dry.
6. **Do NOT Immerse:** Never immerse the frother body or the power base in water or any other liquid, as this can cause electrical damage.
7. **Storage:** Store the frother in a safe, clean, and dry place when not in use.



Image: A hand washing demonstration for the Liksiy Milk Frother, emphasizing its non-stick coating and warning against dishwasher use.

6. Troubleshooting

If you encounter any issues with your Liksiy Milk Frother, please refer to the following common solutions:

- **Frother not starting:** Ensure the power base is securely plugged in and the frother unit is correctly placed on the base. Check if the indicator lights flash upon connection.
- **Milk not frothing or heating properly:** Verify that the correct whisk/stirrer accessory is installed for the desired function. Ensure milk volume is within the MIN and MAX marks. Use fresh, cold milk for best frothing results.
- **Overflow:** Do not exceed the MAX fill line, especially for frothing, as milk expands significantly.
- **Dry Burning/Overheating:** The frother has an auto shut-off function to prevent dry burning or overheating. If the frother stops unexpectedly, allow it to cool down for 10-15 minutes before reuse.
- **Unusual Noise:** Ensure the whisk/stirrer is properly seated and there are no foreign objects inside the frother.

If the problem persists, please contact customer support for further assistance.

7. Specifications

Feature	Specification
Brand	Liksiy
Model Name	FG-M03B
Color	Black
Material	Exterior: ABS Plastic, Interior: 304 Stainless Steel with Non-Stick Coating
Capacity	240 Milliliters (Max for heating), 110 Milliliters (Max for frothing)
Power Source	Electric
Wattage	110 watts
Item Weight	0.82 Kilograms
Special Features	4-in-1 Frothing Mode, Auto Shut-Off, Hot & Cold Foam, Overflow Protection, Precise Heating 140–149°F
Product Care	Hand Wash Only

8. Warranty and Support

For warranty information and customer support, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FVWYB1CD

More documents and user manuals: **https://manuals.plus/**