Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Fotopro FY-830

Fotopro FY-830 Mini Tripod Instruction Manual

Model: FY-830

Introduction

Thank you for choosing the Fotopro FY-830 Mini Tripod. This manual provides detailed instructions for the safe and effective use of your tripod, which functions as a versatile tripod, monopod, and selfie stick. Please read this manual thoroughly before use and retain it for future reference.



Image: An overview of the Fotopro FY-830 Mini Tripod's key features, including its stable construction, compact folding, modular design, conversion to monopod and selfie stick, and compatibility with various devices.

Product Overview and Components

The Fotopro FY-830 is a versatile and compact support system designed for cameras and smartphones. It features a robust all-metal body and a 360-degree ball head for flexible positioning. Familiarize yourself with the main components:

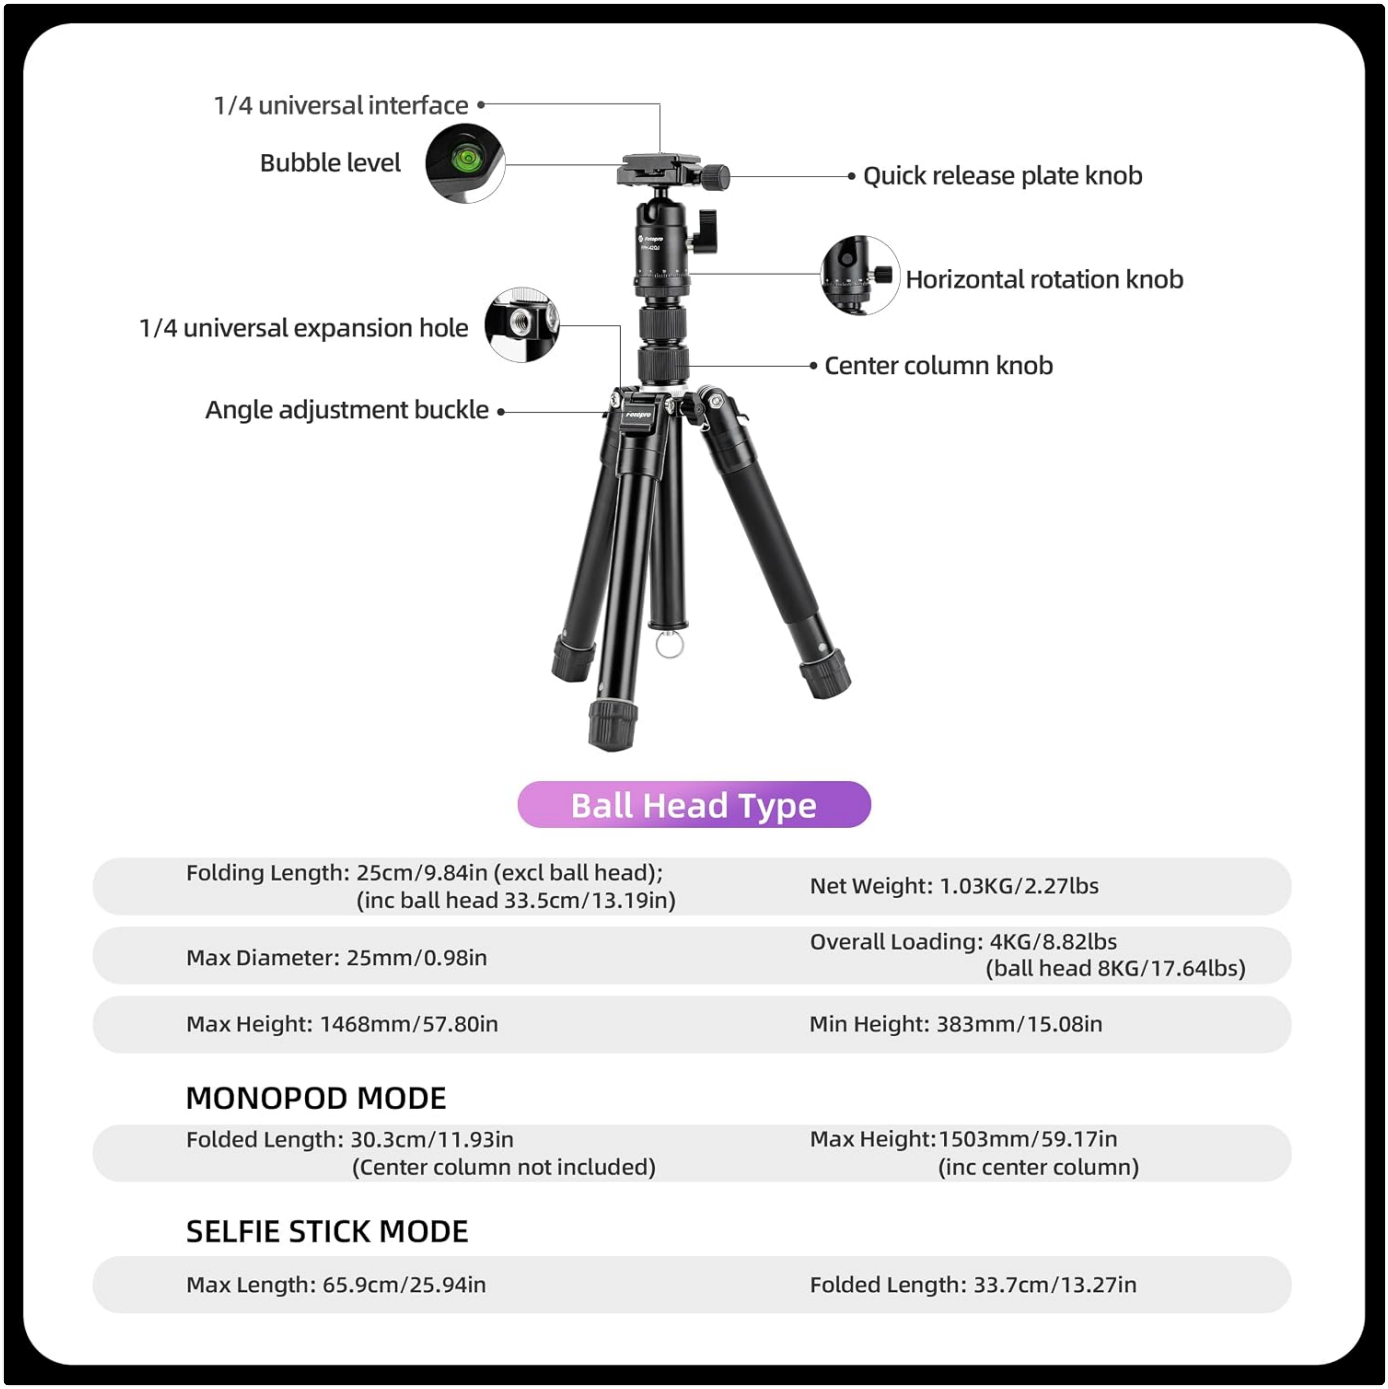


Image: A detailed diagram of the Fotopro FY-830 tripod, highlighting its key parts such as the 1/4 universal interface, bubble level, expansion hole, angle adjustment buckle, quick release plate knob, horizontal rotation knob, and center column knob.

- **1/4 Universal Interface:** Standard screw for attaching cameras or phone holders.
- **Bubble Level:** For precise horizontal alignment.
- **1/4 Universal Expansion Hole:** For attaching accessories like magic arms, microphones, or lights.
- **Angle Adjustment Buckle:** To adjust leg angles.
- **Quick Release Plate Knob:** Secures the quick release plate to the ball head.
- **Horizontal Rotation Knob:** Controls the 360-degree panning motion of the ball head.
- **Center Column Knob:** Locks and unlocks the center column for height adjustment or removal.

Setup Instructions

1. Tripod Deployment

1. **Unfold Legs:** Gently pull the tripod legs outwards until they lock into position.

2. **Adjust Leg Angle:** Use the angle adjustment buckles on each leg to set the desired spread for stability.
3. **Extend Legs:** To extend the tripod legs, twist the leg lock counter-clockwise to unlock, pull the leg section to the desired length, then twist clockwise to lock. Repeat for all sections.



Image: Illustration of the 1-second lock structure for quick leg expansion. Twist to unlock, pull to extend, twist back to lock.

2. Attaching a Device (Camera/Phone)

1. **Remove Quick Release Plate:** Loosen the quick release plate knob on the ball head and remove the plate.
2. **Attach to Device:** Screw the quick release plate onto the 1/4" tripod socket of your camera or phone holder. Ensure it is securely tightened.
3. **Mount Device:** Slide the quick release plate with your device back into the ball head and tighten the quick release plate knob until secure.



Image: The Fotopro FY-830 tripod with a camera mounted and a smartphone attached to the side via a magic arm connected to the 1/4" universal expansion hole.

3. Monopod Conversion

1. **Remove Center Column:** Loosen the center column knob and pull the center column upwards to detach it from the tripod base.
2. **Attach Ball Head:** If desired, attach the ball head to the top of the detached center column.
3. **Extend Monopod:** Extend the sections of the center column to the desired monopod height.



Image: A person demonstrating the Fotopro FY-830 in monopod mode, capturing photos with a camera. This is one of the features shown in the product overview image.

4. Selfie Stick Conversion

1. **Convert to Monopod:** Follow the steps for monopod conversion.
2. **Attach Phone Holder:** Ensure a phone holder is attached to the 1/4" screw on the ball head (or directly to the center column if the ball head is removed).
3. **Extend:** Extend the monopod to the desired length for selfie use.



Image: A person demonstrating the Fotopro FY-830 in selfie stick mode, holding a smartphone for self-portraits. This is another feature shown in the product overview image.

Operating Instructions

1. Adjusting Ball Head Position

- **Unlock:** Loosen the main knob on the ball head to allow free movement.
- **Position:** Adjust your camera or phone to the desired angle (360-degree panning, tilt, portrait/landscape).
- **Lock:** Tighten the main knob firmly to secure the position.
- **Horizontal Panning:** Use the horizontal rotation knob for smooth 360-degree panoramic movements without adjusting the tilt.

2. Using the Bubble Level

The integrated bubble level helps ensure your camera is perfectly horizontal. Adjust the tripod legs until the bubble is centered within the circle.

3. Universal Expansion Port

The 1/4" universal expansion hole allows you to attach additional accessories such as a magic arm, external microphone, or LED light. Simply screw the accessory into the port.

Maintenance

- **Cleaning:** Wipe the tripod with a soft, dry cloth after each use. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly.
- **Lubrication:** Do not apply lubricants to the leg locks or ball head unless specifically instructed by Fotopro support.
- **Storage:** Store the tripod in a dry, clean environment. Use the provided storage bag to protect it from dust and scratches.
- **Inspection:** Periodically check all screws, knobs, and leg locks for tightness. Do not overtighten.



Image: The Fotopro FY-830 tripod shown fitting into a backpack side pocket and also attached externally using a carabiner, highlighting its portability and storage options.

Troubleshooting

Problem	Possible Cause	Solution
Tripod is unstable.	Legs not fully extended or locked; uneven surface; excessive load.	Ensure all leg sections are fully extended and locks are tightened. Adjust leg angles for wider stance. Place on a flat surface. Verify device weight is within maximum load capacity (8.8 lbs / 4 kg).
Ball head does not hold position.	Main knob not tightened sufficiently; device too heavy.	Tighten the main ball head knob firmly. Reduce device weight if exceeding capacity.
Leg locks are stiff or difficult to operate.	Dirt or debris in the locking mechanism.	Clean leg sections and locking mechanisms. Do not force. If problem persists, contact support.

Specifications

Feature	Detail
Model Name	FY-830
Brand	Fotopro
Material	Aluminum
Item Weight	1 Kilogram (2.2 lbs)
Maximum Height	58 Inches (147 cm)
Minimum Height	25 Centimeters (9.84 inches)
Folded Size	25 Centimeters (9.84 inches)
Leg Diameter	25 Millimeters
Tripod Head Type	Ball Head
Compatible Devices	Cameras, Smartphones (with phone mount)
Max Load Capacity	8.8 lbs (4 kg)
Special Features	Lightweight, Compact, 3-in-1 Convertible (Tripod, Monopod, Selfie Stick), 360° Ball Head, 1/4" Expansion Port

Note: Specifications are subject to change without notice.

Warranty and Support

The Fotopro FY-830 Mini Tripod comes with a**1-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use.

For technical support, warranty claims, or inquiries, please contact Fotopro customer service through their official website or the retailer where the product was purchased.

Manufacturer: Fotopro

UPC: 782279827174

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FVX7LQG4

More documents and user manuals: **https://manuals.plus/**