Foyoconven TA1428E-UL

Foyoconven Touch Screen Toaster 2-Slice (Model TA1428E-UL) User Manual

Your guide to effortless toasting with advanced features.

1. Introduction

Thank you for choosing the Foyoconven Touch Screen Toaster. This manual provides essential information for the safe and efficient operation of your new appliance. Please read it thoroughly before first use and retain it for future reference.

2. Important Safety Instructions

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plug, or toaster in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the toaster for other than intended use.

- Oversized foods, metal foil packages, or utensils must not be inserted into a toaster as they may create a risk of fire or electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when the toaster is plugged in.
- Always unplug the toaster before cleaning the crumb tray.

3. Product Components

The Foyoconven Touch Screen Toaster features a sleek design with intuitive controls. Key components include:

- **Toasting Slots:** Two extra-wide 1.5-inch slots accommodate various bread types.
- **Touch Screen Display:** Large color LCD for selecting settings and monitoring progress.
- **Control Panel:** Includes bread type selection, shade settings, and function buttons (Defrost, Reheat, Cancel, Memory, One-Slice, Power).
- **Lever:** Initiates the toasting cycle.
- **Removable Crumb Tray:** Located at the bottom for easy cleaning.
- **Power Cord:** For connecting to an electrical outlet.



Image: Front view of the Foyoconven 2-Slice Touch Screen Toaster, showcasing the digital display and two slices of toast.



Image: Side view illustrating the toaster's dimensions and the extra-wide 1.5-inch slots, suitable for thick bread and bagels.

4. Setup

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Ensure all components are present and undamaged.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure adequate ventilation around the appliance.
3. **First Use:** Before toasting food, operate the toaster empty on the highest shade setting (level 6) once or twice to burn off any manufacturing residues. This may produce a slight odor or smoke, which is normal. Ensure the area is well-ventilated.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

5. Operating Instructions

The Foyoconven Touch Screen Toaster offers a user-friendly interface for customized toasting.

Your browser does not support the video tag.

Video: Demonstration of the Foyoconven 2-Slice Touch Screen Toaster's smart digital touchscreen features and operation.

5.1 Basic Toasting Steps

1. Place bread slices into the toasting slots.
2. The LCD display will activate. Select your desired bread type (e.g., Bread, Bagel, Waffle, Pastry, English Muffin) by tapping the corresponding icon.
3. Choose your preferred browning level from 1 (lightest) to 6 (darkest) by tapping the shade icons.
4. Press the lever down firmly until it locks into place. The toaster will begin the toasting cycle, and the countdown timer will display.
5. Once the cycle is complete, the toast will automatically pop up.



Image: A visual guide to the four simple steps for operating the toaster: placing bread, selecting settings, pressing the lever, and toast popping up.

5.2 Bread Type Selection

The toaster features 5 dedicated bread modes for optimal results:

- **Bread:** Standard bread slices.
- **Bagel:** Toasts the cut side of bagels while warming the outer side.
- **Waffle:** Ideal for frozen or fresh waffles.
- **Pastry:** For various pastries.
- **English Muffin:** Optimized for English muffins.

Tap the corresponding icon on the touchscreen to select your bread type.



Image: The toaster's touchscreen displaying the five available bread modes for selection.

5.3 Shade Settings

Choose from 6 browning levels to achieve your desired toast crispness:

- **Level 1-2:** Lightly warm soft
- **Level 3-4:** Golden brown
- **Level 5-6:** Very crispy hearty crunch

Tap the shade icon on the touchscreen that matches your preference.

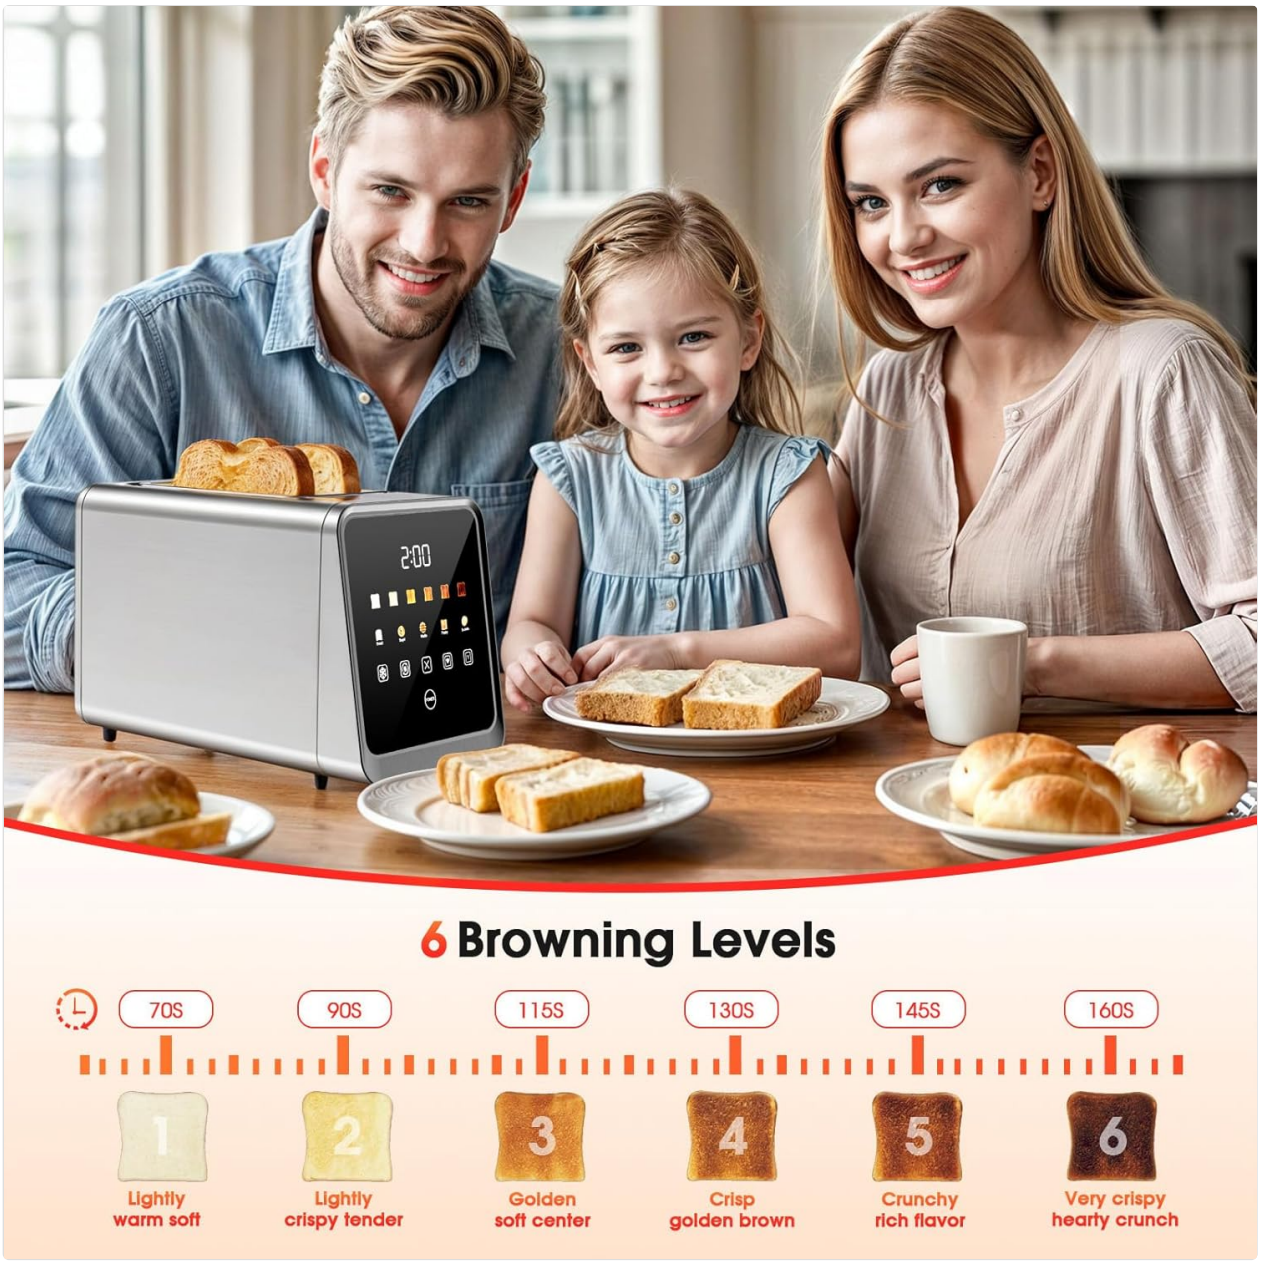


Image: A visual representation of the six browning levels available on the toaster, from lightly toasted to very dark.

5.4 One-Slice Toasting Mode

For single servings, activate the one-slice toasting mode by tapping the corresponding icon. This mode ensures both slots heat simultaneously for even toasting of a single slice, optimizing energy use.

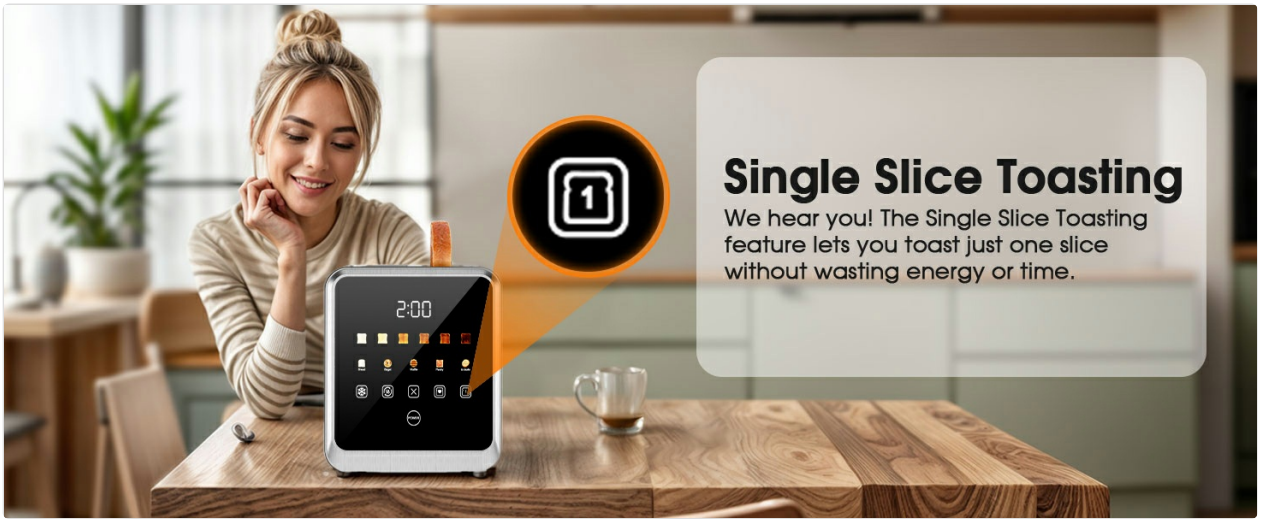


Image: The toaster in use with a single slice of bread, demonstrating the single slice toasting feature for energy efficiency.

5.5 Memory Function

The built-in memory function allows you to save your preferred bread type and shade level. Once set, the toaster will recall these preferences for future use, requiring only one tap to start toasting.



Image: The toaster's touchscreen highlighting the memory function, which saves your preferred toasting settings.

5.6 Defrost Function

To toast frozen bread, select the Defrost function. This adds approximately 20% extra time to the toasting cycle for optimal browning from a frozen state.

5.7 Reheat Function

If your toast has cooled, use the Reheat function to warm it for an additional 30 seconds without further browning.

5.8 Cancel Function

To stop the toasting cycle at any time, press the Cancel button. The toast will immediately pop up.



Image: The toaster's touchscreen displaying the Defrost, Reheat, Cancel, and Power function buttons.

6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Slide out the removable crumb tray from the bottom of the toaster. Dispose of crumbs and wipe the tray clean with a damp cloth. Ensure it is completely dry before reinserting.
3. **Exterior:** Wipe the exterior of the toaster with a soft, damp cloth. For stainless steel surfaces, use a non-abrasive cleaner designed for stainless steel to maintain its finish. Do not use abrasive cleaners or metal scouring pads.
4. **Interior:** Do not insert any objects into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully remove it after the appliance has cooled.
5. **Storage:** Store the toaster in a clean, dry place when not in use. The hidden cord storage helps keep your countertop tidy.



Image: The removable crumb tray being cleaned, demonstrating easy maintenance.

7. Troubleshooting

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; power button not pressed.	Ensure the toaster is securely plugged into a working outlet. Press the Power button on the touchscreen.
Toast does not pop up or lever does not stay down.	Toaster not plugged in; lever not fully depressed; oversized items.	Ensure the toaster is plugged in. Press the lever down firmly until it clicks and locks. Avoid forcing oversized items into the slots.
Uneven toasting.	Bread thickness variation; crumb tray needs cleaning.	Use bread of similar thickness. Center bread in the slot. Clean the crumb tray regularly.
Smoke or burning smell.	Food lodged in slots; crumb tray full; manufacturing residue (first use).	Unplug immediately. Remove any lodged food after cooling. Clean the crumb tray. For first use, this is normal and will dissipate.
Touchscreen unresponsive.	Temporary software glitch; power cycle needed.	Unplug the toaster for a few minutes, then plug it back in. If the issue persists, contact customer support.

8. Specifications

- **Brand:** Foyoconven
- **Model Number:** TA1428E-UL
- **Color:** Stainless Steel
- **Material:** Stainless Steel
- **Product Dimensions:** 10.98"D x 7.44"W x 6.14"H
- **Wattage:** 900 watts
- **Number of Slices:** 2
- **Voltage:** 120V
- **Number of Shade Settings:** 6
- **Special Features:** Built-In Timer, Cancel Function, Defrost Mode, LED Indicator, Touchscreen, Memory Recall, One-Slice Toasting Mode, Extra-Wide 1.5" Slots
- **Item Weight:** 3.02 pounds

9. Warranty and Support

For warranty information or technical support, please refer to the warranty card included with your product or contact Foyoconven customer service through the retailer where the product was purchased. Please have your model number (TA1428E-UL) and purchase date available when contacting support.

© 2025 Foyoconven. All rights reserved.