KUANGXIANG S39

KUANGXIANG S39 6-in-1 Bluetooth Speaker Alarm Clock User Manual

Model: S39

Introduction

The KUANGXIANG S39 is a versatile 6-in-1 device designed to enhance your daily routine. It integrates a 15W fast wireless charger, Bluetooth speaker, FM radio, dimmable LED night light, and dual digital alarm clock into a single compact unit. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and user experience.



Image: Overview of the KUANGXIANG S39 device, highlighting its multiple functions including Bluetooth speaker, alarm clock, LED night light, FM radio, wireless charging, and remote control.

Package Contents

- KUANGXIANG S39 6-in-1 Bluetooth Speaker Alarm Clock
- Remote Control
- Power Adapter
- FM Antenna Wire
- User Manual

Setup

1. Power Connection

1. Connect the provided power adapter to the DC input port on the back of the device.

2. Plug the power adapter into a standard wall outlet. The device display will illuminate.

2. Remote Control Battery Installation

The remote control requires 2 AAA batteries (not included).

1. Open the battery compartment on the back of the remote control.
2. Insert 2 AAA batteries, ensuring correct polarity (+/-).
3. Close the battery compartment securely.

3. FM Antenna Connection

For optimal FM radio reception, connect the included FM antenna wire to the designated port on the device.

Operating Instructions

1. General Controls

The device features touch buttons on the top panel and a full-function remote control. Refer to the device and remote for specific button layouts.

2. Time and Alarm Settings



Image: The device display showing both 12-hour and 24-hour time formats, illustrating the option to switch between them.

- **Setting Time:** Press the 'Time Set' button (usually labeled 'SET' or a clock icon) to enter time setting mode. Use the '+' and '-' buttons to adjust hours and minutes. Press 'Time Set' again to confirm.
- **12/24 Hour Format:** Press the '12/24H' button to toggle between 12-hour and 24-hour display formats.
- **Dual Alarms:** The device supports two independent alarms. Press 'Alarm 1' or 'Alarm 2' button to set the desired wake-up time. Use '+' and '-' to adjust. Press the alarm button again to confirm.
- **Snooze Function:** When an alarm sounds, press the 'Snooze' button (often a large button on top or labeled 'SNOOZE') to activate a 10-minute snooze. This can be repeated up to 4 times.



Image: Illustration of the dual alarm clock feature, showing two separate alarm settings for different wake-up times.

3. Bluetooth Speaker



Image: An exploded view of the speaker components, illustrating the internal design for premium sound delivery with deep bass and clear audio.

- **Pairing:** Press the 'Mode' button until 'BT' appears on the display. The device will enter pairing mode. On your smartphone or audio device, search for 'S39' in the Bluetooth settings and connect.
- **Playback:** Once paired, play audio from your connected device. Use the device's or remote's volume controls to adjust sound level.

4. FM Radio



Image: The device displaying FM radio mode, indicating reliable signal and rich audio for listening to radio programs.

- **Switch to FM Mode:** Press the 'Mode' button until 'FM' appears on the display.
- **Auto Scan:** Press and hold the 'Play/Pause' button to automatically scan and save available FM stations.
- **Manual Tuning:** Use the 'Previous/Next Track' buttons to manually tune to specific frequencies.

5. LED Night Light

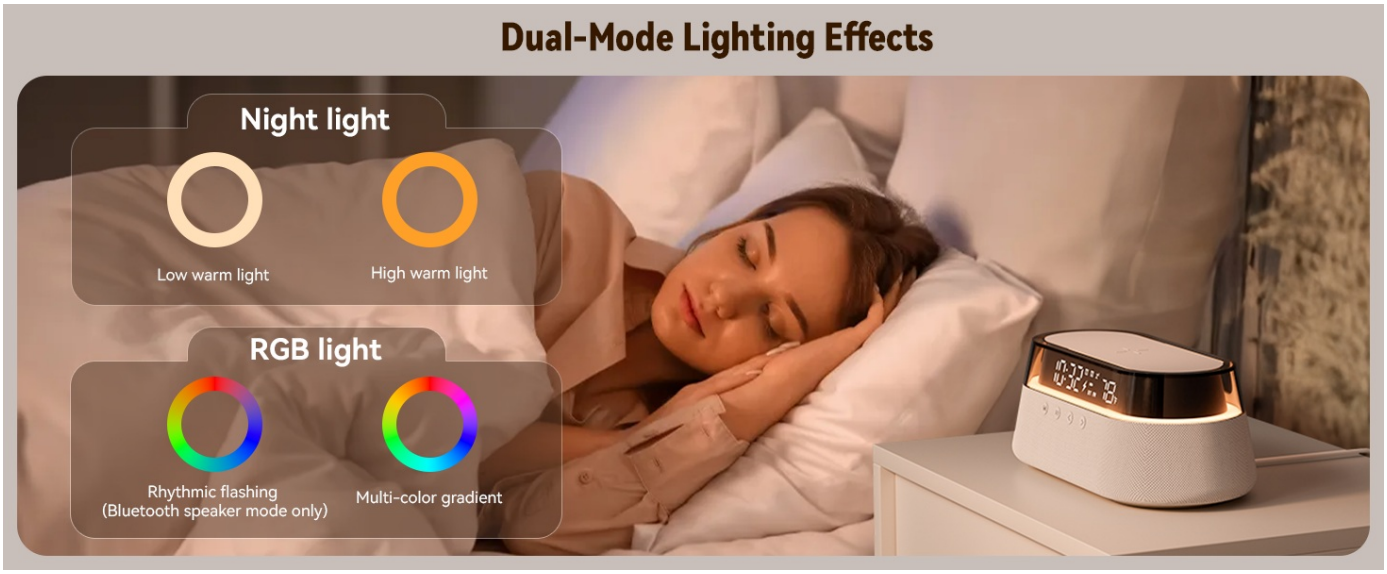


Image: Diagram showing the two main lighting modes: Night Light (low warm, high warm) and RGB Light (rhythmic flashing, multi-color gradient).

- **Activate/Deactivate:** Press the 'Light' button on the device or remote to turn the night light on/off.
- **Change Modes:** Repeatedly press the 'Light' button to cycle through the 3 night light modes: low warm, high warm, and gradient RGB.
- **RGB Sync:** In gradient RGB mode, the lights can sync with music playback for dynamic visual effects.

6. 15W Fast Wireless Charging



Image: A smartphone placed on top of the device, indicating active wireless charging with a charging icon on the phone screen.

- Place your compatible smartphone (e.g., iPhone 17/16/15 series, Samsung Galaxy S21/S22/S23) on the designated wireless charging pad on top of the device.
- Ensure the phone is centered on the charging pad for optimal connection. The device display will show a charging status indicator, and your phone will indicate charging.

7. Display Brightness



Image: Three representations of the device display, showing different brightness levels (Lv.1, Lv.2, Lv.3) for user selection.

The screen display has 3 adjustable brightness levels (high, medium, low). Use the 'Dimmer' button on the remote or device to cycle through these levels to suit your preference.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the surface of the device. Do not use liquid cleaners or abrasive materials.
- **Placement:** Place the device on a stable, flat surface away from direct sunlight, heat sources, and moisture.
- **Power:** Disconnect the power adapter if the device will not be used for an extended period.

Troubleshooting

Problem	Possible Solution
Device does not power on.	Ensure the power adapter is securely connected to both the device and a working wall outlet.
Wireless charging is not working.	Ensure your phone is compatible with 15W wireless charging. Verify the phone is centered on the charging pad. Remove any thick phone cases that might interfere.
Bluetooth device cannot connect.	Ensure the device is in Bluetooth pairing mode ('BT' displayed). Turn off and on Bluetooth on your audio device. Make sure the device is within 33ft (10m) range.
Poor FM radio reception.	Ensure the FM antenna wire is properly connected and extended. Try repositioning the antenna or the device for better signal.
Alarm only beeps, no radio sound.	This model uses a beep alarm. The radio function is separate from the alarm sound.
Remote control is not working.	Check if the AAA batteries are correctly installed and not depleted. Replace batteries if necessary. Ensure there are no obstructions between the remote and the device.

Specifications

- **Brand:** KUANGXIANG
- **Model Number:** S39

- **Product Dimensions:** 9.25"W x 3.62"H
- **Power Source:** Corded Electric
- **Display Type:** Digital
- **Wireless Charging Output:** 15W
- **Bluetooth Version:** 5.4
- **Material:** Plastic
- **Required Batteries for Remote:** 2 AA batteries (not included)

Warranty and Support

This product is manufactured by KUANGXIANG. For any product-related inquiries or support, please refer to the contact information provided with your purchase or on the manufacturer's official channels. Protection plans may be available for purchase separately, offering extended coverage for your device.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question