Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

XCWIIE Wet Rated Outdoor Fan with Lights

XCWIIE 56-Inch IP65 Wet-Rated Outdoor Ceiling Fan with Light User Manual

Model: Wet Rated Outdoor Fan with Lights

1. Introduction

Thank you for choosing the XCWIIE 56-inch IP65 Wet-Rated Outdoor Ceiling Fan with Light. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Designed for both indoor and outdoor use, this fan features an IP65 waterproof rating, a quiet DC motor, 7 UV-proof blades, and an integrated dimmable LED light with adjustable color temperature. Please read these instructions thoroughly before installation and keep them for future reference.

2. Important Safety Information

To reduce the risk of electric shock, fire, or personal injury, always follow these basic safety precautions:

- Read all instructions carefully before beginning installation.
- Turn off power at the circuit breaker or fuse box before wiring.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- Ensure the installation site allows the fan blades to rotate without obstruction. Maintain a minimum clearance of 7 feet from the floor to the blade trailing edge.
- The mounting structure must be capable of supporting the fan's weight (refer to specifications for weight).
- Do not operate the fan with damaged blades or any visible defects.
- This fan is wet-rated (IP65) and suitable for outdoor use in direct contact with water, but proper installation is crucial to maintain this rating.

3. Package Contents

Carefully unpack your fan and check that all contents are present and undamaged. The package should include:

- 1x English User Manual
- 1x Canopy
- 1x LED Light Kit
- 1x Pure Copper DC Motor
- 1x Pack of Screws and Accessories

- 3x Down Rods (6", 12", 24")
- 7x Waterproof Fan Blades
- 1x Remote Control

Video: Unboxing and initial overview of the XCWIIE 56-inch outdoor ceiling fan components.

4. Setup and Installation

Follow these steps for proper installation. It is recommended to have two people for installation.

1. **Prepare the Mounting Location:** Ensure the electrical box is securely mounted and capable of supporting the fan's weight. Turn off power at the main circuit breaker.
2. **Install the Mounting Bracket:** Attach the mounting bracket to the electrical box using the provided screws. Ensure it is firmly secured.
3. **Assemble the Downrod:** Select the appropriate downrod length (6", 12", or 24") for your ceiling height. Feed the electrical wires from the fan motor through the downrod. Secure the downrod to the fan motor assembly.
4. **Hang the Fan:** Carefully lift the fan assembly and hang it from the mounting bracket. Make sure the ball joint of the downrod is properly seated in the bracket.
5. **Electrical Connections:** Connect the fan's electrical wires to the household wiring according to the wiring diagram in the manual. Ensure all connections are secure with wire nuts. Connect the ground wire.
6. **Secure the Canopy:** Slide the canopy up to cover the mounting bracket and electrical connections. Secure it with the provided screws.
7. **Attach Fan Blades:** Securely attach each of the 7 waterproof fan blades to the motor housing using the provided screws.
8. **Install LED Light Kit:** Connect the LED light kit wires to the fan motor's light wires. Secure the LED light kit to the bottom of the fan motor housing.
9. **Attach Light Diffuser:** Twist or snap the light diffuser into place over the LED light kit.

Video: Detailed installation guide for the XCWIIE IP65 Waterproof White Outdoor Ceiling Fan.

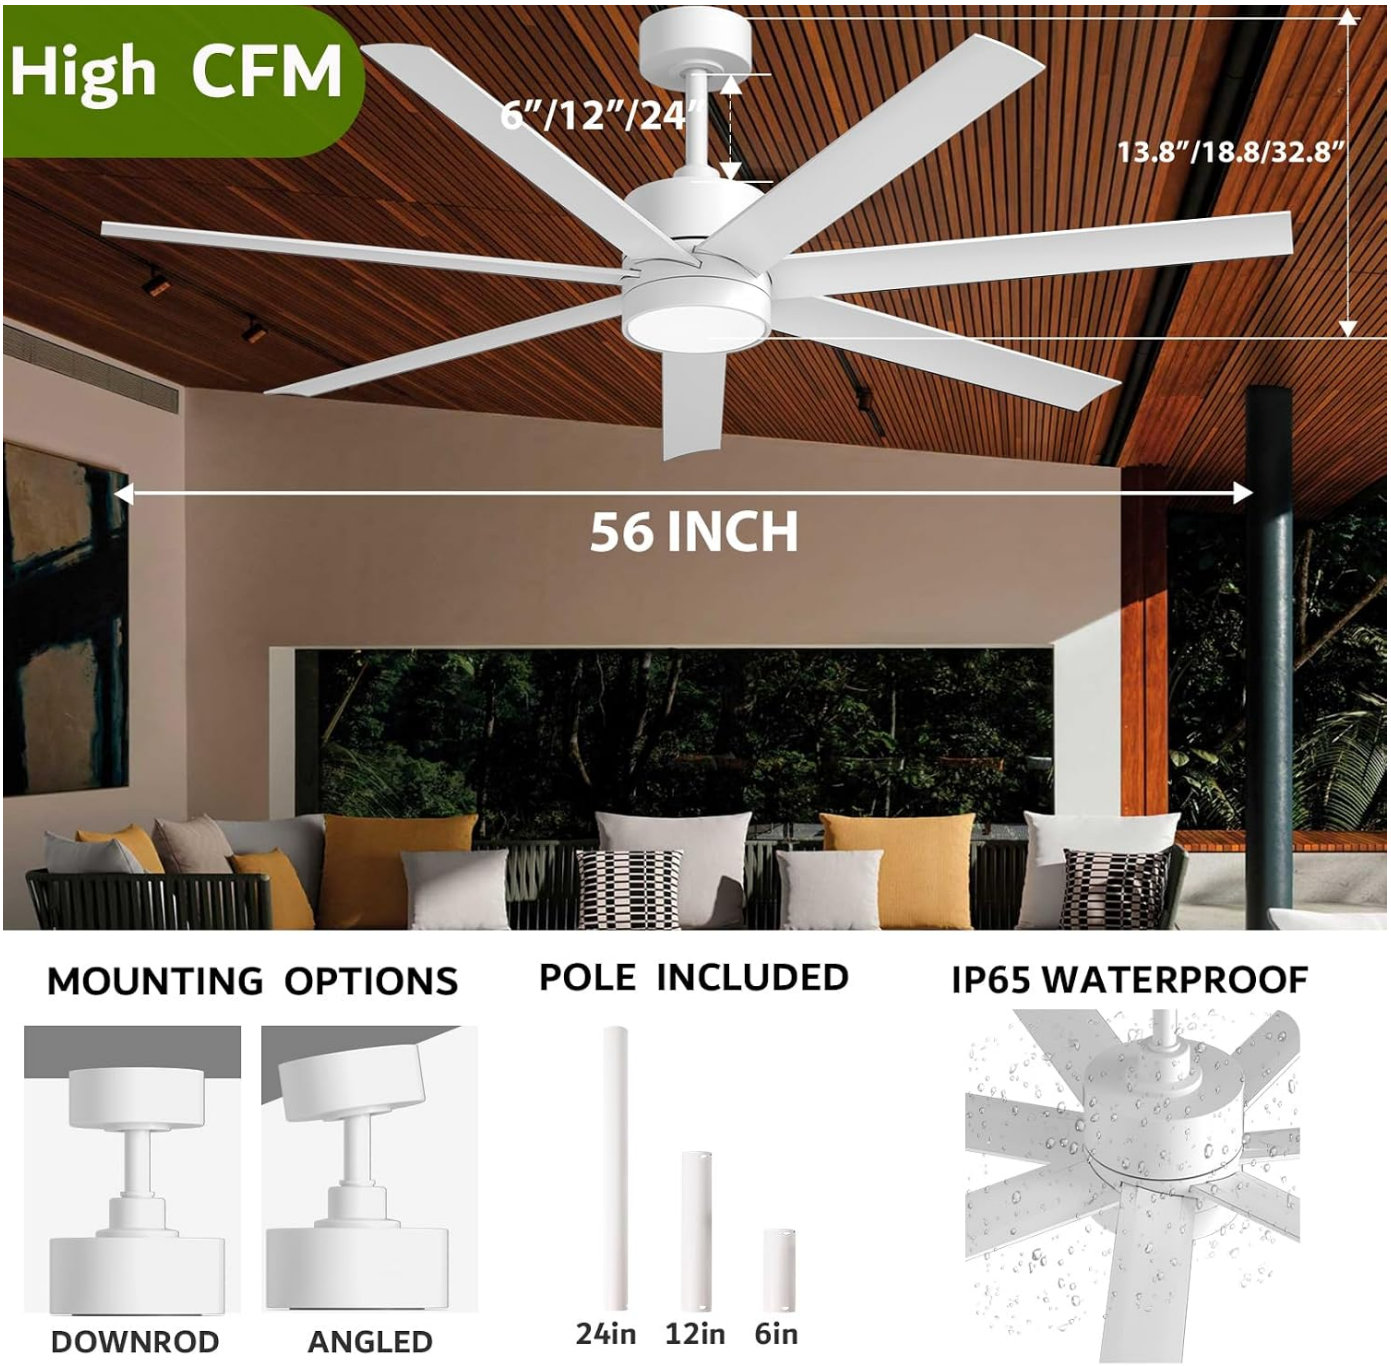


Image: The XCWIIE 56-inch outdoor ceiling fan offers multiple downrod lengths (6, 12, and 24 inches) and supports sloped ceiling installations up to 20 degrees, ensuring optimal placement for various room types.

5. Operating Instructions

Your XCWIIE ceiling fan is operated using the included remote control. Ensure batteries are installed correctly in the remote.

5.1 Remote Control Functions

- **Fan ON/OFF:** Press the fan icon button to turn the fan on or off.
- **Fan Speed Control:** Use the '+' and '-' buttons to adjust between 6 fan speeds.
- **Light ON/OFF:** Press the light bulb icon button to turn the LED light on or off.
- **Light Color Temperature (CCT) Adjustment:** Press the CCT button to cycle through 3 color temperatures: 3000K (Warm White), 4000K (Natural White), and 5000K (Cool White).
- **Light Dimming:** Use the dimming buttons (sun icon) to adjust the brightness from 10% to 100%.
- **Reversible Function:** Press the reversible button (arrows icon) to change the blade direction. Use downdraft mode

in summer for cooling and updraft mode in winter to circulate warm air.

- **Timer Function:** Set the fan to automatically turn off after 1, 4, or 8 hours using the respective timer buttons.
- **Natural Breeze Mode:** Activate this mode for varying fan speeds that simulate a natural breeze.
- **Memory Function:** The fan retains your last settings for fan speed and light color temperature.



Image: The remote control allows for easy adjustment of fan speeds, light settings, and seasonal modes.



Image: The integrated LED light offers three color temperatures (3000K, 4000K, 5000K) and is fully dimmable from 10% to 100% brightness.

6. Maintenance

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:** Use a soft, damp cloth to clean the fan blades and motor housing. Do not use abrasive cleaners or solvents.
- **Blade Inspection:** Periodically check the fan blades for any signs of damage or warping. Replace damaged blades immediately.
- **Tighten Screws:** Over time, screws may loosen. Check and tighten all screws on the mounting bracket, downrod, and blade attachments annually.
- **Electrical Connections:** Ensure all electrical connections remain secure.

7. Troubleshooting

If you experience issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Remote control issues.	Check circuit breaker/fuse; Verify all wire connections; Replace remote batteries or re-pair remote.
Light does not work	Loose wire connections; Faulty LED light kit; Remote control issues.	Check light kit wiring; Contact customer support for replacement; Replace remote batteries or re-pair remote.
Fan wobbles	Loose blade screws; Improperly balanced blades; Loose mounting bracket.	Tighten all blade screws; Use a balancing kit (not included) if necessary; Ensure mounting bracket is secure.
Excessive noise	Loose screws; Motor issues; Blades hitting an obstruction.	Check and tighten all screws; Ensure no obstructions are in the fan's path; Contact customer support if motor noise persists.

8. Specifications

Feature	Detail
Brand	XCWIIE
Model Name	Outdoor Ceiling Fan for Patio Waterproof
Model Number	Wet Rated Outdoor Fan with Lights
Color	White
Size	56 Inches (Blade Length)
Material	Acrylonitrile Butadiene Styrene (ABS)
Motor Type	DC Motor
Air Flow Capacity	7793 Cubic Feet Per Minute (CFM)
Number of Blades	7
Number of Speeds	6
Noise Level	30 Decibels
Light	24W 2200lm LED, 3 CCT (3000K/4000K/5000K), Dimmable (10%-100%)
Control Method	Remote Control
Mounting Type	Downrod Mount (6", 12", 24" included), Sloped Mount (≤20°)
Indoor/Outdoor Usage	Indoor, Outdoor (IP65 Wet-Rated)
Voltage	120 Volts
Certifications	ETL, DOE, CE, FCC, RoHS

9. Warranty and Support

XCWIIE provides a lifetime warranty for this product. For any assistance, please contact our U.S.-based warehouse support. If the ceiling fan has been damaged during shipping, such as a broken cover or missing parts, we offer a free replacement service.
To communicate with us:

1. Check Orders detail
2. Select Problem with Order
3. Choose Topic
4. Contact Seller

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

I purchased the 56" Wet-Rated Outdoor Ceiling Fan (model dcl56705bk) and the connection for the fan on remote receiver was broken and therefore the light works, but the fan does not. I would like to get a replacement remote receiver part and was curious how to go about that.

To obtain a replacement remote receiver for your XCWIIE 56-inch Wet-Rated Outdoor Ceiling Fan, you should contact the manufacturer directly through their support channels. According to the manual, XCWIIE offers a lifetime warranty and...

Read full answer

Open the live page

https://manuals.plus/asin/B0FW4P9SRW

More documents and user manuals: **https://manuals.plus/**