LG DF375HWS

LG DF375HWS Freestanding Dishwasher User Manual

Model: DF375HWS | Brand: LG

Introduction

Thank you for purchasing the LG DF375HWS Freestanding Dishwasher. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before installation and operation, and keep it for future reference. This dishwasher features a 14 place setting capacity, TrueSteam technology, QuadWash system, and Wi-Fi connectivity with ThinQ for smart control.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons. This includes:

- Read all instructions before using the dishwasher.
- Do not touch the heating element during or immediately after use.
- Use only detergents and rinse agents recommended for dishwashers.
- Keep children away from detergent and rinse aid.
- Ensure the dishwasher is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Do not tamper with controls.

Setup and Installation

The LG DF375HWS is a freestanding dishwasher designed for easy placement. Proper installation is crucial for optimal performance and safety.

Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any damage during transit. Keep packaging materials away from children.

Placement

Place the dishwasher on a flat, stable surface. Ensure there is adequate space for the door to open fully. The dimensions are approximately 60 cm (Depth) x 60 cm (Width) x 85 cm (Height).

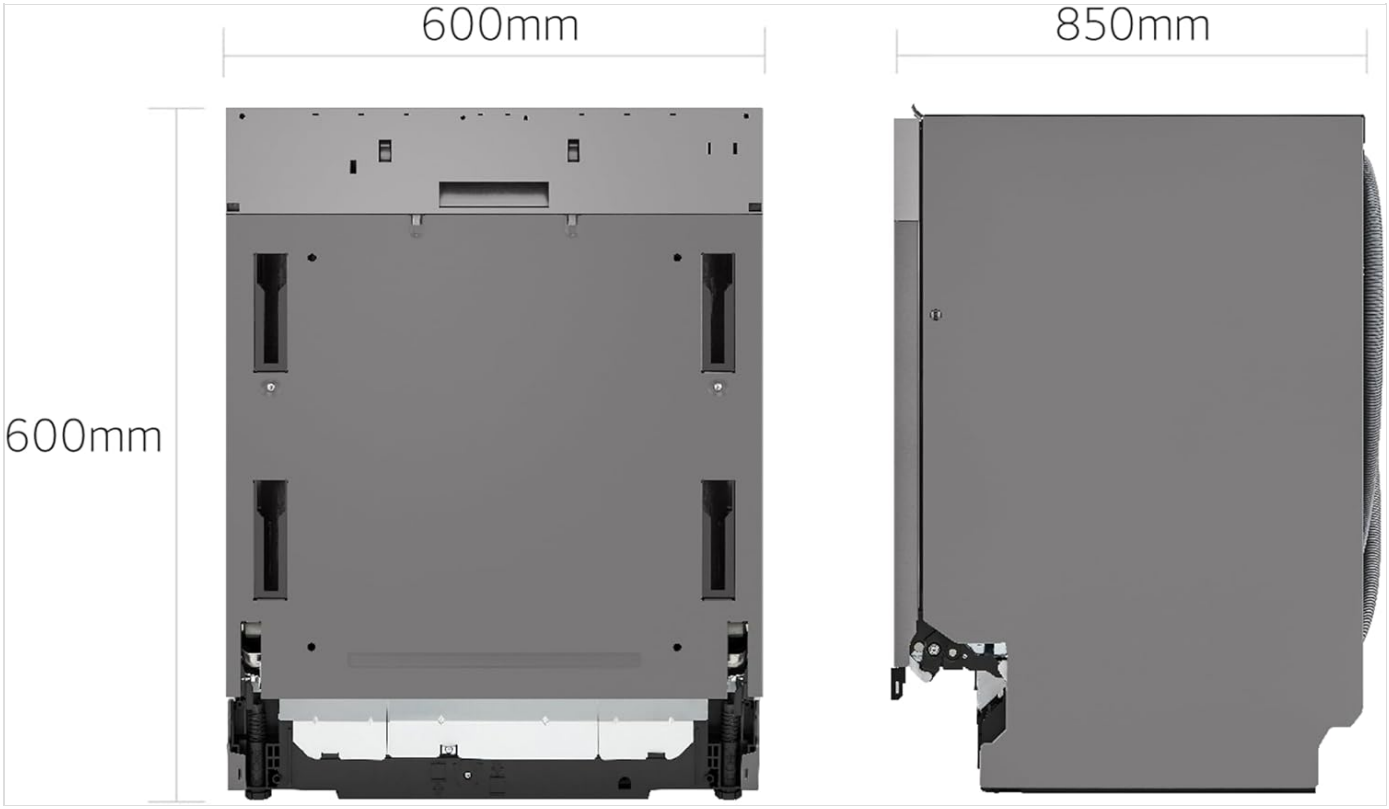


Image: Diagram showing the dimensions of the LG DF375HWS dishwasher (600mm depth, 600mm width, 850mm height).

Water and Drain Connections

Connect the water inlet hose to a hot water supply (max 60°C) and the drain hose (included) to a suitable drain. Ensure all connections are secure to prevent leaks.

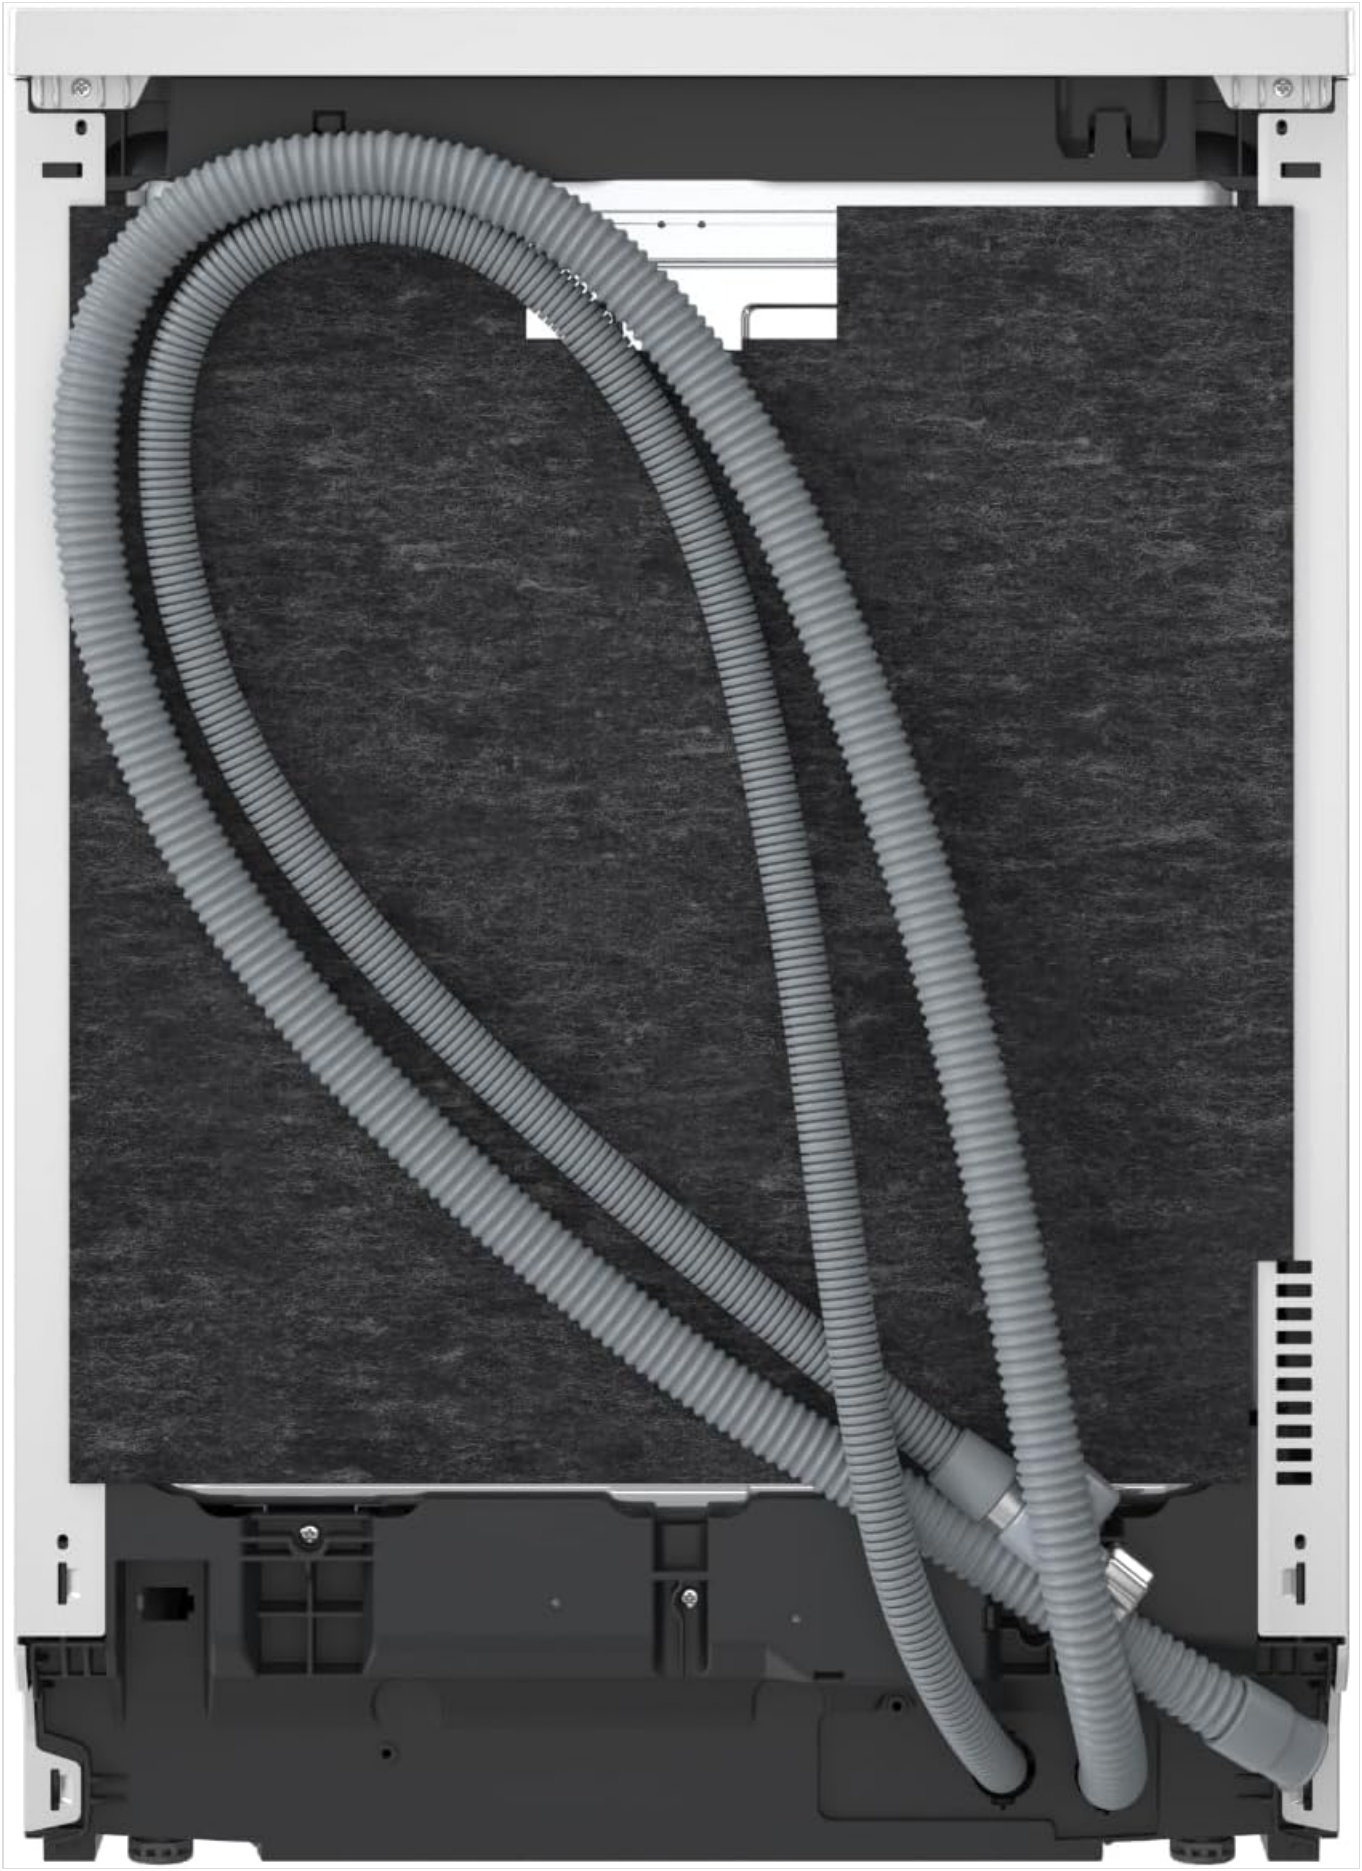


Image: Rear view of the LG DF375HWS dishwasher, showing the attached drain hose.

Electrical Connection

Connect the dishwasher to a grounded electrical outlet. The appliance operates on 120 Volts. Do not use extension cords.

Loading the Dishwasher

Arrange dishes to allow water to reach all surfaces. The LG DF375HWS features an EasyRack Plus system with 3 baskets, accommodating up to 14 place settings. The third basket is customizable for cutlery and small items.



Image: Interior view of the LG DF375HWS dishwasher with empty racks, showing the three basket levels.



Image: Interior view of the LG DF375HWS dishwasher with racks loaded with various dishes, demonstrating its capacity.



Image: Close-up of the customizable third rack in the LG DF375HWS dishwasher, showing adjustable elements for cutlery.

Adding Detergent and Rinse Aid

Fill the detergent dispenser with the recommended amount of dishwasher detergent. Add rinse aid to the dispenser to improve drying performance and prevent spots.

Selecting a Wash Cycle

The dishwasher offers various cycles to suit your needs, including: Normal, Intensive, Rapid, Rinse, and Steam. Select the appropriate cycle using the touch controls on the front panel.



Image: Front view of the LG DF375HWS dishwasher with its door open, revealing the control panel at the top edge of the door.

Starting a Cycle

Close the dishwasher door firmly. Press the Start button to begin the selected wash cycle. The external LED will display operational indications.

Special Features

- **TrueSteam:** Multiple steam jets sanitize dishes, dissolve stubborn dirt, and make glasses sparkle.



Image: Interior of the LG DF375HWS dishwasher filled with steam, illustrating the TrueSteam feature for sanitization and shine.

- **QuadWash System:** Four multi-directional spray arms ensure water reaches every corner of the dishwasher for thorough cleaning.

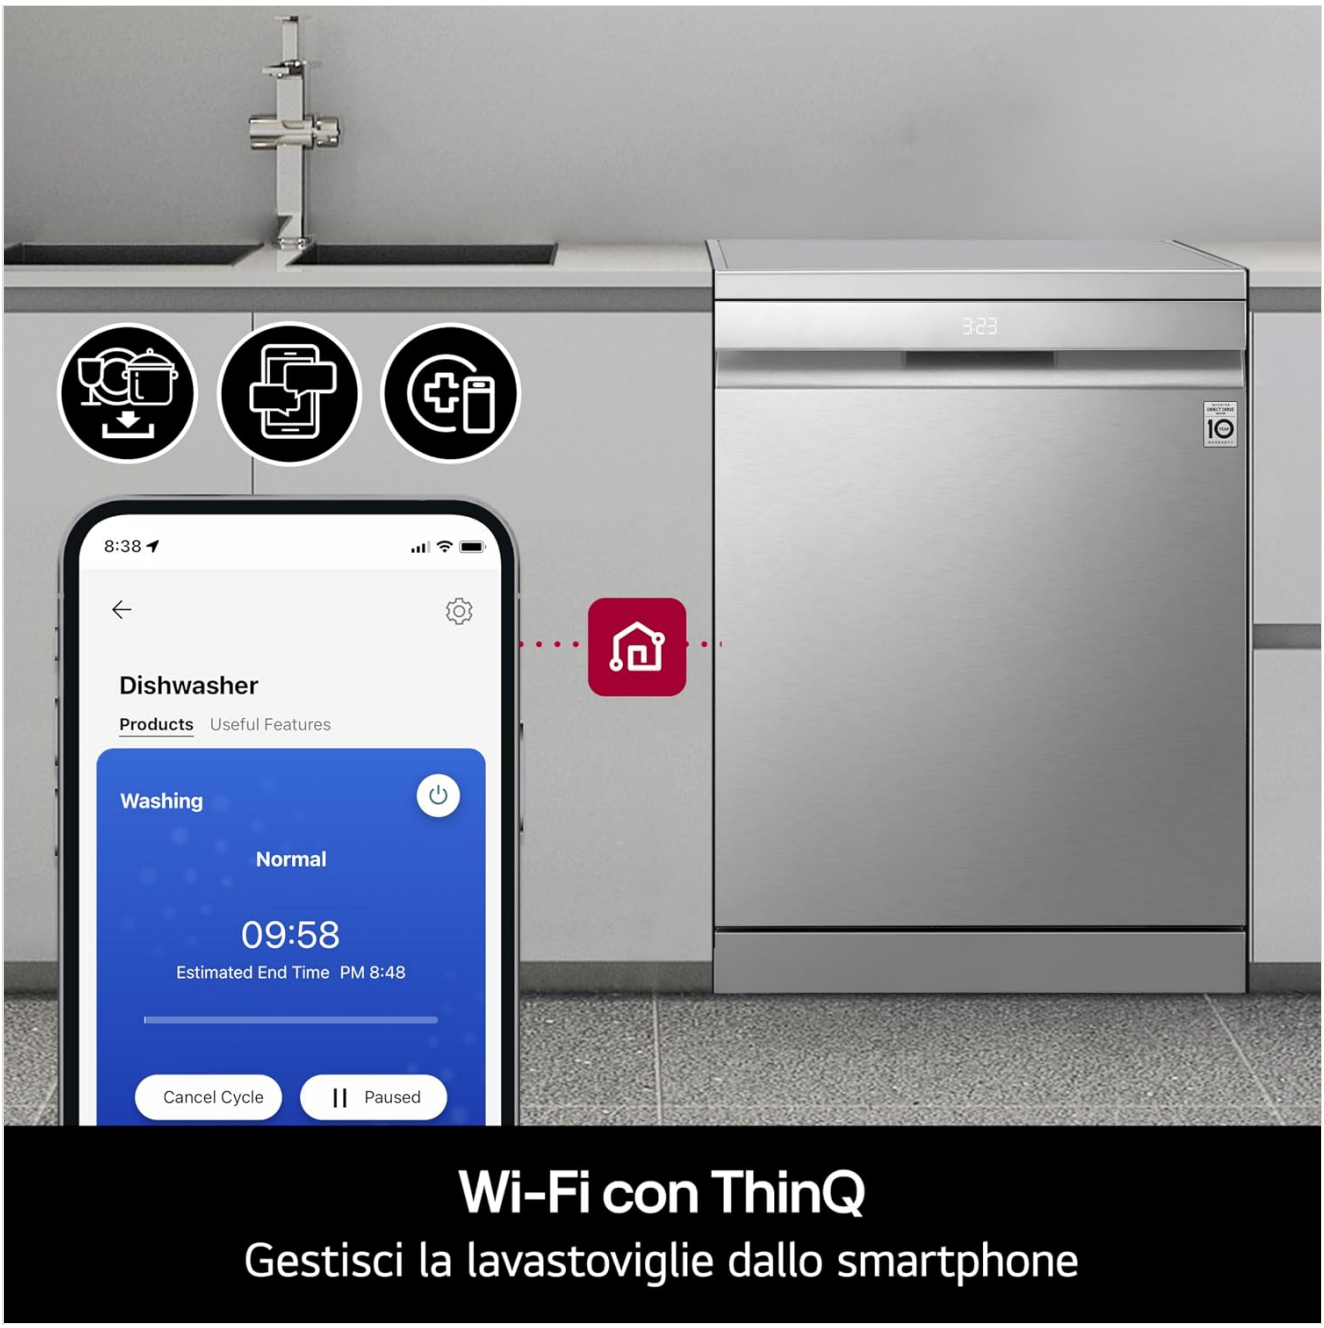


Image: Close-up of the QuadWash system's four spray arms in the LG DF375HWS dishwasher, showing water jets in multiple directions.

- **Auto-Open Door:** At the end of the wash cycle, the door automatically opens to improve drying efficiency.
- **Wi-Fi with ThinQ:** Manage wash options, download new programs, and receive usage tips via the ThinQ app on your smartphone.



Image: A smartphone displaying the LG ThinQ app interface next to an LG dishwasher, illustrating Wi-Fi connectivity and smart control.

- **Inverter Direct Drive Motor:** This motor provides quiet, efficient, and reliable operation, precisely regulating water circulation and spray intensity. It comes with a 10-year warranty.

Maintenance

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

Cleaning Filters

Periodically check and clean the filters located at the bottom of the dishwasher tub. Remove any food particles or debris to prevent blockages and ensure effective cleaning.

Cleaning the Interior and Exterior

Wipe the interior with a damp cloth to remove any residue. Clean the exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners.

Troubleshooting

If you encounter issues with your dishwasher, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, cycle not selected.	Check power connection, ensure door is latched, select a wash cycle.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arms and filters, use adequate detergent.
Water not draining	Clogged drain hose or filter, drain pump issue.	Clean drain filter, check drain hose for kinks or blockages.
Excessive noise	Dishes interfering with spray arms, foreign object in pump.	Rearrange dishes, inspect for foreign objects.

Specifications

Key technical specifications for the LG DF375HWS dishwasher:

Brand: LG

Model Name: DF375HWS

Installation Type: Freestanding

Capacity: 14 Place Settings

Dimensions (D x W x H): 60 cm x 60 cm x 85 cm

Noise Level: 43 Decibels

Control Type: Touch

Special Features: Wi-Fi with ThinQ, TrueSteam, QuadWash System, Auto-Open Door, Inverter Direct Drive Motor

Cycle Options: Normal, Intensive, Rapid, Rinse, Steam

Voltage: 120 Volts

Item Weight: 48 Kilograms

Included Components: Drain Hose

Energy Efficiency Class: A (New Scale)



Image: EU Energy Label for the LG DF375HWS dishwasher, showing Class A energy efficiency, 54 kWh/100 cycles, 14 place settings, 9.5 L water consumption, 4:59 cycle duration, and 43 dB noise level. For more details, visit EPREL Database.

Warranty and Support

The LG DF375HWS dishwasher comes with a**2-year manufacturer's warranty**. The Inverter Direct Drive Motor is guaranteed for 10 years.
For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact LG Customer Support. You can find contact information on the official LG website or your purchase documentation.
For additional resources and product registration, visit the official LG website:www.lg.com

© 2024 LG Electronics. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question