Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Nordivale H21419-70BRBK

Nordivale Luxury Fluted TV Stand with Fireplace

Model: H21419-70BRBK
Brand: Nordivale

Introduction

Thank you for choosing the Nordivale Luxury Fluted TV Stand with Fireplace. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your new entertainment center. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

Safety Information

Important Safety Warnings:

- Do not overload the top shelf beyond 60 kg (132 lbs).
- Keep cables organized and away from walking paths to prevent tripping hazards.
- Always turn off and unplug the fireplace before leaving the room or going to sleep.
- Keep children and pets away from the fireplace when in use.
- Ensure the unit is placed on a stable, level surface to prevent tipping.
- Do not block the air vents of the electric fireplace.

Package Contents

Your Nordivale TV Stand with Fireplace ships in two separate packages, which may arrive on different days. Please ensure all components are present before beginning assembly. Refer to the included parts list in your assembly guide for a complete inventory.



The TV stand is delivered in two separate packages, which may arrive at different times.

Setup and Assembly

Assembly of the Nordivale TV Stand is designed to be straightforward with clear instructions and numbered parts. It is recommended to have two people for assembly due to the size and weight of the components.

General Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and hardware. Match each part to the corresponding number in the instruction manual.
2. **Assemble the Main Frame:** Follow the step-by-step diagrams to connect the main panels of the TV stand.
3. **Attach Legs:** Secure the metal cylindrical legs to the base of the TV stand.
4. **Install Fireplace Insert:** Carefully slide the 36-inch electric fireplace into the designated central compartment. Ensure it is securely seated.
5. **Attach Sliding Doors:** Install the movable sliding doors onto their tracks.
6. **Cable Management:** Utilize the designed cable holes to keep wires organized and out of sight.



Product dimensions and recommended TV sizes for proper fit.



Details of the fluted panel, metal handle, and metal legs for structural integrity.

Your browser does not support the video tag.

This video provides an overview of the Nordivale Luxury 70" Fluted TV Stand with Fireplace, showcasing its design and features relevant to assembly.

Your browser does not support the video tag.

This video demonstrates the assembly process and features of the Walnut Luxury 70" Fluted Fireplace TV Stand, which shares similar construction to the brown model.

Operating Instructions (Electric Fireplace)


The integrated 36-inch electric fireplace offers both aesthetic flame effects and functional heating. It can be controlled via the unit's panel or the included remote control.

Fireplace Features:

- **Flame Brightness:** 5 adjustable levels (L1 to L5) for desired ambiance.
- **Flame Colors:** 12 distinct flame colors to match your mood or decor.
- **Temperature Control:** Adjustable heating from 60°F to 82°F.
- **Timer Function:** Set the fireplace to operate for 0 to 9 hours.
- **Heating Area:** Capable of warming rooms up to 400 sq. ft.
- **Realistic Effects:** Features a 3D flame effect and decorative logs for an authentic fireplace appearance.



Visual representation of flame brightness levels and color options.

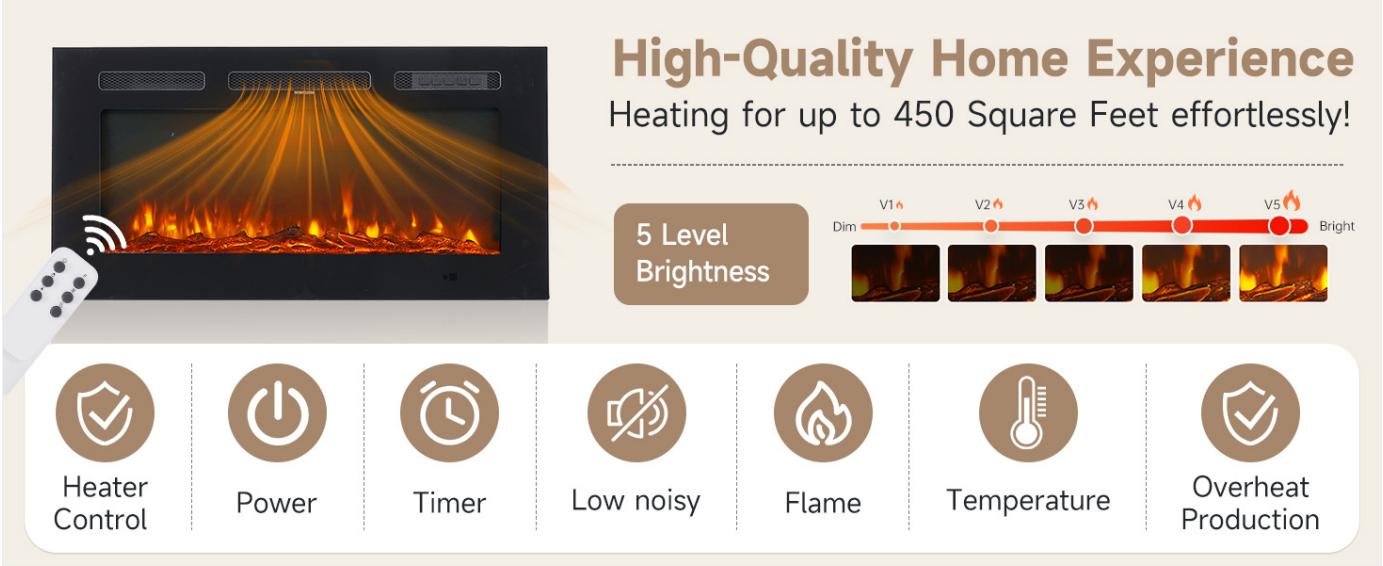

Remote control functions and heating methods of the electric fireplace.

Your browser does not support the video tag.

This short video demonstrates the adjustable flame brightness and various color options of the fireplace.

Maintenance

Regular maintenance will help prolong the life and appearance of your TV stand and fireplace.

- **Cleaning the Stand:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish.
- **Fireplace Glass:** Clean the glass front of the fireplace with a soft, lint-free cloth. If necessary, use a non-abrasive glass cleaner.
- **Air Vents:** Periodically check and clean the air intake and output vents of the fireplace to ensure proper airflow and prevent overheating.
- **Cable Management:** Regularly check that all cables are neatly organized and not pinched or damaged.

Troubleshooting

If you encounter issues with your Nordivale TV Stand or fireplace, refer to the following common solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, remote control batteries low, power switch off.	Check power outlet, replace remote batteries, ensure main power switch on fireplace is ON.
No heat output.	Heater function not activated, thermostat set too low, air vents blocked.	Activate heater function, increase temperature setting, clear any obstructions from vents.
Remote control not working.	Batteries dead, remote out of range, obstruction between remote and fireplace sensor.	Replace batteries, move closer to the unit, remove obstructions.
Unusual noises from fireplace.	Dust buildup, fan obstruction.	Turn off and unplug the unit. Carefully clean vents and fan area. If noise persists, contact support.

Specifications

Feature	Detail
Brand	Nordivale
Model Number	H21419-70BRBK
Color	Brown
Style	Modern
Material Type	Engineered Wood
Item Dimensions (L x W x H)	70 x 15.2 x 25.5 inches
Item Weight	131 pounds
Top Load Capacity	60 kg (132 lbs)
Fireplace Size	36 inches
Heating Area	Up to 400 sq. ft.
Included Components	TV Stand, Electric Fireplace
Additional Features	Sliding Cabinet Doors, Cable Management Holes

Warranty

Nordivale products are covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty details, including duration and coverage, please refer to the warranty card included with your product or contact Nordivale customer service.

Support

For further assistance, missing parts, or any questions regarding your Nordivale Luxury Fluted TV Stand with Fireplace, please contact Nordivale customer service. Contact information can typically be found on the product packaging, the included assembly guide, or on the official Nordivale website.
We are committed to providing support and ensuring your satisfaction with our products.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FX2QTBBW

More documents and user manuals: **https://manuals.plus/**