Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Electactic H36902

Electactic Portable Ceramic Space Heater (Model H36902) Instruction Manual

Your guide to safe and efficient operation of your Electactic Space Heater.

1. Important Safety Instructions

Please read all instructions carefully before using this heater. Failure to follow these instructions may result in fire, electric shock, injury to persons, or property damage.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not use outdoors.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has a Multi-Protection Safety System including an automatic overheat shutoff and a tip-over switch.

Safety Features:

- **Overheat Protection:** The heater will automatically shut off if it overheats.
- **Tip-Over Protection:** The heater will automatically shut off if it is accidentally knocked over. Operation resumes once the unit is placed upright.
- **Flame-Retardant Materials:** Constructed from V-0 flame-retardant materials to minimize fire hazards.
- **Enhanced Safety Plug:** Designed for secure electrical connection.

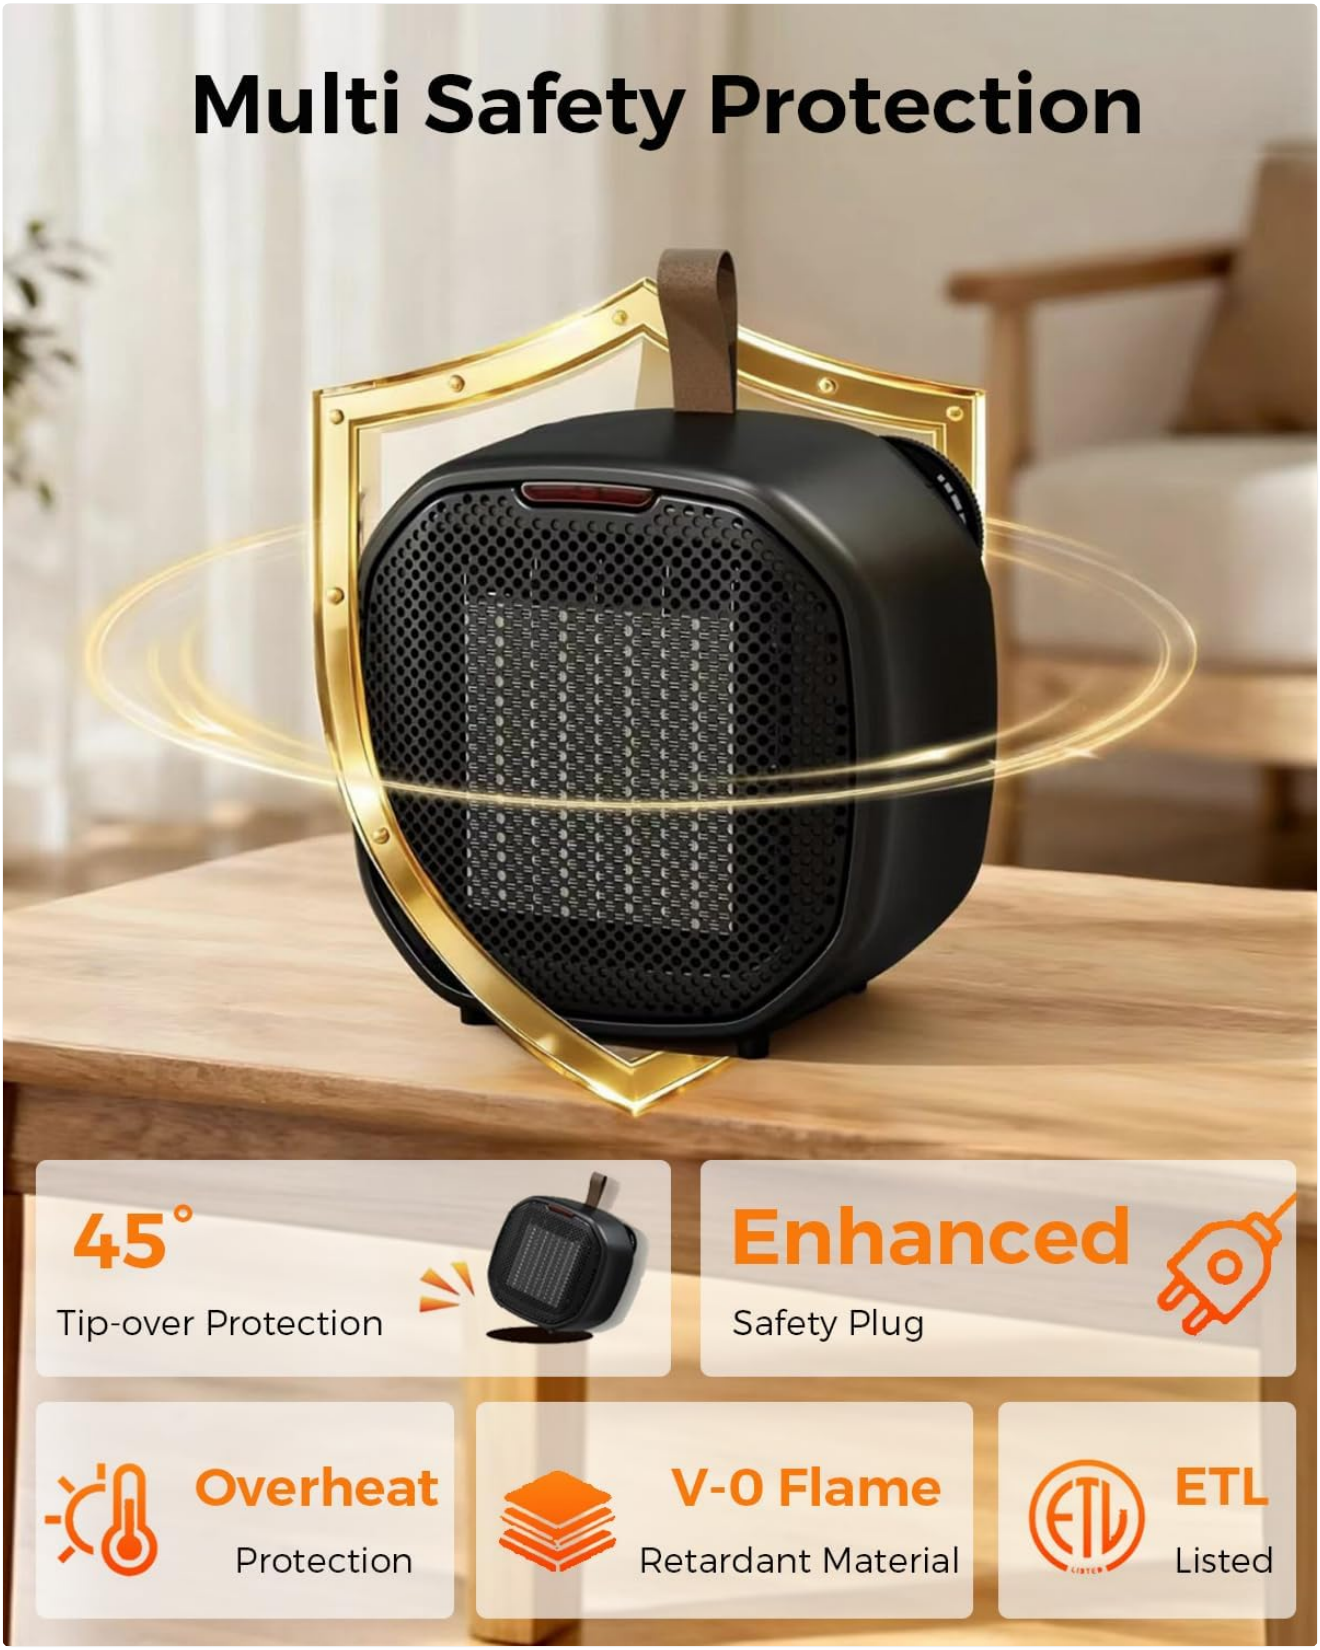


Image: Multi-Protection Safety System. This image highlights the heater's safety features with clear icons for tip-over protection, overheat protection, flame-retardant materials, and an enhanced safety plug.

2. Product Overview

The Electactic Portable Ceramic Space Heater (Model H36902) is a versatile 2-in-1 device offering both heating and cooling functions. It features PTC ceramic heating technology for rapid warmth and a fan mode for cool air circulation. Its compact design and built-in safety features make it suitable for various indoor spaces.



Image: Compact Heater with Fan. This image illustrates the heater's small size and its dual functionality, emitting both heat and cool air.



Image: Portable Space Heater. This image demonstrates the heater's portability with its integrated handle, making it easy to move and position for targeted warmth.

3. Setup

3.1 Placement

Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 meters) of clear space around the heater to allow for proper airflow and to prevent fire hazards. Do not place the heater on soft surfaces like rugs or carpets that could block the air intake.

3.2 Power Connection

Plug the heater directly into a 120V AC, 60Hz wall outlet. Do not use extension cords, power strips, or surge protectors with this appliance. Ensure the outlet is in good condition and not loose.



Image: Portable Warmth Wherever You Need It. This image illustrates the versatility of the heater, showing it in different rooms and environments, emphasizing its ease of placement.

4. Operating Instructions

4.1 Power On/Off

To turn the heater on, rotate the power/mode knob to your desired setting (Fan, Low Heat, or High Heat). To turn off, rotate the knob to the 'OFF' position.

4.2 Heating Modes

The heater offers three modes:

- **Fan Only:** Circulates cool air.
- **Low Heat (750W):** Provides moderate warmth, ideal for smaller spaces or maintaining temperature.
- **High Heat (1500W):** Delivers maximum warmth for rapid heating of areas up to 200 square feet.



Image: Rapid Heating. This image highlights the heater's ability to provide warmth quickly using PTC ceramic technology.

4.3 Thermostat Control

Adjust the thermostat knob to set your desired room temperature between 41°F and 95°F. The heater will automatically cycle on and off to maintain the set temperature, providing energy-efficient heating.

4.4 Quiet Operation

Designed for quiet operation, the heater produces less than 45 decibels of noise, making it suitable for use in bedrooms, offices, or dorms without disturbance.

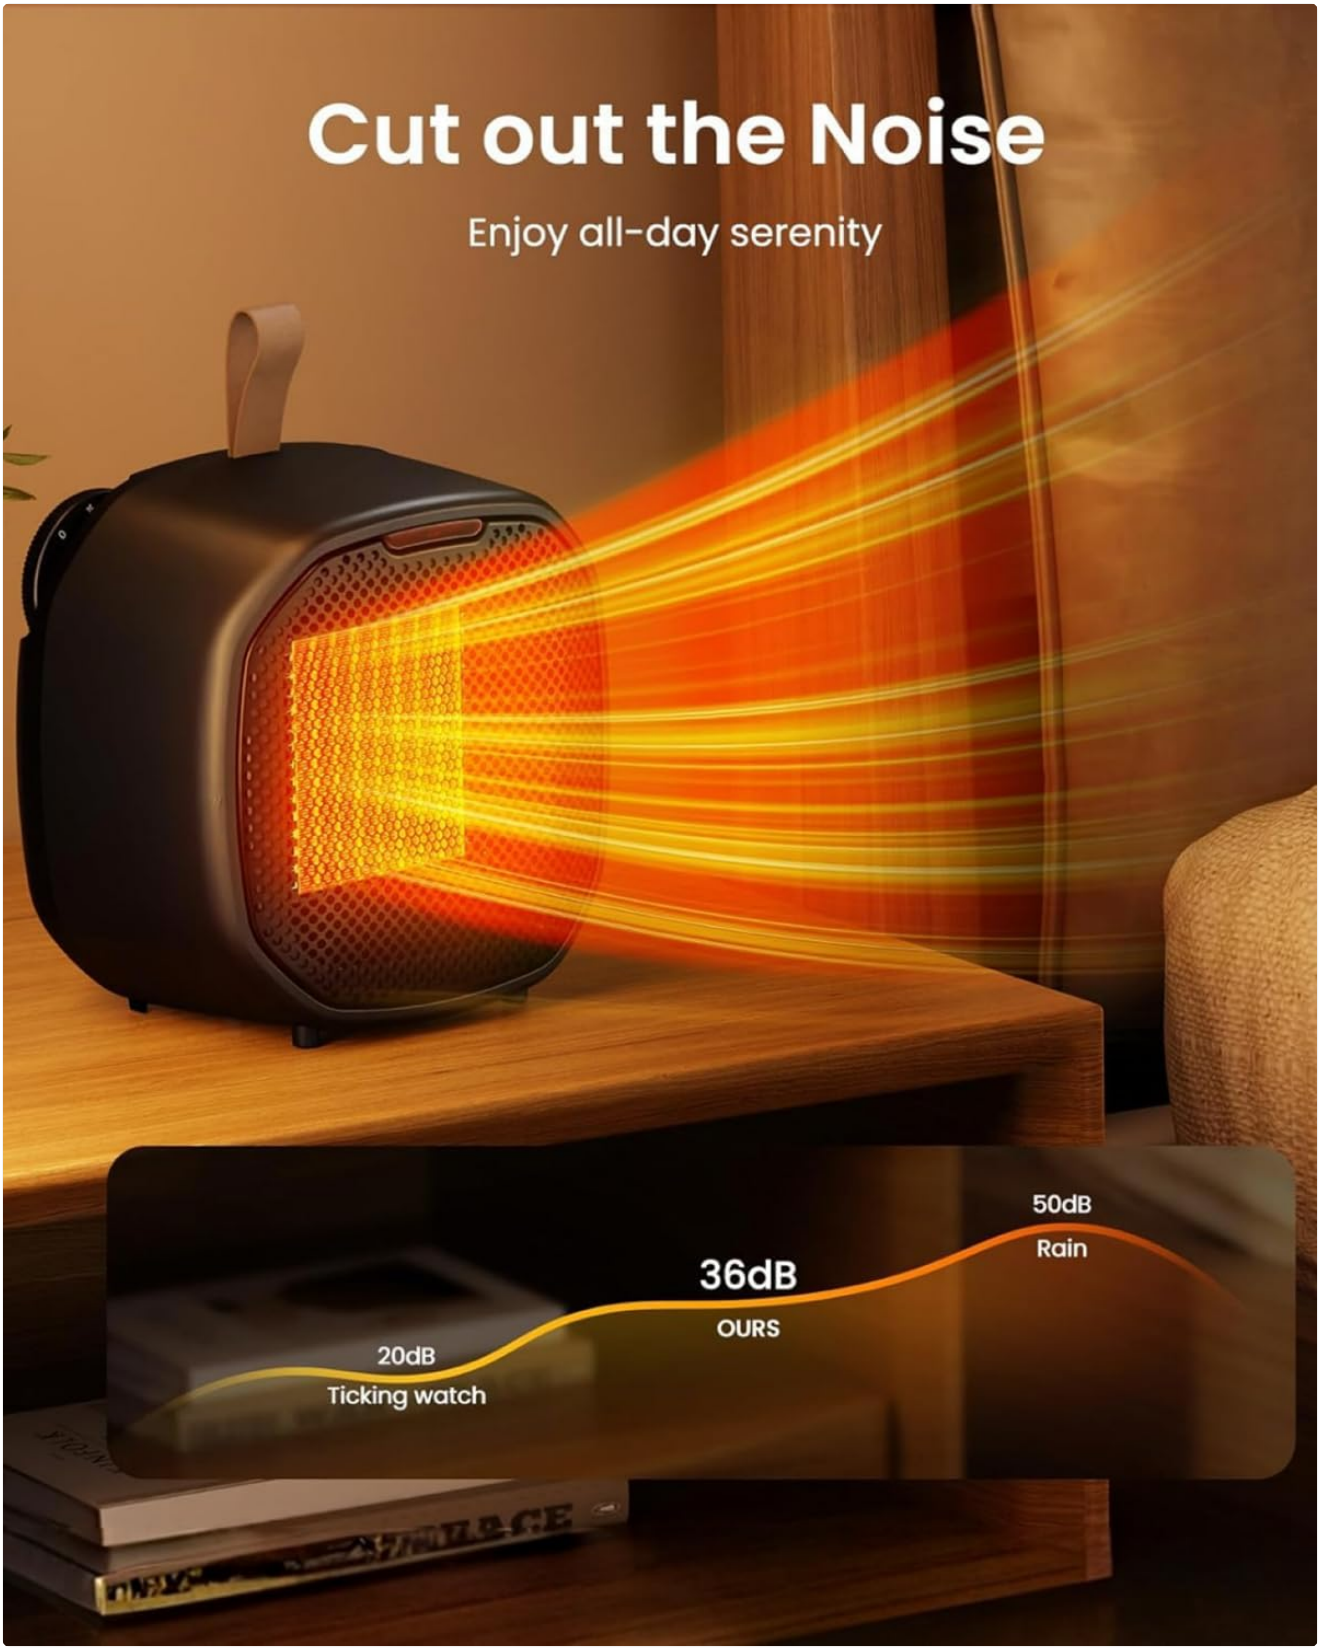


Image: Cut Out the Noise. This image illustrates the heater's low noise output, ensuring a peaceful environment during operation.

4.5 Official Product Videos

Electactic Portable Ceramic Space Heater Overview:

Your browser does not support the video tag.

Video: This official seller video provides a general overview of the Electactic Portable Ceramic Space Heater, showcasing its features and design.

Electactic Space Heater Tip-Over Safety Demonstration:

Your browser does not support the video tag.

Video: This official seller video demonstrates the tip-over safety feature of the Electactic Space Heater, showing how it automatically shuts off when tilted.

5. Maintenance

5.1 Cleaning

- Always unplug the heater before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use abrasive cleaners or solvents.
- Gently vacuum the air intake and exhaust grilles to remove dust and lint buildup.
- Ensure no water or other liquids enter the interior of the heater.

5.2 Storage

When not in use, store the heater in a cool, dry location. It is recommended to store it in its original packaging to protect it from dust and damage.

6. Troubleshooting

If your heater is not operating correctly, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; power outlet not working; tip-over switch activated; overheat protection activated.	Ensure plug is firmly in a working outlet. Check household circuit breaker. Place heater on a flat, stable surface. Allow heater to cool down for 30 minutes, then restart.
Heater blows cold air in heat mode.	Thermostat set too low; unit in fan-only mode.	Increase the thermostat setting. Ensure the mode knob is set to Low Heat or High Heat.
Heater stops working unexpectedly.	Overheat protection activated; tip-over switch activated.	Allow heater to cool down. Ensure heater is on a stable surface and not obstructed.
Reduced heat output.	Air intake/exhaust blocked; dust buildup.	Clear any obstructions. Clean air grilles as per maintenance instructions.

7. Specifications

Feature	Detail
Brand	Electactic
Model Number	H36902
Power Source	Electric
Voltage	120 volts
Amperage	12.5 A

Feature	Detail
Heat Output	1500 watts (High), 750 watts (Low)
Heating Method	PTC Ceramic
Heating Coverage	Up to 200 sq.ft
Min Temperature Setting	41 °F
Max Temperature Setting	95 °F
Special Features	Adjustable Temperature, Electronic Thermostat, Fast Heating, Overheat Protection, Tip-Over Protection
Item Dimensions (D x W x H)	5.47"D x 6.85"W x 9.65"H
Item Weight	2 pounds
Indoor/Outdoor Usage	Indoor

8. Warranty and Support

For warranty information or technical support, please contact Electactic customer service. Refer to the product packaging or the official Electactic website for contact details.
Please retain your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0FX3L3VPL

More documents and user manuals: **https://manuals.plus/**