
BETMI X5 controller mg

BETMI X5 Wireless Controller Instruction Manual

Model: X5 Controller MG

1. Product Overview

The BETMI X5 Wireless Controller is designed for an enhanced gaming experience across multiple platforms. It features a 2.4GHz wireless connection, Hall Effect joysticks for precision, programmable back buttons, Turbo function, and dual vibration motors. This controller is compatible with Xbox One, Xbox Series X, Xbox Series S, and PC (Windows 10 or above).

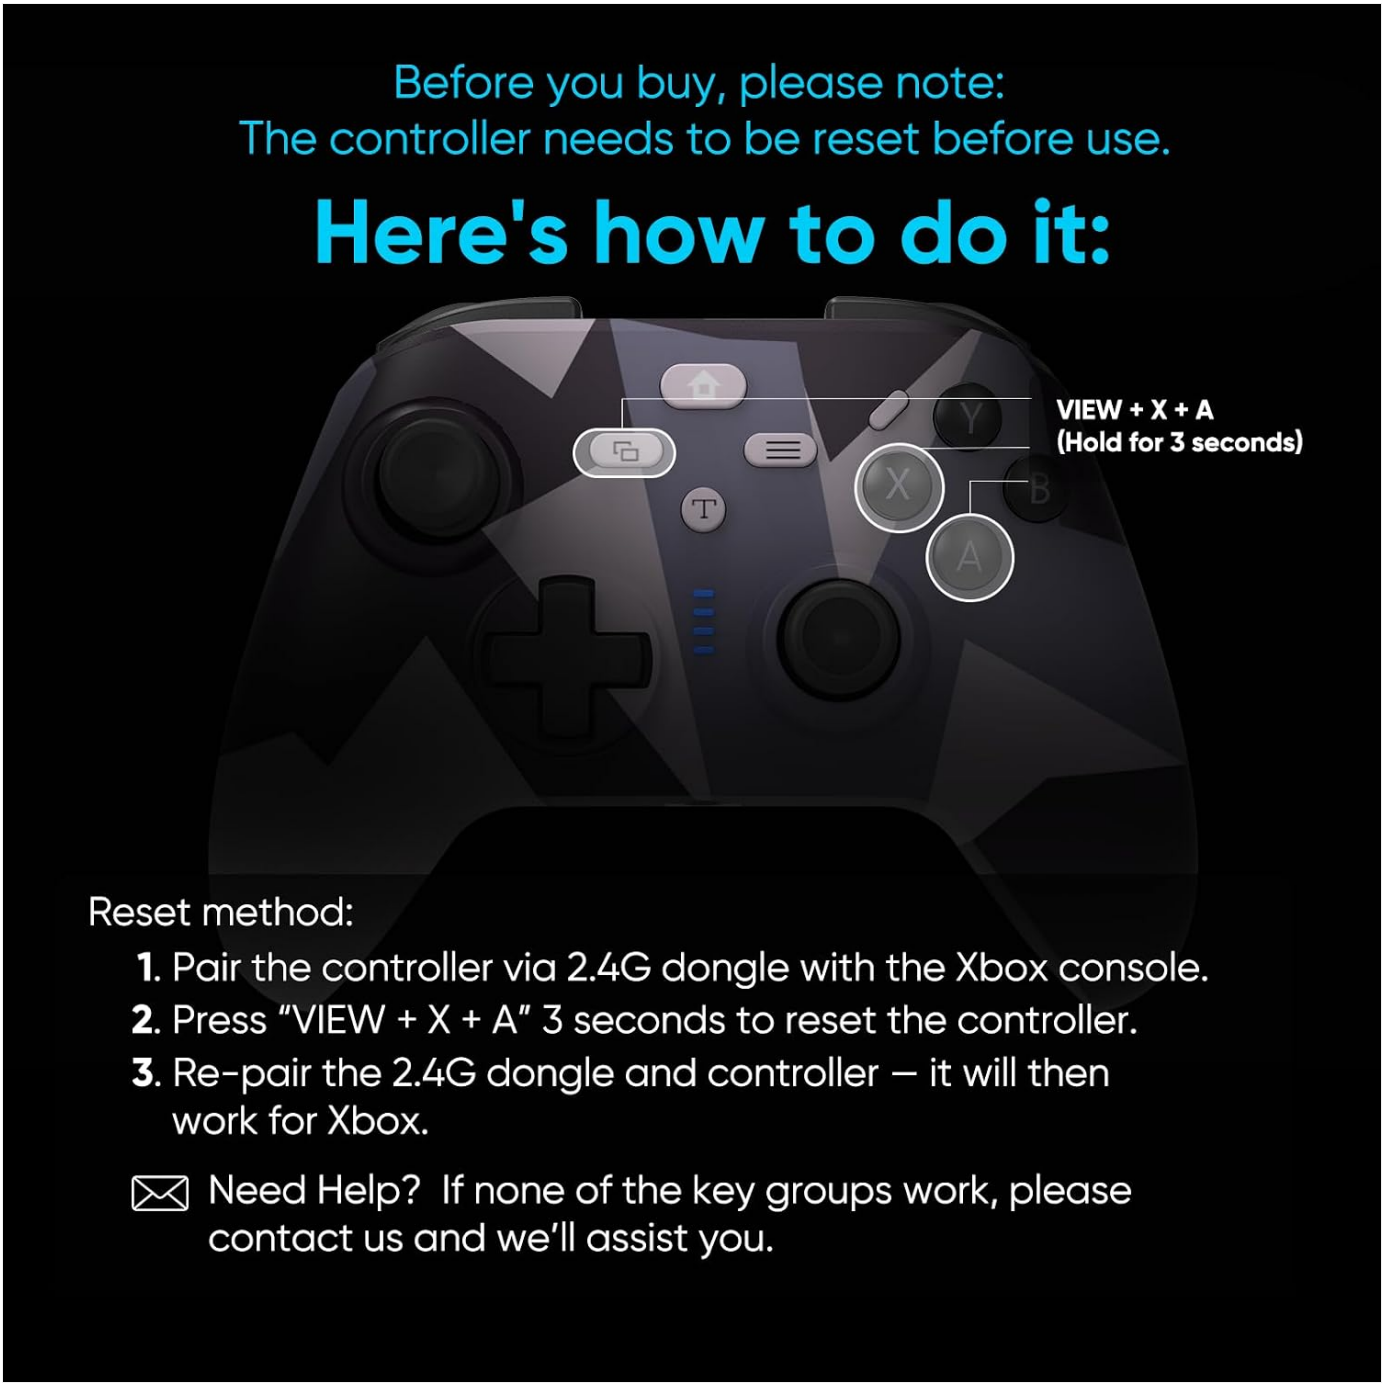

Front view of the BETMI X5 Wireless Controller, showcasing its ergonomic design and button layout.


2. Setup and Connection

Initial Controller Reset (Important for Xbox Compatibility)

Before initial use, especially with Xbox consoles, a reset procedure may be required due to system updates. Follow these steps:

1. Connect the controller and its 2.4G dongle to your Xbox console.
2. Press and hold the **VIEW** button + **X** button + **A** button simultaneously for 3 seconds.
3. The controller and receiver will disconnect, and the LED indicator will flash slowly.
4. The controller and receiver will then automatically reconnect, and the LED will remain solid, indicating a successful reset and re-pairing.

If the controller still does not function correctly after this reset, proceed to try Key Group 2 and Key Group 3 as described in the Troubleshooting section.

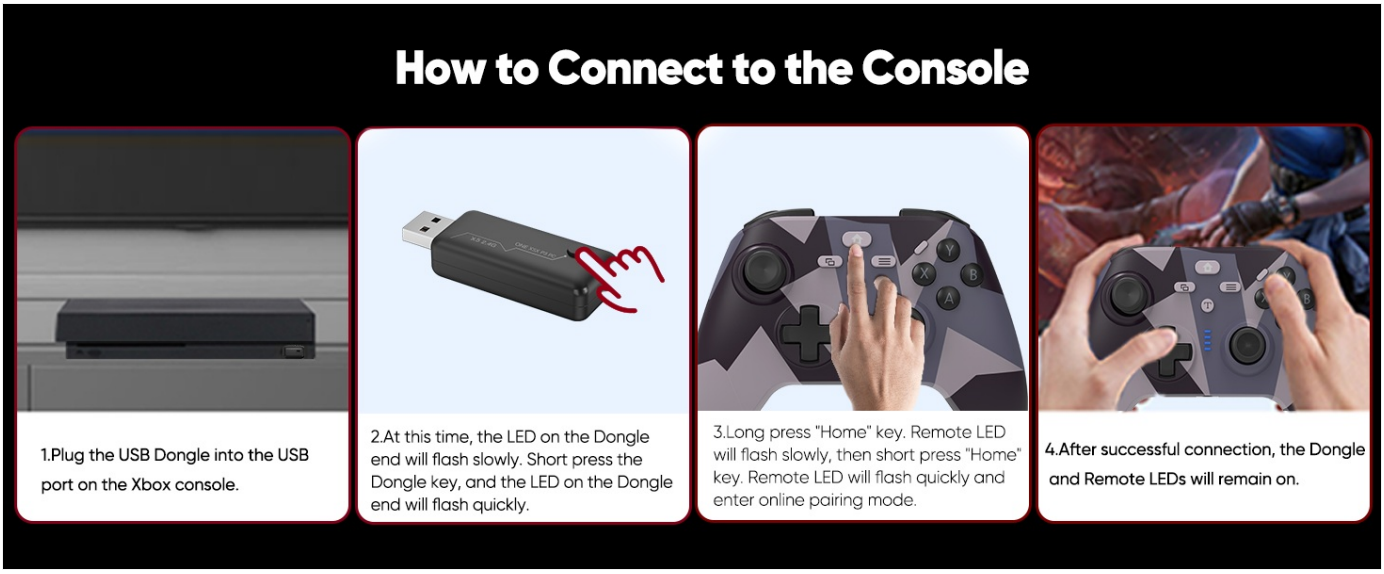

Visual guide for connecting the controller to your console using the USB dongle.

Standard Connection Procedure

1. Plug the USB dongle into an available USB port on your Xbox console or PC.
2. The LED on the dongle will flash slowly, then quickly.
3. Long press the **Home** button on the controller. The remote LED will flash slowly, then quickly, entering online pairing mode.
4. Upon successful connection, both the dongle and controller LEDs will remain solid.



The controller is compatible with Xbox One, Xbox Series X, Xbox Series S, and PC (Windows 10/11).

3. Operating Instructions

Key Features and Functions

- **Hall Effect Joysticks:** Experience zero drift and precise control with a lifespan of up to 5 million cycles. Ideal for accurate movements in FPS and racing games.
- **Turbo Mode:** Activate rapid-fire input for any button. Press a single button to continuously fire or perform actions, reducing finger fatigue in fast-paced games.
- **Macro Programming & Button Remapping:** Program complex combo moves to a single button press or customize button layouts to suit your play style and game requirements.
- **Dual Vibration:** Enjoy realistic and responsive haptic feedback with dual shock motors, enhancing immersion in games.

- **Dedicated Share Button:** Easily record gameplay clips, take screenshots, and stream your gaming moments.
- **3.5mm Audio Jack:** Connect your headset directly to the controller for in-game audio and communication.



Detailed view of the Hall Effect Joysticks for anti-drift and no-delay input, and upgraded linear triggers for low latency and frictionless operation.



Illustration of the Macro Function, allowing the 16 base keys to be extended to two game buttons (MR and ML) for personalized gameplay.



The Turbo Function provides a competitive edge by enabling rapid-fire mode for quick and efficient gameplay.

4. Maintenance and Charging

Charging the Controller

For optimal performance and battery safety, charge the controller using one of the following methods:

- Connect the controller to a PC USB port.
- Connect the controller to a game console USB port.
- Use a 5V/2A (or lower) power adapter.

The controller features a 600mAh battery, providing approximately 8 hours of playing time after a 1.5-hour charging period.



Illustration of the dual vibration motors and the internal 600mAh large capacity battery, offering extended playtime.

5. Troubleshooting

Xbox Compatibility Issues

If your controller is not compatible with Xbox after a system update, try the following key group switches:

1. **Switch to Key Group 2:**
   Connect the controller and the receiver to the Xbox console.
   Press and hold **VIEW** + **X** + **A** for 3 seconds.
   The controller and receiver will disconnect, the LED will flash slowly, then reconnect and the LED will stay solid. If the controller works normally, no further action is needed.
2. **Switch to Key Group 3:**
   If Key Group 2 does not resolve the issue, press and hold **VIEW** + **Y** + **B** for 3 seconds.
   The process for disconnection and reconnection is the same as for Key Group 2.

If none of the three key groups work, please contact BETMI customer support for further assistance.

6. Specifications

Model Number	X5 controller mg
Connectivity	2.4GHz Wireless

Compatibility	Xbox One, Xbox Series X, Xbox Series S, PC (Windows 10 or above)
Battery Capacity	600mAh
Charging Time	Approx. 1.5 hours
Playing Time	Approx. 8 hours
Wireless Range	Up to 33 feet
Item Weight	9.1 ounces
Package Dimensions	6.22 x 4.57 x 2.56 inches

7. Warranty and Support

Warranty Information

For detailed warranty information, please refer to the documentation included with your purchase or contact BETMI customer support directly. Warranty terms may vary by region and retailer.

Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact BETMI customer support. Refer to your product packaging or the BETMI official website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question