PROGRACE T8

PROGRACE Kids Smart Phone T8 User Manual

Model: T8

Your guide to setting up and using your PROGRACE Kids Smart Phone.

1. Introduction

The PROGRACE Kids Smart Phone T8 is an all-in-one device designed for learning, fun, and safety. It combines safe communication features with educational and entertainment content, making it an ideal first smart device for children aged 5-14. This manual provides comprehensive instructions to help you and your child get the most out of this device.



Image: The PROGRACE Kids Smart Phone T8 with its vibrant interface showcasing communication, entertainment, and educational applications.

2. What's in the Box

Upon unboxing your PROGRACE Kids Smart Phone T8, you should find the following items:

- Kids Phone
- 32GB SD Card (pre-installed)
- User Manual
- Lanyard
- Type-C Cable

Video: An overview of the PROGRACE Kids Smart Phone T8, highlighting its features and components.

3. Setup Guide

Follow these steps to set up your Kids Smart Phone T8:

1. **Unpack the Device:** Carefully remove the phone and all accessories from its packaging.
2. **Check SD Card:** The 32GB SD card is pre-installed. Ensure it is securely in place.
3. **Charge the Phone:** Connect the included Type-C cable to the phone's charging port and a suitable power adapter (not included). Allow the phone to fully charge before first use.
4. **Power On:** Press and hold the power button until the screen lights up.
5. **Initial Configuration:** Follow the on-screen prompts to set up basic device settings, including language and time zone.
6. **Parental Control Setup:** Access the parental control settings to configure app access, screen time limits, and enable whitelist mode for safe browsing.
7. **SIM Card (Optional):** If you wish to enable calling and texting features, you will need to purchase and insert a compatible SIM card (not included).

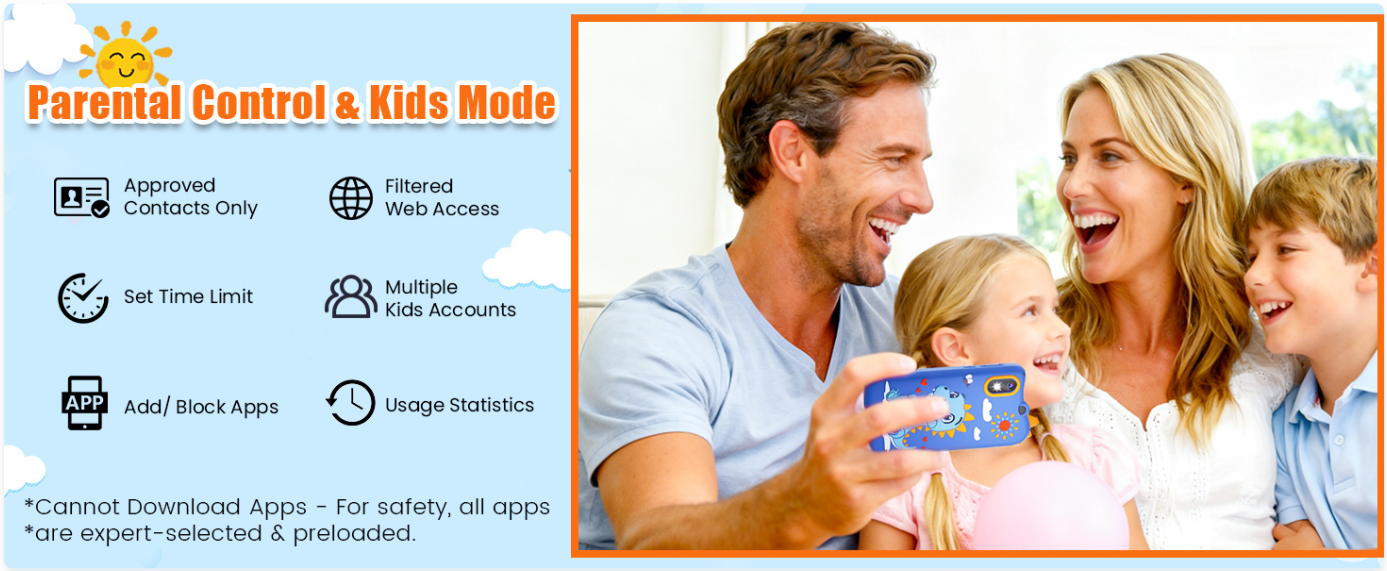


Image: Detailed diagram of the PROGRACE Kids Smart Phone T8, indicating the location of the rear camera, volume buttons, power button, charging port, speaker, front camera, touch screen, and home button.

4. Operating Instructions

The PROGRACE Kids Smart Phone T8 offers a user-friendly interface with various functions:

4.1. Communication

With a compatible SIM card, your child can make and receive calls and send text messages to approved contacts. Parental controls allow you to manage who your child can communicate with.



Image: The Kids Smart Phone T8 displaying phone call, safe contacts, and messaging features, emphasizing secure communication.

4.2. Display and Interface

The phone features a 4.2-inch IPS eye-protection display with 1080P resolution, designed to be gentle on children's eyes while providing clear visuals for games and videos.



Image: The phone's screen highlighting its 4.2-inch IPS display with eye-care features and high resolution.

4.3. Basic Applications

The device comes preloaded with essential tools and applications:

- **Calculator:** For basic math operations.
- **Calendar:** To keep track of dates and events.
- **Clock:** Includes alarm, timer, and stopwatch functions.
- **Music Player:** Enjoy preloaded or transferred music files.
- **File Manager:** Organize photos, videos, and other files.

5. Parental Controls

The PROGRACE Kids Smart Phone T8 is equipped with advanced parental controls to ensure a safe digital environment for your child. All apps are expert-selected and preloaded; no new apps can be downloaded, preventing access to unapproved content.

- **App Restrictions:** Manage which applications your child can access.
- **Screen Time Limits:** Set daily or weekly limits for device usage.
- **Usage Reports:** Monitor your child's activity on the device.
- **Whitelist Mode:** Restrict web access to only pre-approved websites.
- **Approved Contacts Only:** Ensure communication is limited to trusted individuals.
- **Multiple Kids Accounts:** Create separate profiles for different children.



Image: The parental control dashboard on the Kids Smart Phone T8, illustrating options for managing applications, websites, media content, accounts, time limits, and usage statistics.

Video: A demonstration of the general content and parental control features available on the PROGRACE Kids Smart Phone T8.

6. Educational & Entertainment Features

The phone comes preloaded with over 200 educational games and activities designed to foster creativity, problem-solving, and healthy screen time.

- **Montessori Learning Apps:** Over 94 games focusing on foundational skills.
- **STEM Activities:** Over 19 games to introduce science, technology, engineering, and mathematics concepts.
- **Logic Games:** Over 51 mini-games to enhance critical thinking and hand-eye coordination.
- **Brain Training:** Over 14 games designed to improve cognitive skills.
- **First Learning:** Over 46 games for early learning, including ABCs and 123s.
- **Art and Craft:** Over 39 games to boost creative imagination.
- **Kids TV & Videos:** Access to curated children's video content.



Image: The phone's screen showing a selection of educational games, including Montessori, STEM, and mini-games.

Video: A demonstration of brain-teasing games available on the PROGRACE Kids Smart Phone T8.

7. Camera Features

Capture precious moments with the dual camera system:

- **Dual Cameras:** 2MP front camera and 13MP rear camera.
- **Autofocus:** Ensures clear and sharp images.
- **Selfies & Video Recording:** Perfect for capturing photos and videos.
- **Burst Shooting:** Capture multiple photos in quick succession.
- **1080P Full HD Video:** Record high-quality videos.



Image: The Kids Smart Phone T8 showcasing its 2MP front and 13MP rear cameras, capable of 1080P Full HD video recording.

8. Storage & Battery

The PROGRACE Kids Smart Phone T8 is designed for extended use and ample storage:

- **Large Storage:** 16GB built-in storage, expandable with a pre-installed 32GB SD card, totaling 48GB. This is sufficient for thousands of photos, videos, and learning materials.
- **Long-Lasting Battery:** A 3500mAh polymer battery supports fast charging and provides all-day use for studying and playing.



Image: Visual representation of the phone's 3500mAh battery for 24 hours of use and 48GB storage (16GB built-in + 32GB SD card) for over 10,000 photos and videos.

9. Specifications

Feature	Detail
Product Dimensions	5.7 x 2.9 x 0.6 inches
Item Weight	9.9 ounces
Item Model Number	T8
Manufacturer Recommended Age	36 months - 14 years
Batteries	1 Nonstandard Battery (included)
Display	4.2" IPS Eye-Protection Display, 1080P
Cameras	2MP Front, 13MP Rear
Storage	16GB Built-in + 32GB SD Card (total 48GB)
Battery Capacity	3500mAh Polymer Battery

10. Maintenance

To ensure the longevity and optimal performance of your PROGRACE Kids Smart Phone T8, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior. Avoid abrasive cleaners or solvents.
- **Environmental Conditions:** Keep the device away from extreme temperatures, direct sunlight, and high humidity.
- **Protection:** Utilize the provided protective case to guard against drops and impacts.
- **Charging:** Always use the original Type-C cable for charging. Avoid overcharging the battery.
- **Software Updates:** Periodically check for and install any available software updates to ensure the best performance and security.

11. Troubleshooting

If you encounter any issues with your PROGRACE Kids Smart Phone T8, please refer to the following common solutions:

- **Device Not Turning On:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Screen Unresponsive:** Try restarting the device by holding down the power button. If unresponsive, allow the battery to fully drain and then recharge.
- **App Freezing/Crashing:** Close the problematic app and reopen it. If the issue persists, restart the phone.

- **No Sound:** Check the volume settings and ensure the device is not in silent mode.
- **Charging Issues:** Verify that the Type-C cable is securely connected to both the phone and the power source. Try a different power adapter if available.
- **Parental Control Issues:** Double-check your parental control settings. If you forget your password, refer to the device's on-screen recovery options or contact support.

For persistent issues not covered here, please contact PROGRACE customer support.

12. Warranty & Support

The PROGRACE Kids Smart Phone T8 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.
For technical support, product inquiries, or warranty claims, please visit the official PROGRACE website or contact their customer service team using the information provided on the packaging or their website.
Online Resources:

- PROGRACE Official Website: Visit the PROGRACE Store on Amazon

© 2026 PROGRACE. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question