NUUK Brisk

NUUK BRISK 6.5L Ceramic Air Fryer

Model: Brisk | **Capacity:** 6.5 Liters

Instruction Manual

Introduction

Thank you for choosing the NUUK BRISK 6.5L Ceramic Air Fryer. This appliance is designed to provide a healthier way to cook your favorite meals with less oil. Featuring ILAG CeramicTech, it ensures a 100% toxin-free cooking experience. Please read this manual thoroughly before first use to ensure safe and optimal performance.

Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury.

- **Read all instructions:** Familiarize yourself with the appliance's functions and safety warnings before operation.
- **Electrical Safety:** Ensure the voltage indicated on the appliance matches your local power supply. Do not immerse the cord, plug, or appliance in water or other liquids.
- **Hot Surfaces:** The air fryer generates heat and steam during use. Do not touch hot surfaces. Always use oven mitts or a cloth when handling hot components.
- **Placement:** Place the appliance on a stable, heat-resistant surface, away from walls and other appliances to allow for adequate air circulation. Do not place near flammable materials.
- **Ventilation:** Do not block any air vents. Ensure there is at least 10 cm (4 inches) of clear space around the appliance.
- **Children:** This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- **Maintenance:** Unplug the air fryer from the outlet when not in use and before cleaning. Allow it to cool completely before adding or removing parts.
- **Damaged Cord/Plug:** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- **Intended Use:** Use the appliance only for its intended household purpose. Do not use outdoors.

Product Components

The NUUK BRISK Air Fryer comes with the following components:

- 1N Air Fryer Unit
- 1N Basket (with ILAG CeramicTech coating)
- 1N Cooking Tray (Crisper Tray, with ILAG CeramicTech coating)
- 1N Cable Organiser

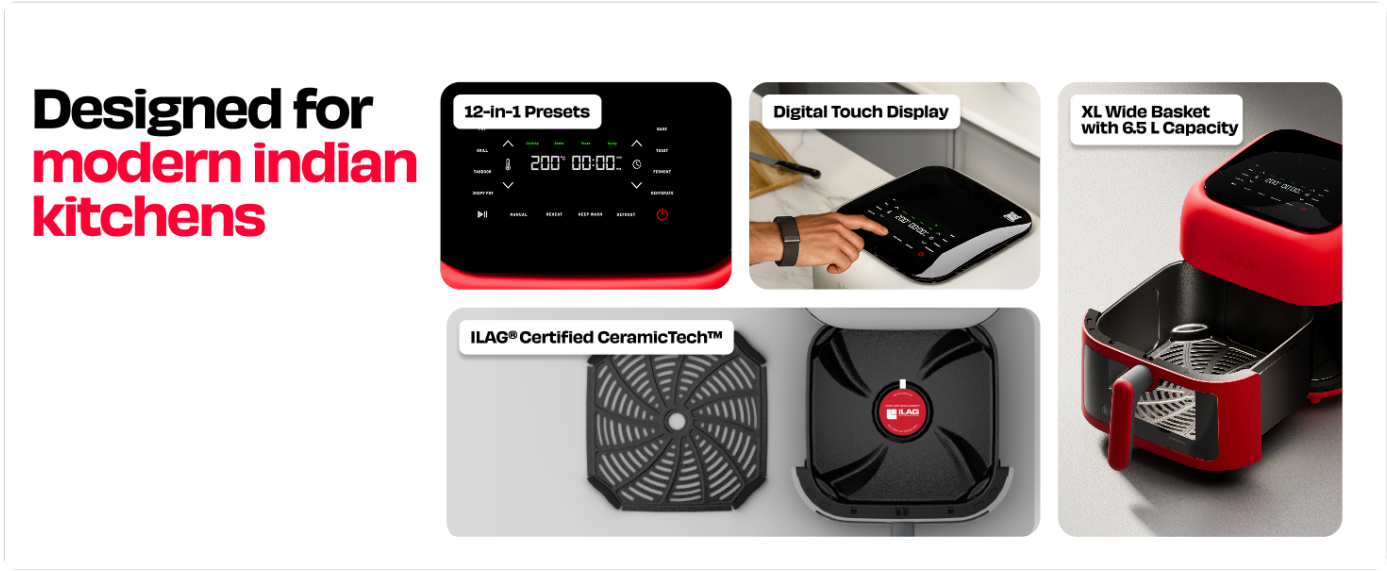


Image: Key features and components of the NUUK BRISK Air Fryer, including the toughened glass, extra long power cord with 16 Amp plug, cool touch handle, air vent, and cable organizer.



Image: Cross-section diagram illustrating the CeramicTech™ surface, composed of inert-silicone and ceramic layers, ensuring a toxin-free cooking surface.

Setup and First Use

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the air fryer.
2. **Clean Components:** Wash the basket and cooking tray with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. The main unit can be wiped with a damp cloth. *Note: The basket and cooking tray are NOT dishwasher safe.*

3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space around the back and sides of the appliance for proper ventilation.
4. **First Use (Burn-in):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight odor or smoke may be present, which is normal. Ensure the area is well-ventilated.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

Operating Instructions

Control Panel Overview



Image: The digital touch display of the NUUK BRISK Air Fryer, showing 8 cooking presets, a cooking status indicator, and 4 add-on functions (Manual, Reheat, Keep Warm, Defrost).

The NUUK BRISK Air Fryer features a digital touch display for easy operation. It includes 12 cooking presets and 4 additional functions.

Basic Operation

1. **Prepare Food:** Place your ingredients in the air fryer basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket firmly into the air fryer unit.
3. **Power On:** Press the power button to turn on the appliance.
4. **Select Preset or Manual Mode:**
    - **Presets:** Choose from 12 pre-programmed settings, including 4 unique Indian modes (Samosas, Kebabs, Roti, Tikkas). Select the desired preset by tapping its icon. The air fryer will automatically set the optimal time and temperature.
    - **Manual Mode:** To set time and temperature manually, use the temperature and time adjustment buttons.
5. **Adjust Settings (if needed):** Use the temperature (up/down arrows) and time (up/down arrows) buttons to adjust settings.
6. **Start Cooking:** Press the start/pause button to begin the cooking cycle.
7. **Shake Reminder:** For some recipes, the air fryer may beep to remind you to shake the basket for even cooking. Carefully remove the basket, shake the contents, and reinsert it. Cooking will resume automatically.
8. **Completion:** The air fryer will beep when the cooking cycle is complete. Carefully pull out the basket and transfer the food to a serving dish.

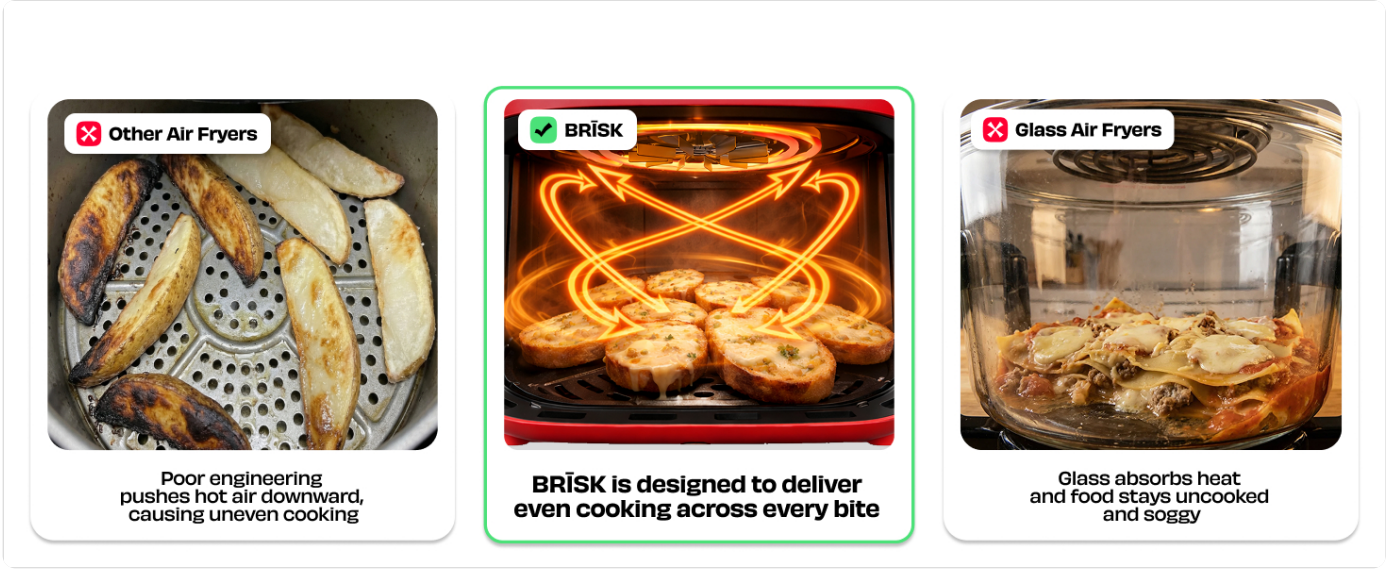


Image: Four unique Indian presets available on the NUUK BRISK Air Fryer: Tandoor (for Paneer Tikka, Kebabs), Crispy Fry (for Samosa, Onion Bhaji, Aloo Tikki Chaat), Ferment (for Dhokla, Dough), and Dehydrate (for Banana Chips, Beetroot Chips, Poha).

360° Even Cooking Technology

The BRISK Air Fryer utilizes a 360° air circulation system to ensure food is cooked evenly and thoroughly, resulting in crispy exteriors and juicy interiors without dryness.



Image: Illustration of the 360° air circulation system within the NUUK BRISK Air Fryer, designed for superior airflow and even cooking results.

Maintenance and Cleaning

Regular cleaning of your NUUK BRISK Air Fryer will ensure its longevity and optimal performance.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Basket and Cooking Tray:**
    - Wash the basket and cooking tray with hot water, dish soap, and a non-abrasive sponge.

- For stubborn food residues, soak the basket in hot soapy water for about 10 minutes before cleaning.
- *Important: These components are NOT dishwasher safe. Hand wash only.*
- Ensure they are completely dry before reassembling or storing.

3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent. Avoid abrasive cleaners or metal scouring pads.
4. **Clean Exterior:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles. Ensure the appliance is completely cool and unplugged.
6. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

Troubleshooting

If you encounter any issues with your NUUK BRISK Air Fryer, please refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance fault.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Basket is overcrowded; food not shaken; incorrect temperature/time.	Do not overcrowd the basket. Shake the basket halfway through cooking. Adjust temperature or cooking time as needed.
Food is not crispy.	Too much moisture; insufficient oil (for some foods); low temperature.	Pat food dry before air frying. Lightly brush or spray with oil for extra crispiness. Increase cooking temperature or time slightly.
White smoke coming from the appliance.	Greasy food; oil residue in basket; food with high fat content.	Clean the basket and cooking tray thoroughly after each use. Remove excess oil from food. For high-fat foods, place a piece of aluminum foil at the bottom of the basket to catch drips.
Appliance smells during first use.	Manufacturing residue burning off.	This is normal for the first few uses. Ensure good ventilation. The smell will dissipate.

Specifications

Feature	Detail
Model Name	Brisk
Capacity	6.5 Liters
Color	Serene Grey
Material	Ceramic (ILAG CeramicTech)
Output Wattage	1600 Watts

Feature	Detail
Control Method	Touch
Product Dimensions (D x W x H)	37.8D x 28.5W x 27.3H Centimeters
Item Weight	4.1 Kilograms
Special Features	Toxin-Free Ceramic Coating, 360° Even Cooking, 12 Cooking Presets (including 4 Indian Modes)
Nonstick Coating	No (uses CeramicTech)
Dishwasher Safe	No
Included Components	1N Air Fryer, 1N Basket, 1N Cooking Tray, 1N Cable Organiser
Country of Origin	India

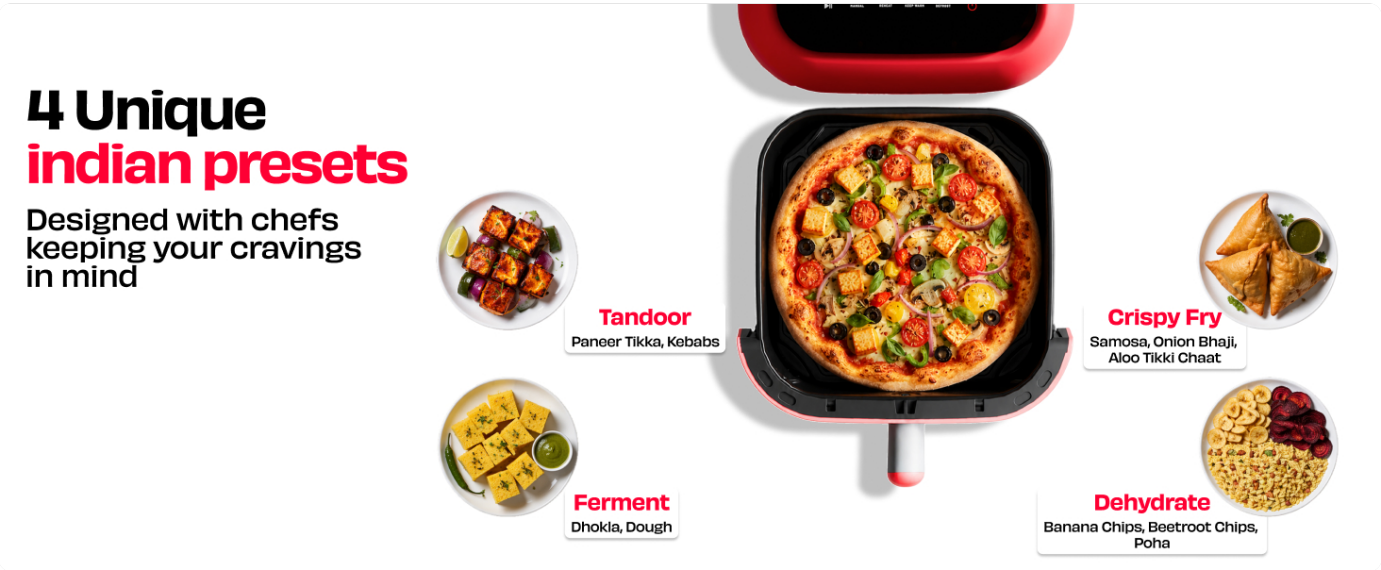


Image: Detailed comparison table showcasing the superior performance, usability, durability, and safety features of the NUUK BRISK Air Fryer compared to other conventional and glass air fryers.

Warranty and Support

The NUUK BRISK Air Fryer comes with a**1 + 1 Year Warranty**. For warranty claims, technical support, or any product-related inquiries, please contact Neutopia Technology Pvt. Ltd., the manufacturer.
Manufacturer: Neutopia Technology Pvt. Ltd.
Please refer to your purchase documentation for specific contact details or visit the official NUUK website for support information.

© 2026 NUUK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question