SAIMAND BZ-B01

SAIMAND BZ-B01 Battery Operated Wall Sconce Set of 2 Instruction Manual

Model: BZ-B01 | Brand: SAIMAND

Introduction

This manual provides detailed instructions for the installation, operation, maintenance, and troubleshooting of your SAIMAND BZ-B01 Battery Operated Wall Sconce Set of 2. Please read this manual thoroughly before use to ensure proper function and safety. These wireless, rechargeable LED wall sconces offer versatile lighting with multiple color temperatures, RGB modes, and dimming capabilities, controlled by a remote.

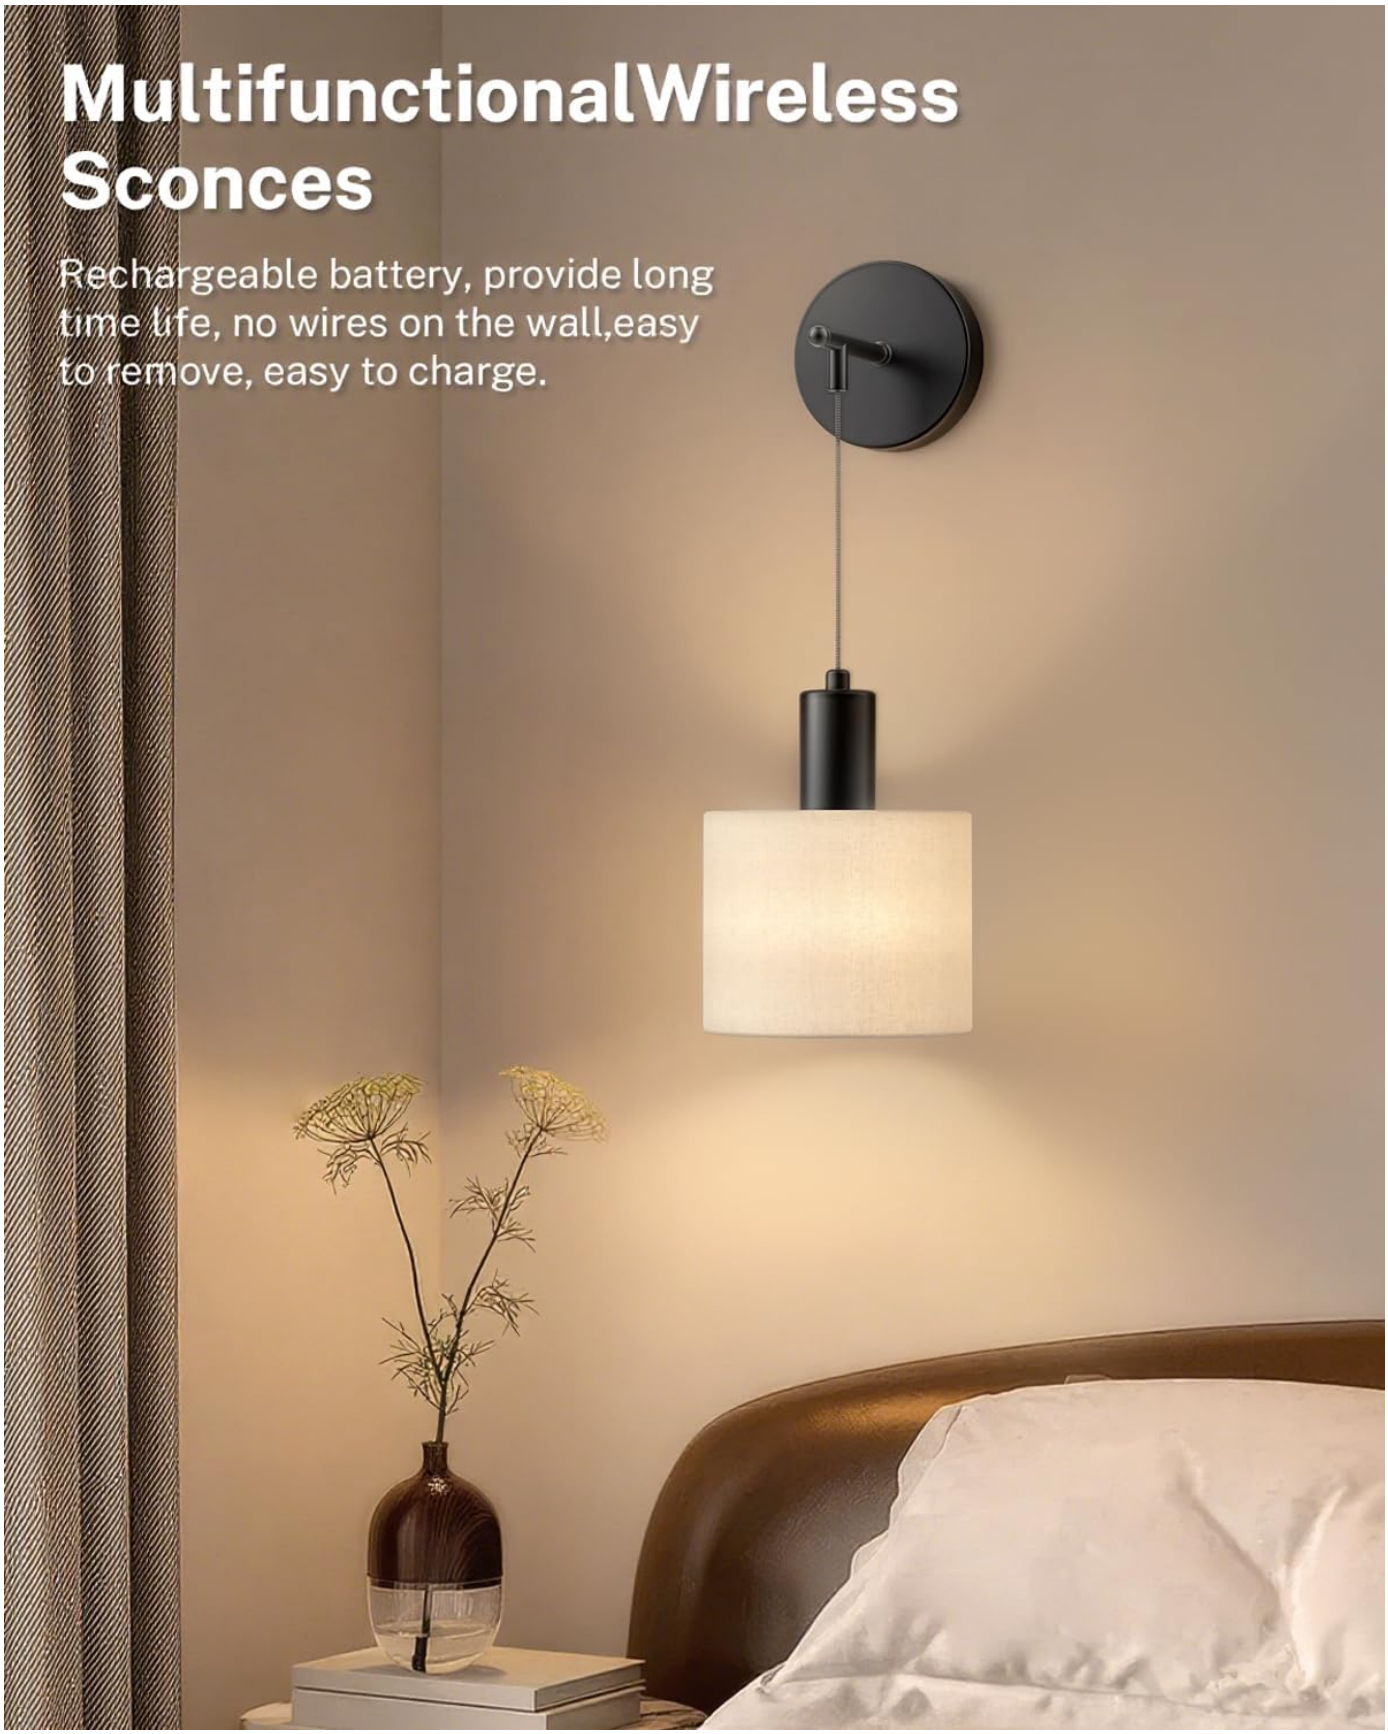


Image: SAIMAND BZ-B01 Wall Sconce installed in a bedroom, highlighting its multifunctional wireless design.

What's in the Box

Verify that all components are present before beginning installation.

- 2x Remote Control
- 2x Metal Lamp Holders

- 2x Lamp Tubes (LED Bulbs)
- 2 Sets of Screws for Mounting
- 2x USB Charging Cables
- 1x Pair of Gloves
- 1x Instruction Manual

Image: All components of the SAIMAND BZ-B01 wall sconce set laid out on a white surface, including lamp holders, shades, bulbs, remote controls, and mounting hardware.

Setup & Installation

The SAIMAND BZ-B01 wall sconces are designed for easy, wireless installation without the need for an electrician or complex wiring.

1. **Prepare the Lamp Shade:** Carefully remove any fasteners or packaging from the lamp shade.
2. **Assemble the Light Pole:** Attach the lamp shade to the light pole by securing it with the provided fasteners.
3. **Install the Bulb:** Insert the rechargeable LED bulb into the lamp holder. Ensure it is securely seated.
4. **Test the Lights:** Use the remote control to test the bulb's functionality, including turning it on/off and changing colors/brightness.
5. **Mount the Bracket:** Secure the metal mounting bracket to your desired wall location using the included screws.
6. **Install the Light Socket Holder:** Hang the light socket holder onto the mounted bracket. The magnetic design allows for easy attachment and removal for charging.

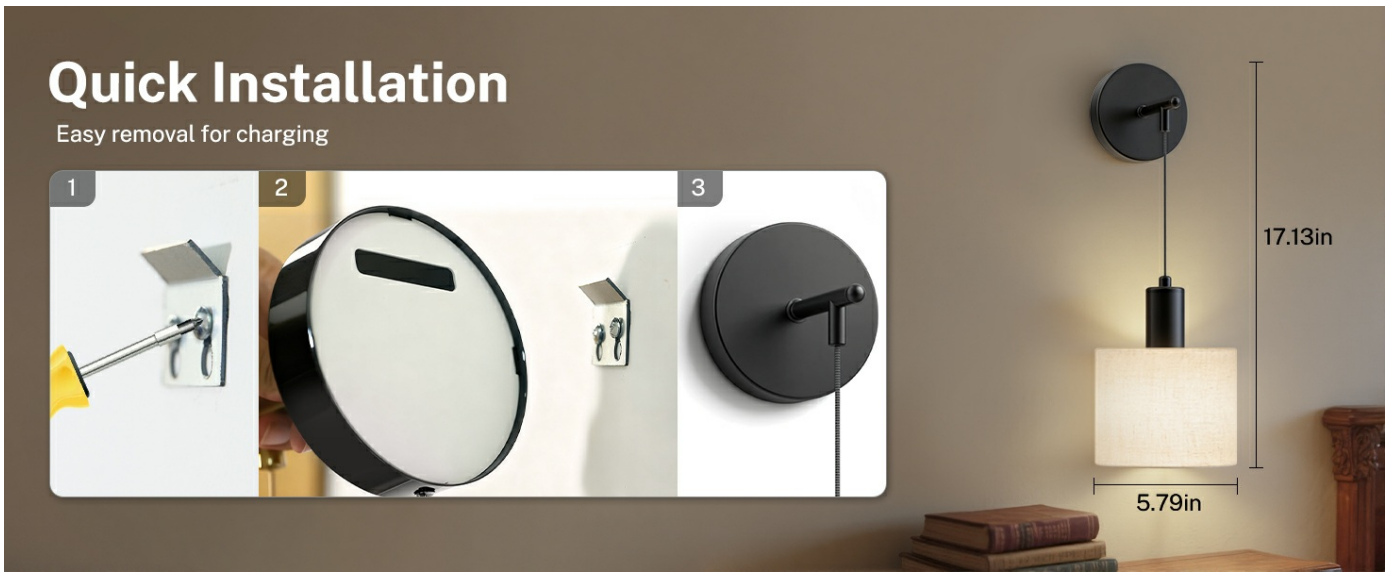


Image: Visual guide demonstrating the quick installation process, including mounting the bracket, attaching the lamp, and inserting the bulb.

Installation Video Guide

Video: A detailed video demonstrating the assembly and installation process of the SAIMAND wireless wall sconces, including testing with the remote control.

Operating Instructions

Remote Control Functions

The included remote control allows for full customization of your wall sconces' lighting.

- **Power On/Off:** Press the 'ON' or 'OFF' buttons to control the light.
- **Color Temperature Adjustment:** Choose between 3000K (Warm White), 4500K (Natural White), and 6000K (Cool White) for different ambient settings.
- **RGB Color Modes:** Select from 6 vibrant RGB modes to create dynamic lighting effects.
- **Brightness Adjustment:** Adjust brightness from 20% to 100% to suit your needs.
- **Timer Function:** Set an auto-off timer for 30, 60, or 120 minutes to conserve energy.



Image: The wall sconce displaying three distinct color temperatures (White, Natural, Warm) and stepless dimmable options from 40% to 100% brightness.



Image: Two SAIMAND BZ-B01 wall sconces illuminating a living room with vibrant RGB presets, demonstrating the color-changing capabilities.



Image: The wall sconce operating with a timer function, showing options for 30, 60, and 120 minutes, alongside the remote control detailing its various buttons for light control.

Charging

The wall sconces are equipped with 5000mAh rechargeable batteries and built-in USB-C charging ports. A full recharge takes approximately 5–6 hours, providing up to 10 hours of illumination at full brightness or over 48 hours on low settings.

Product Information

- Convenient voltage: DC5 to 6V
- Material: Metal,Flax
- Color: Gold + Beige Lampshde
- Cable length:17inch/43cm
- Charging: 5-6 hours
- Brightest: 10 hours
- Dimest: 48 hours or more





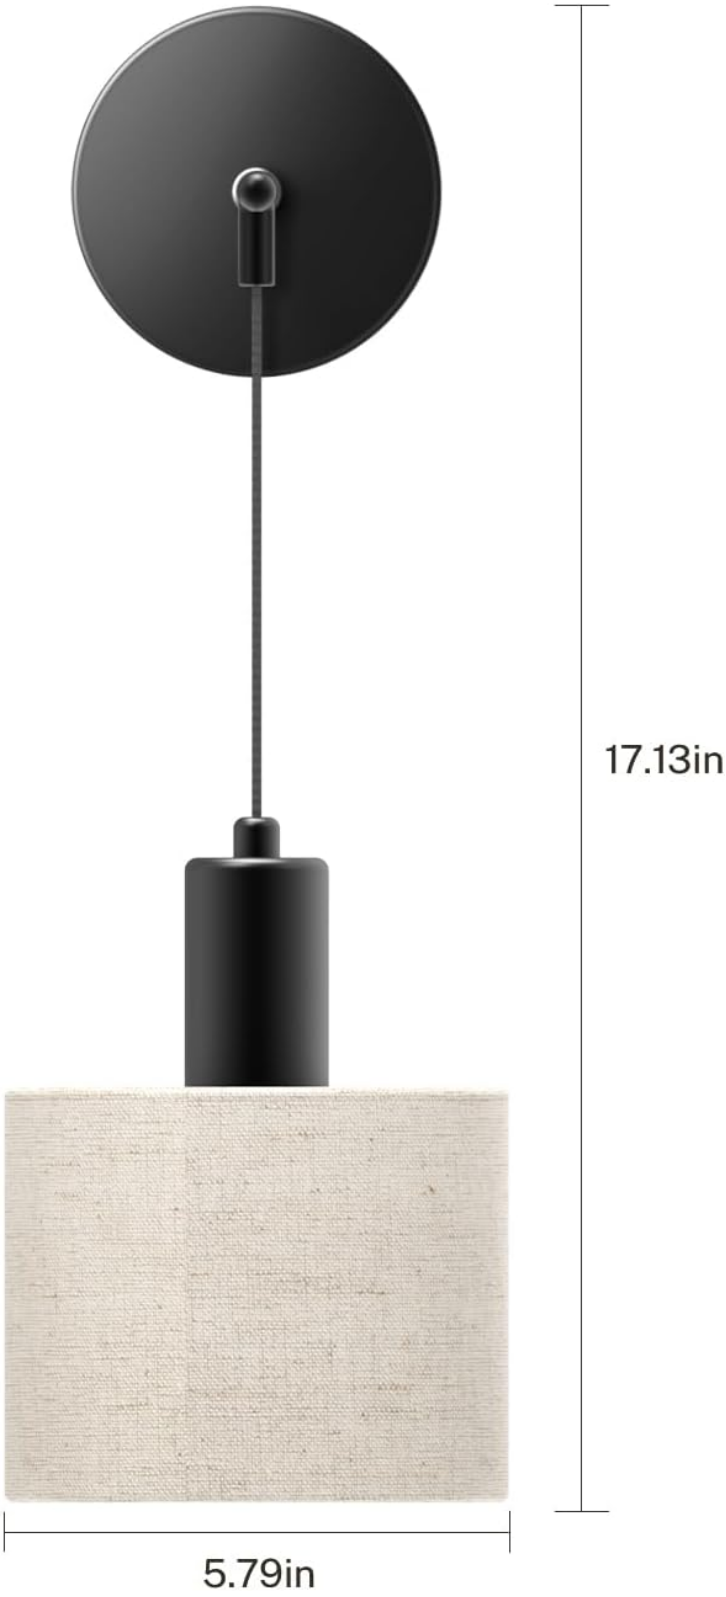


Image: A close-up of the rechargeable LED bulb being charged via a USB-C cable, with an indicator light showing charging status.

Maintenance

To ensure the longevity and optimal performance of your SAIMAND wall sconces, follow these simple maintenance guidelines:

- **Cleaning:** Gently wipe the metal lamp holder and fabric shade with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish.
- **Bulb Replacement:** The LED bulbs are designed for long life. If replacement is needed, ensure you use compatible rechargeable LED bulbs.
- **Battery Care:** For best battery life, avoid fully discharging the batteries frequently. Recharge them when the light output noticeably diminishes.

Troubleshooting

If you encounter any issues with your wall sconces, please refer to the following common problems and solutions:

- **Light does not turn on:**
  - Ensure the bulb is fully charged. Connect it to the USB-C charger for 5-6 hours.
  - Check if the bulb is correctly installed in the lamp holder.
  - Verify the remote control batteries are functional and correctly inserted.
- **Remote control not responding:**
  - Replace the remote control batteries.
  - Ensure there are no obstructions between the remote and the light.
- **Light output is dim:**
  - The battery may be low. Recharge the bulb.
  - Adjust the brightness setting using the remote control.
- **Inconsistent light color or brightness between sconces:**
  - Ensure both bulbs are fully charged.
  - If the issue persists, contact customer support for assistance.

Specifications

Feature	Detail
Brand	SAIMAND
Model Number	BZ-B01
Color	Black
Material	Fabric, Metal
Power Source	Battery Powered
Light Source	LED
Light Color	9 colors (3 color temperatures + 6 RGB modes)
Brightness	150 Lumen (Adjustable 20%-100%)
Wattage	5 watts

Voltage	4 Volts (DC5 to 6V)
Control Method	Remote, Touch
Battery Capacity	5000mAh
Charging Time	5-6 hours
Run Time (Full Brightness)	Up to 10 hours
Run Time (Low Brightness)	48+ hours
Item Dimensions (L x W x H)	17"L x 5.7"W x 5.7"H
Indoor/Outdoor Usage	Indoor
Mounting Type	Wall Mount

Warranty & Support

SAIMAND offers a 60-month (5-year) warranty on these wall lamps. If any issues arise within 3 years, including battery or lamp failure, SAIMAND will quickly resolve the issue or provide a free replacement. For support, please contact SAIMAND via Amazon Message. Responses are typically provided within 24 hours.
Manufacturer Warranty Description: 1 year manufacturer.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

When I dim my SAIMAND BZ-B01 wall sconce lights, they only stay dim for about a minute before returning to full brightness. Is there a special way to get them to stay dim?

Based on the SAIMAND BZ-B01 manual, there is no specific "lock" setting for dimming; the lights should maintain the brightness level selected via the remote control (20% to 100%). If your lights are reverting...

Read full answer