Beyblade G2350

Beyblade X Clip & Rip Launcher with Blast Pegasus A Tr Top Instruction Manual

Model: G2350

Introduction

This manual provides instructions for the assembly, operation, and care of your Beyblade X Clip & Rip Launcher and Blast Pegasus A Tr Right-Spin Attack Type Top. Please read these instructions carefully before use to ensure proper function and safety.

The Beyblade X system introduces an X-Celerator Gear System, allowing tops to super-accelerate around the arena for dynamic battles. This product includes one Clip & Rip Launcher, one ripcord, one CX tool, and one Beyblade X Blast Pegasus A Tr top.

Safety Information

WARNING: Small parts may be generated. Not for children under 3 years.

Always use Beyblade X products in a safe environment, away from obstacles and other people. Ensure all components are securely attached before launching. Do not aim launchers at eyes or face. Only use official Beyblade X stadiums (sold separately) for battles.

What's in the Box

- 1 x Beyblade X Clip & Rip Launcher
- 1 x Ripcord
- 1 x CX Tool
- 1 x Beyblade X Blast Pegasus A Tr Right-Spin Attack Type Top

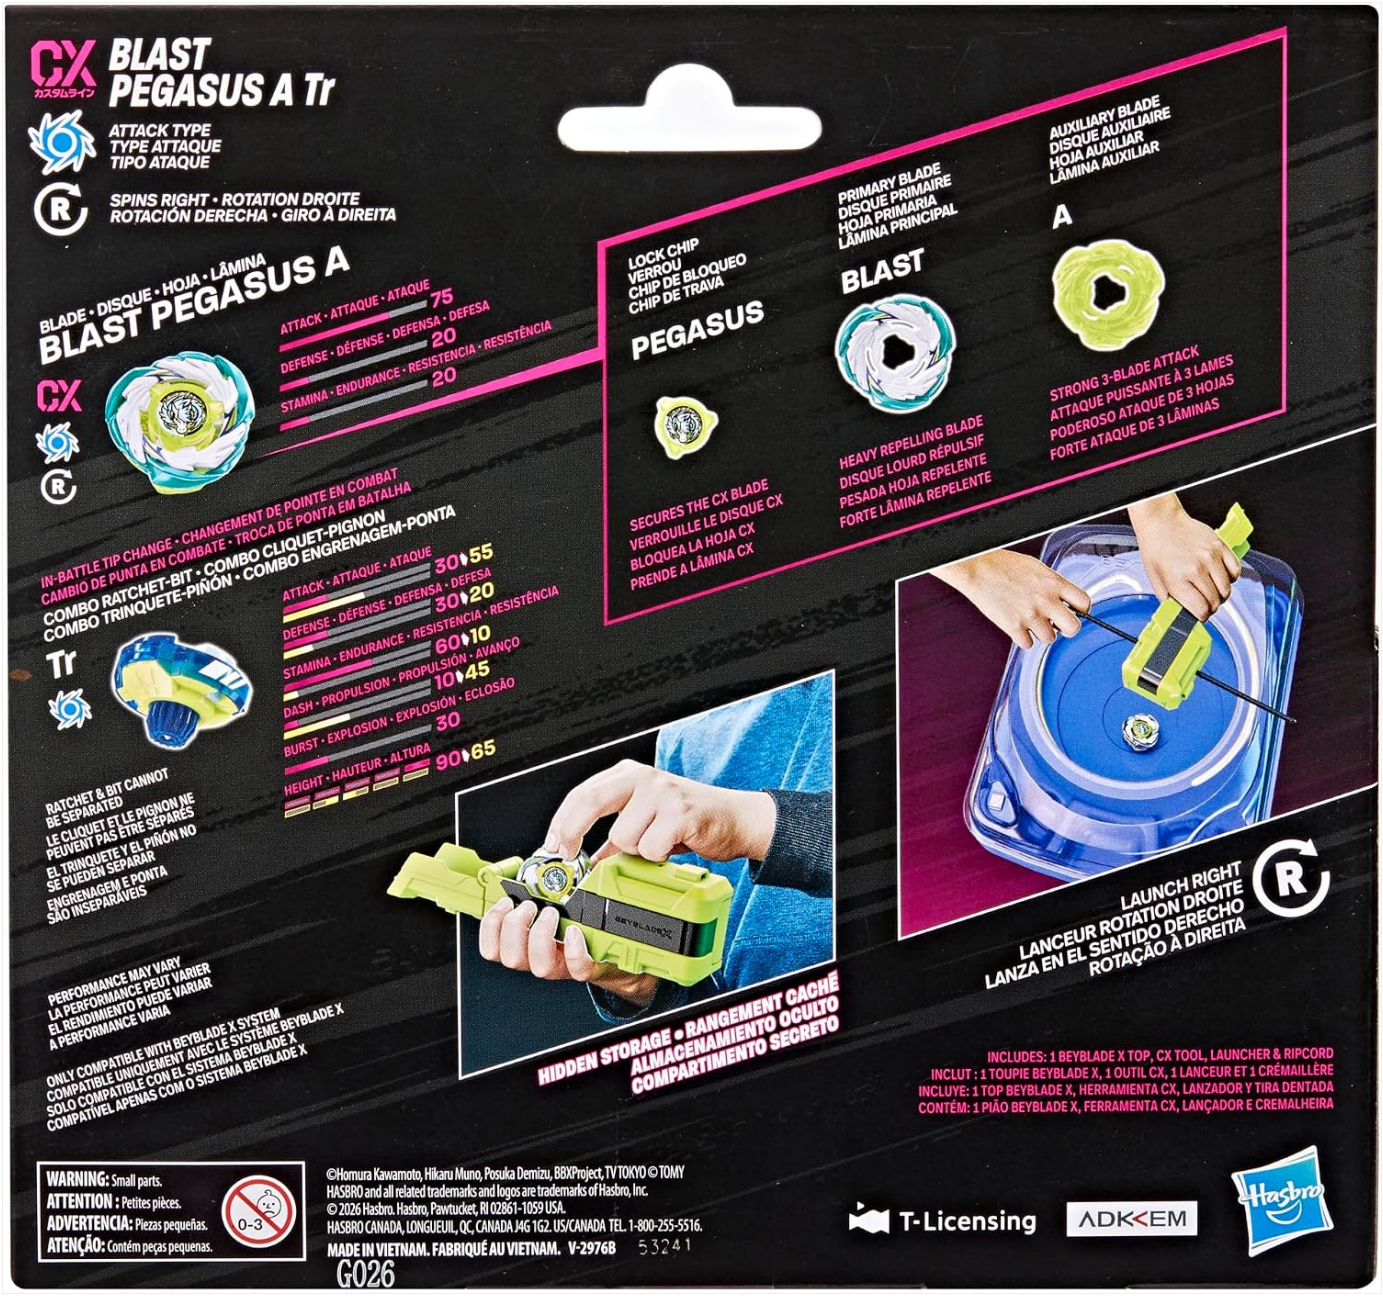


Image: The Beyblade X Clip & Rip Launcher, ripcord, CX tool, and Blast Pegasus A Tr top as included in the package.

Setup Instructions

1. Assemble the Beyblade X Top

Your Beyblade X top consists of multiple parts: a Lock Chip, Main Blade, Assist Blade, Ratchet, and Bit. These pieces are designed for easy assembly and customization.

1. Align the Main Blade with the Assist Blade and twist them together.
2. Attach the Ratchet to the assembled blades.
3. Secure the Bit to the bottom of the Ratchet.
4. Finally, place the Lock Chip on top, ensuring all parts are securely twisted and locked into place.



Image: A close-up view of the Blast Pegasus A Tr top, showing its individual components (blade, ratchet, bit) before assembly.



Image: The fully assembled Beyblade X Blast Pegasus A Tr top, ready for battle.

2. Prepare the Clip & Rip Launcher

1. Insert the ripcord into the launcher's slot until it clicks into place.
2. Attach the assembled Beyblade X top to the launcher by twisting it clockwise until it locks securely. Ensure the top is firmly attached to prevent it from detaching prematurely during launch.





Image: A hand demonstrating how to attach the Beyblade X top to the Clip & Rip Launcher.

Your browser does not support the video tag.

Video: A demonstration of assembling the Beyblade X top and attaching it to the Clip & Rip Launcher.

Operating Instructions

Launching Your Beyblade X Top

1. Hold the launcher firmly with one hand, ensuring the top is facing downwards into a Beyblade X Beystadium (sold separately).

2. With your other hand, pull the ripcord swiftly and firmly to launch the top into the stadium. The Blast Pegasus A Tr top is a Right-Spin Attack Type.
3. Observe the X-Celerator Gear System: When the top's gear engages the X-Celerator Rail of the Beystadium, it will super-accelerate, performing an Xtreme Dash for powerful collisions.



Image: A user launching a Beyblade X top into a Beystadium using the Clip & Rip Launcher.

Battling Rules

Bladers launch their tops against an opponent's top to score points. The first player to reach 4 points wins the battle.

- **Ring Out Finish:** 1 point if your opponent's top is knocked out of the stadium.
- **Survivor Finish:** 1 point if your opponent's top stops spinning before yours.
- **Burst Finish:** 2 points if your opponent's top bursts into pieces.
- **Xtreme Finish:** Points awarded for specific interactions with the X-Celerator Rail.

Customization

Beyblade X tops feature 3 easy-to-combine layers that assemble and reassemble with a quick twist. The Blast Pegasus A Tr top is a CX (Customization X) type, which means its blade separates into 3 parts for enhanced top-building options. Mix and match the interchangeable blade, ratchet, and bit with those of other Beyblade X tops (sold separately) to create unique combinations and optimize your battle strategy.



Image: Diagram illustrating the customizable components of a Beyblade X top: Lock Chip, Main Blade, Assist Blade, Ratchet, and Bit.

There are four main top types: Attack, Stamina, Defense, and Balance. Each type offers distinct advantages in battle. The Blast Pegasus A Tr is an Attack Type, designed for aggressive play and powerful strikes.

Maintenance

- **Cleaning:** Wipe down your Beyblade X top and launcher with a dry, soft cloth after use to remove dust and debris. Do not use water or harsh chemicals.
- **Storage:** Store the launcher and top in a cool, dry place away from direct sunlight. The Clip & Rip Launcher features an internal storage area for the ripcord and can be clipped onto belts or backpacks for portability.
- **Inspection:** Periodically inspect all components for wear and tear. Replace any damaged parts to ensure optimal performance and safety. Note that the metal paint coat on the top may chip during battles due to impact.



Image: The Beyblade X Clip & Rip Launcher with its hidden storage compartment open, showing space for the ripcord.

Troubleshooting

- **Top not spinning correctly:** Ensure the top is fully assembled and securely attached to the launcher. Check the ripcord for any damage or kinks.
- **Launcher not engaging:** Verify the ripcord is inserted correctly and fully into the launcher. If the launcher makes a "clicking" sound without launching, it may indicate wear; ensure the top is properly seated.
- **Top bursting too easily:** This can be a normal outcome of intense battles, especially against strong attack types. Ensure all top components are tightly assembled.
- **Paint chipping on metal parts:** This is expected with regular use and impacts during battles. It does not affect the performance of the top.

Specifications

Feature	Detail
Brand	Beyblade
Model Number	G2350AS0
Top Type	Blast Pegasus A Tr Right-Spin Attack Type (CX)
Age Range	8+ Years
Material	Plastic, Die-cast Metal
Item Weight	0.25 Kilograms
Item Dimensions (Launcher)	Approximately 2.76 x 2.76 x 1.97 inches (based on product dimensions)
Included Components	1 launcher, 1 ripcord, 1 CX tool, 1 Beyblade X top

Warranty and Support

For warranty information or product support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt as proof of purchase.
Manufacturer: Hasbro

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question