Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

WINNY POOL CLEANER 26-OS7010C

WINNY POOL CLEANER Cordless Robotic Pool Cleaner Model 26-OS7010C Instruction Manual

Model: 26-OS7010C | Brand: WINNY POOL CLEANER

1. Introduction

Thank you for choosing the WINNY POOL CLEANER Cordless Robotic Pool Cleaner, Model 26-OS7010C. This advanced 4-in-1 robotic cleaner is designed to provide efficient and comprehensive cleaning for both inground and above-ground pools. Featuring triple motors, wall and waterline cleaning capabilities, app support, and OTA upgrade functionality, it ensures a pristine pool environment up to 1,614 sq.ft.

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new pool cleaner. Please read it thoroughly before first use and retain it for future reference.



Figure 1: The WINNY POOL CLEANER 26-OS7010C offers up to 1614 sq.ft of pool coverage with a 2.5-hour cleaning time on a 3-hour charge.



Figure 2: The cleaner is suitable for most pool materials including plaster, vinyl liner, fiberglass, concrete, tile, and pebble surfaces.



Figure 3: The robotic cleaner is ideal for most pool types, including rectangular, round, kidney-shaped, L-shaped, and freeform designs.

2. Safety Information

Always follow basic safety precautions when operating electrical appliances. This includes, but is not limited to:

- Read all instructions before use.
- Do not operate the cleaner when people or animals are in the pool.
- Ensure the charging port is securely closed before placing the cleaner in water.
- Use only the charger supplied by the manufacturer.
- Keep the cleaner out of reach of children.

3. Package Contents

Verify that all items are present in the package:

- Device x1
- Quick Start Guide x1
- User Manual x1

- Floating Parts x1
- Charger x1
- Hook x1



Figure 4: Contents included in the WINNY POOL CLEANER 26-OS7010C package.

4. Specifications

Feature	Detail
Brand	WINNY POOL CLEANER
Model Name	26-OS7010C
Product Dimensions	18.1"L x 16.9"W x 11.4"H
Power Source	Battery Powered
Special Features	Cordless, Rechargeable
Control Method	App
Efficiency	Energy Efficient, High Suction Power, Time-efficient
Lithium Battery Energy Content	99.36 Watt Hours
Number of Batteries	6 Lithium Ion batteries (included)
Charging Time	4 Hours
Battery Weight	440.56 Grams
Installation Type	Robotic

5. Setup

5.1 Charging the Cleaner

Before initial use, fully charge the robotic pool cleaner. The charging time is approximately 4 hours, providing up to 150

minutes of runtime depending on the cleaning mode selected.

1. Locate the charging port on the cleaner and ensure it is dry before connecting the charger.
2. Plug the charger into a power outlet and connect it to the cleaner.
3. Monitor the LED indicator for charging status.
4. Once fully charged, disconnect the charger and securely close the charging port cover to prevent water ingress.

5.2 Placing the Cleaner in the Pool

Gently lower the cleaner into the pool. It will sink to the bottom and automatically begin its cleaning cycle once water is detected. The cleaner features a safety mechanism that will shut it off if no water is sensed for 3 minutes.

5.3 App Download and Connection

For enhanced control and scheduling features, download the dedicated app for your WINNY POOL CLEANER. Ensure your mobile device has a stable Wi-Fi connection within range of your pool area for optimal app functionality.

1. Scan the QR code in the Quick Start Guide or search for the app in your device's app store.
2. Follow the in-app instructions to pair your cleaner via Bluetooth.
3. Once connected, you can access various cleaning modes and scheduling options.



Figure 5: The intelligent LED light provides real-time updates on the battery status and operational mode.

6. Operating Instructions

6.1 Powering On/Off

To power on the cleaner, press and hold the power button for approximately 2 seconds. The LED indicator will light up. To power off, press and hold the power button again.

6.2 Cleaning Modes

The cleaner offers multiple cleaning modes, selectable via the app, to suit your pool's needs:

- **Floor Mode:** Focuses solely on cleaning the pool floor.
- **Wall Mode:** Concentrates on scrubbing pool walls and waterline.
- **Wall then Floor Mode:** Cleans walls first, then transitions to the floor as battery depletes.
- **Eco Floor Mode:** An energy-efficient floor cleaning option.
- **Standard Full-Pool Mode:** Cleans both floor and walls simultaneously for comprehensive coverage.



Figure 6: Select from 4+1 cleaning modes to optimize your pool cleaning experience.

6.3 Smart Navigation and Obstacle Avoidance

The cleaner utilizes patented navigation technology to adapt to various pool shapes, ensuring 100% full-coverage cleaning. It employs optimized paths such as S-pattern, Cross Pattern, and Star Pattern for floor cleaning, and N-pattern and Z-pattern for wall cleaning. An upgraded smart obstacle avoidance system helps the cleaner navigate around common pool features like drains, steps, and water inlets.



Figure 7: The cleaner uses smart navigation patterns and obstacle avoidance to ensure thorough cleaning.

6.4 Waterline Scrubbing

Equipped with dual-PVC brushes and powerful suction, the cleaner performs double-pass waterline scrubbing, effectively removing grime and debris from the waterline for a cleaner finish.



Figure 8: Double-pass waterline scrubbing ensures a pristine waterline.

6.5 Scheduling and OTA Upgrades

The app allows you to schedule cleaning cycles and receive Over-The-Air (OTA) updates for continuous performance optimization and new features.

- **Cycle Timer:** Set personalized cleaning schedules (e.g., Clean Once, Clean Twice, Clean 3 Times, Clean 4 Times per week) for floor cleaning. Ensure the cleaner is fully charged before setting a schedule.
- **OTA Updates:** The system continuously optimizes performance and unlocks new features through OTA updates, ensuring your cleaner is always at its best.

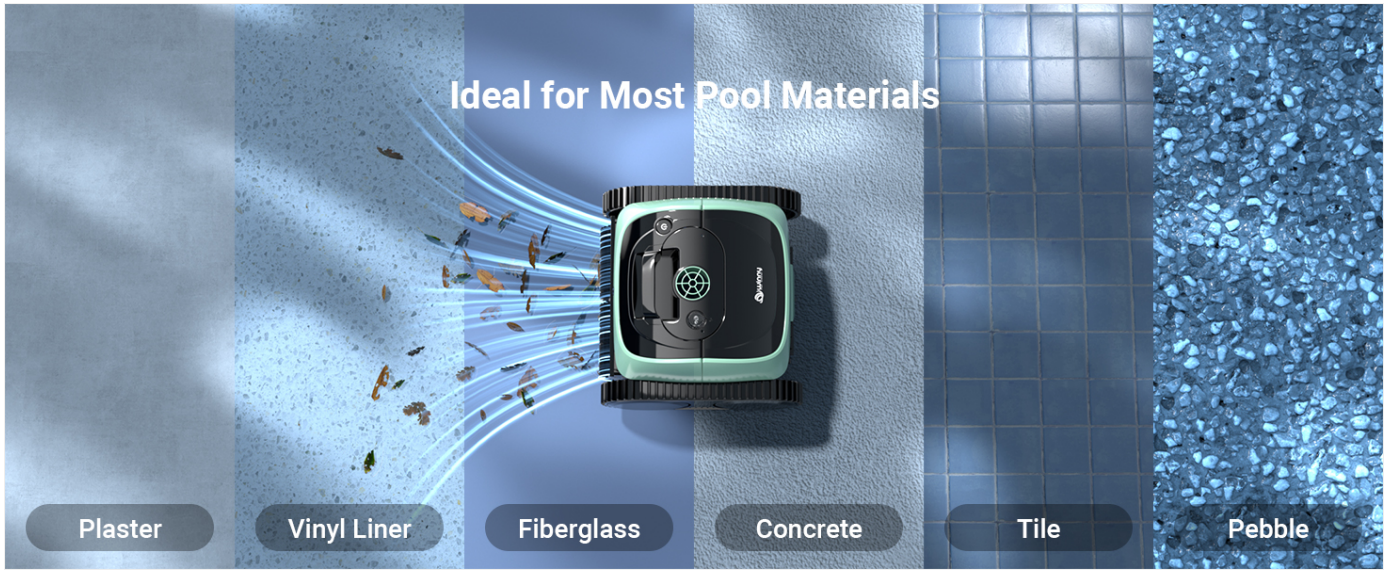


Figure 9: Schedule personalized cleaning cycles through the app.



Figure 10: OTA upgrades ensure enhanced and continuously optimized performance.

7. Maintenance

7.1 Cleaning the Filter Basket

Regularly clean the filter basket to maintain optimal suction power and cleaning efficiency. The top-loading design makes access easy.

1. Remove the cleaner from the pool.
2. Open the top cover to access the filter basket.
3. Remove the filter basket and empty any collected debris.
4. Rinse the filter basket thoroughly with a hose to remove fine particles.
5. Reinsert the clean filter basket and close the top cover securely.

7.2 General Care

After each use, rinse the cleaner with fresh water to remove any pool chemicals or debris. Store the cleaner in a cool, dry place away from direct sunlight when not in use.



Figure 11: The cleaner is designed for easy use, retrieval, maintenance, and cleaning.

8. Troubleshooting

If you encounter any issues with your WINNY POOL CLEANER, please refer to the following common troubleshooting steps:

- **Cleaner not moving:** Ensure the battery is fully charged and the power button is pressed. Check for any obstructions in the brushes or wheels.
- **Poor cleaning performance:** Clean the filter basket thoroughly. Ensure the pool water chemistry is balanced.
- **App connectivity issues:** Verify your device's Bluetooth and Wi-Fi are enabled and within range. Restart the app and the cleaner.
- **Cleaner getting stuck:** The smart obstacle avoidance system should prevent this, but if it occurs, manually reposition the cleaner. Ensure the pool floor is free of large debris.

For further assistance, please contact customer support.

9. Warranty and Support

Your WINNY POOL CLEANER comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, replacement parts, or any other inquiries, please visit the official WINNY POOL CLEANER website or contact their customer service department.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0G43RZ5LW

More documents and user manuals: **https://manuals.plus/**