Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Razor E Prime III

Razor Electric Scooter E Prime 3 Instruction Manual

Model: E Prime III

Introduction

The Razor Electric Scooter E Prime 3 is designed for efficient urban travel and recreational use. It features a powerful motor, a long-lasting battery, and a lightweight, foldable design for portability. This manual provides essential information for assembly, operation, maintenance, and safety to ensure a reliable and enjoyable experience.



Image: The Razor E Prime 3 Electric Scooter in its upright position, showcasing its sleek design.

Safety Guidelines

Always prioritize safety when operating the scooter. Wear appropriate safety gear, including a helmet. Be aware of your surroundings and adhere to local traffic laws and regulations. The scooter is designed for adults and older teens, with a maximum weight limit of 220 pounds.

- **Helmet Use:** Always wear a helmet when riding.
- **Weight Limit:** Do not exceed the maximum rider weight of 220 pounds.
- **Visibility:** Utilize the LED headlight and brake-activated taillight, especially during low-light conditions.
- **Braking:** Familiarize yourself with the dual braking system for effective stopping.
- **Surface Awareness:** Exercise caution on uneven terrains, wet surfaces, or loose debris.

Your browser does not support the video tag.

Video: Official Razor E Prime III overview, demonstrating key features and usage scenarios. This video highlights the scooter's design and

functionality.

Setup

The Razor E Prime 3 scooter comes mostly pre-assembled. Follow these steps for initial setup:

1. **Unboxing:** Carefully remove all components from the packaging. Ensure all parts listed in the packing list are present.
2. **Handlebar Attachment:** Attach the handlebar assembly to the main stem. Secure it firmly using the provided tools and fasteners.
3. **Initial Charge:** Fully charge the scooter's battery before its first use. Refer to the "Charging the Battery" section for detailed instructions.
4. **Tire Inflation:** Ensure the front pneumatic tire is inflated to the recommended pressure for optimal performance and ride comfort.

Operating Instructions

Operating the Razor E Prime 3 is straightforward. Familiarize yourself with the controls before riding.

1. **Power On:** Press the power button located on the stem to turn on the scooter. The LED battery indicator will illuminate.
2. **Acceleration:** To accelerate, gently press the thumb-activated paddle on the handlebar. The scooter features 3 speeds, reaching up to 18 MPH.
3. **Braking:** The scooter is equipped with a dual braking system. Use the electronic thumb-activated paddle brake or the rear-fender foot brake to slow down or stop. The brake-activated taillight will illuminate when braking.
4. **Folding Mechanism:** To fold the scooter for storage or transport, locate the folding mechanism near the base of the stem. Pull the lever and fold the handlebar down until it locks into place.
5. **Battery Indicator:** Monitor the 5-level LED battery display on the stem to track the remaining charge. Recharge when the indicator shows low battery.

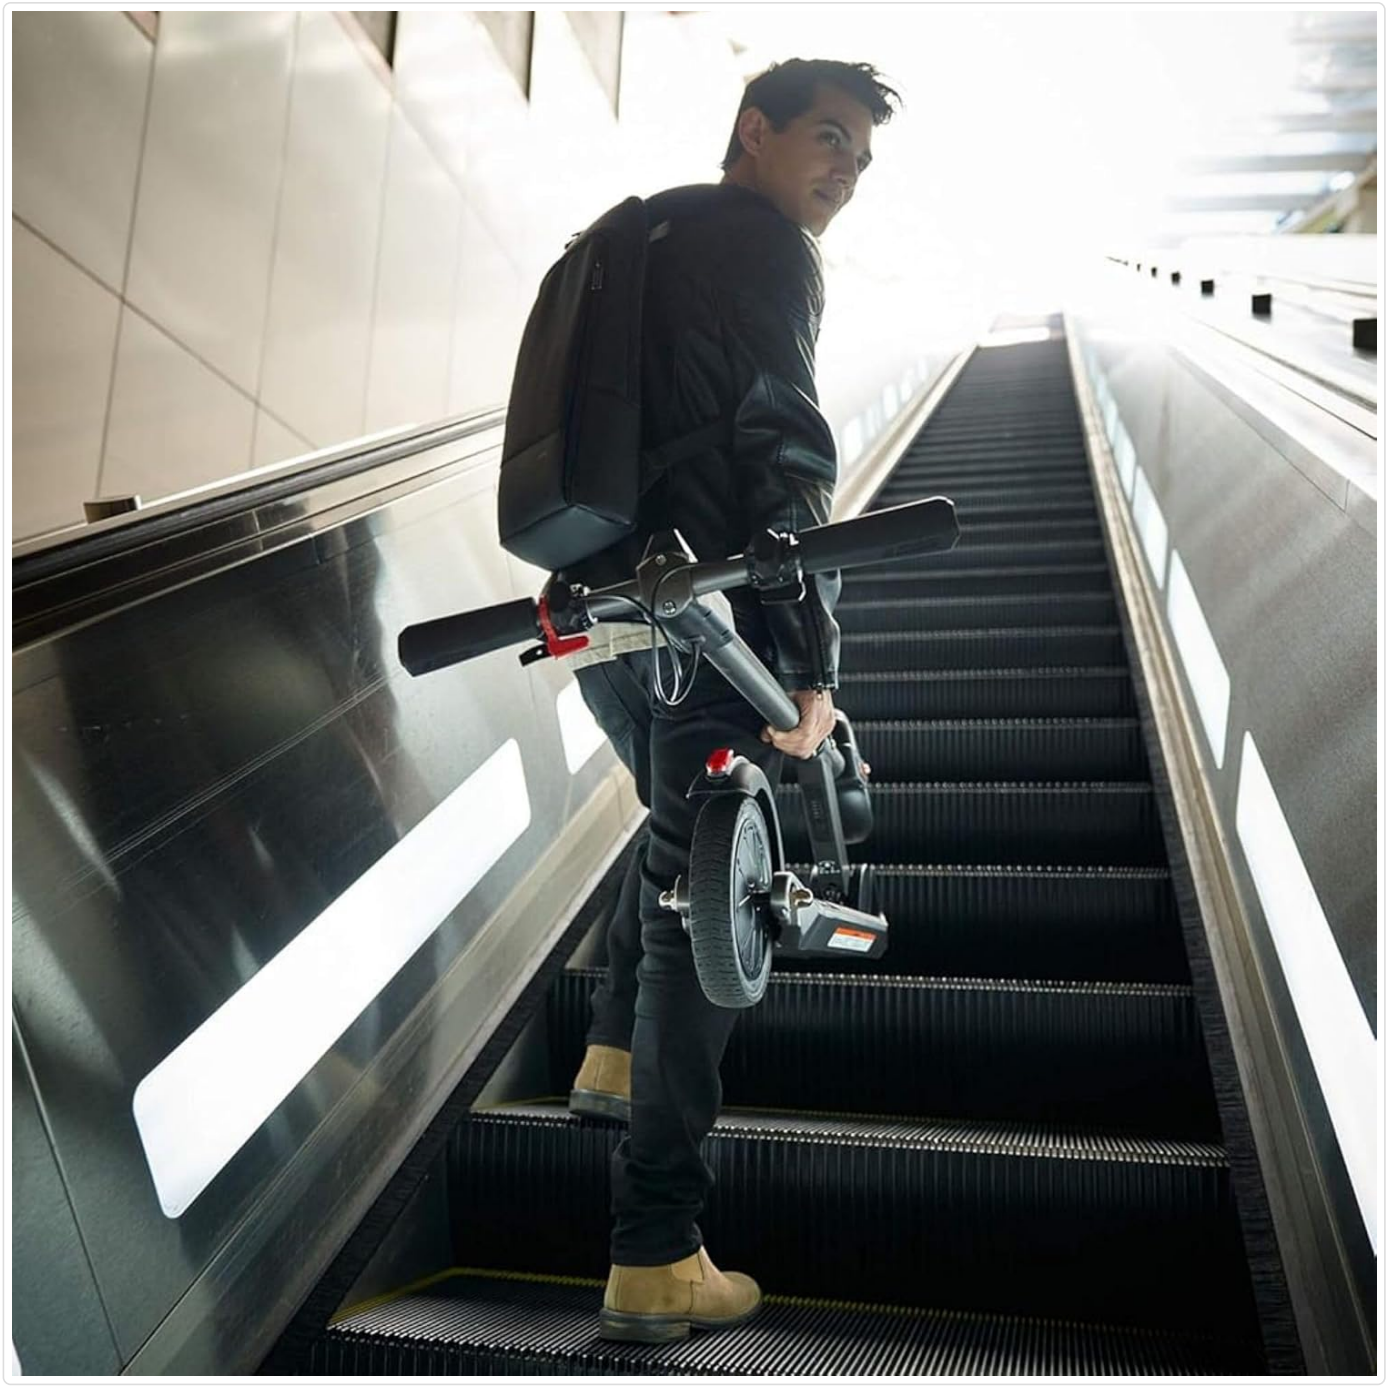


Image: An adult riding the Razor E Prime 3 Electric Scooter on a paved path, demonstrating its use in motion.


North Hollywood
Wilshire/Western

Image: A close-up view of the handlebar, showing the thumb-activated throttle and brake levers.



Image: A detailed view of the rear wheel and the brake-activated taillight, emphasizing safety features.

Your browser does not support the video tag.

Video: A rider demonstrates the Razor E Prime III in various urban settings, showcasing its maneuverability and speed.

Maintenance

Regular maintenance ensures the longevity and safe operation of your scooter.

- **Cleaning:** Wipe down the scooter with a damp cloth after each use. Avoid using harsh chemicals or excessive water.
- **Tire Pressure:** Periodically check and maintain the correct air pressure in the front pneumatic tire.
- **Brake Inspection:** Regularly inspect the brakes for wear and tear. Ensure they are functioning correctly.
- **Battery Care:** Charge the battery fully after each ride and avoid completely draining it to prolong its lifespan. The charging time is approximately 6 hours.
- **Storage:** Store the scooter in a dry, cool place away from direct sunlight and extreme temperatures.

Troubleshooting

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Scooter not turning on	Low battery; loose connections	Charge the battery; check all connections are secure.
Reduced speed or range	Low tire pressure; battery degradation; heavy load	Inflate tires to correct pressure; ensure full charge; reduce load.
Brakes not responsive	Worn brake pads; cable adjustment needed	Inspect and replace brake pads if necessary; adjust brake cables.

Specifications

Feature	Detail
Brand	Razor
Model Name	E Prime III
Top Speed	Up to 18 MPH
Maximum Distance Range	15 Miles
Weight Limit	220 Pounds
Item Weight	24.2 Pounds
Product Dimensions	40.94"L x 18.31"W x 40.75"H
Charging Time	6 Hours
Front Wheel Type	8-inch Pneumatic

Feature	Detail
Rear Wheel Type	8-inch Airless Polyurethane
Brake Style	Rear Braking (Electronic thumb-activated paddle and rear-fender controlled)
Special Features	Foldable, LED Headlight, Brake-activated Taillight, Portable, Security Lock Point
Included Components	E Prime III Scooter and charger

Warranty and Support

The Razor Electric Scooter E Prime 3 comes with a**90-day Limited Manufacturer Warranty**. For warranty claims or technical support, please refer to the official Razor website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

For additional information and support, visit the official Razor Store.

© 2026 Razor. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0G4W9HTS6

More documents and user manuals: **https://manuals.plus/**