FPD CP10-J1

FPD 10-inch Android 16 Tablet (Model CP10-J1) User Manual

1. Introduction

Welcome to your new FPD 10-inch Android 16 Tablet. This manual provides essential information to help you set up, operate, and maintain your device. Please read it thoroughly to ensure optimal performance and longevity of your tablet.

2. What's in the Box

Before you begin, please check the package contents to ensure all items are present:

- FPD 10.1 Inch Tablet
- Instruction Book (User Manual)
- SIM card pin
- Type-C charging cable



This image illustrates the contents of the FPD Tablet box, including the tablet, user manual, SIM card pin, and Type-C cable. It also provides a detailed diagram of the tablet's physical features and ports, such as the MicroSD slot, 3.5mm jack, power button, volume keys, Type-C port, rear camera, and stereo speakers.

3. Product Overview

Familiarize yourself with the physical components of your FPD Tablet:



The FPD 10-inch Android 16 Tablet, showcasing its sleek design and large display.

Physical Features and Ports:

- **Power Button:** Located on the side, used to turn the tablet on/off or wake/sleep the screen.
- **Volume Keys:** Adjust the audio volume.
- **Type-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** Connect wired headphones.
- **MicroSD Card Slot:** Expand storage up to 512GB.
- **Front Camera:** 5MP camera for video calls and selfies.
- **Rear Camera:** 13MP camera for photos and video recording.
- **Stereo Speakers:** For audio output.

4. Setup

4.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the provided Type-C charging cable to the tablet's Type-C port and the other end to a compatible 18W power adapter (not included) or a computer's USB port.



Equipped with a 6000mAh battery, the tablet provides up to 5.5 hours of gaming, 6 hours of reading, 60 hours of music playback, and 6.5 hours of video streaming. It supports 18W Type-C fast charging.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the FPD logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options appear, then tap "Power off".
- **To Restart:** Press and hold the Power button until the power options appear, then tap "Restart".
- **To Sleep/Wake:** Briefly press the Power button to put the tablet to sleep or wake it up.

4.3 Initial Setup


Upon first power-on, follow the on-screen prompts to complete the initial setup:

1. Select your language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google Account or create a new one. This is necessary to download apps from the Google Play Store.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password) for security.

4.4 Inserting a MicroSD Card

To expand your tablet's storage:

1. Locate the MicroSD card slot on the side of the tablet.
2. Use the provided SIM card pin to gently press into the small hole next to the slot to eject the tray.
3. Place the MicroSD card (up to 512GB, sold separately) into the tray with the gold contacts facing down.
4. Carefully reinsert the tray into the slot until it clicks into place.

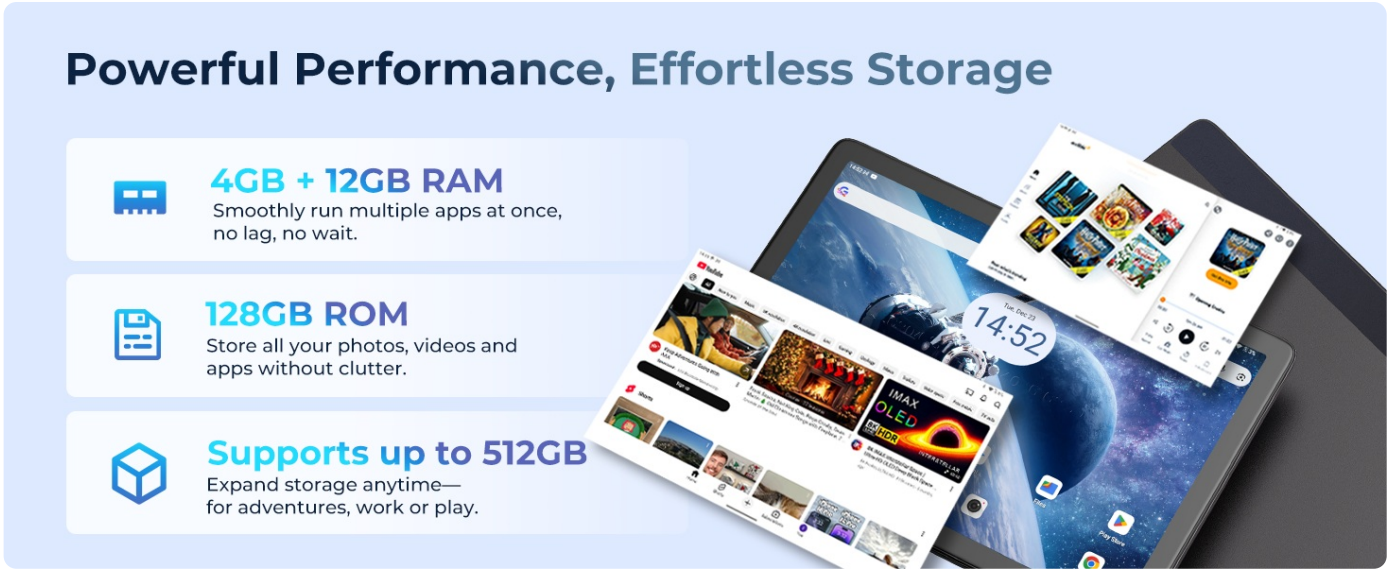

The tablet offers 4GB of physical RAM plus 12GB of virtual RAM for smooth multitasking, 128GB of internal storage (ROM), and supports microSD expansion up to 512GB for extensive media and document storage.

5. Operating Instructions

5.1 Touchscreen Navigation

- **Tap:** Select an item or open an app.
- **Touch & Hold:** Access contextual menus or move items.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on photos and web pages.
- **3-Finger Screenshot:** Swipe down with three fingers to capture a screenshot.

5.2 Basic Functions

- **Home Screen:** Access your apps and widgets.
- **Notifications:** Swipe down from the top of the screen to view notifications and quick settings.
- **App Drawer:** Swipe up from the bottom of the screen to access all installed applications.
- **Split Screen:** Utilize the Android 16 Split Screen feature to run two apps simultaneously.



The FPD Tablet runs on Android 16 OS, offering features like Split Screen for multitasking, Privacy Guard for data control, Parental

Controls for safe usage, and 3-Finger Screenshot for quick captures.

5.3 Connectivity

- **Wi-Fi:** Connect to wireless networks via Wi-Fi 5 (2.4G/5G) for internet access. Go to Settings > Network & internet > Wi-Fi.
- **Bluetooth:** Pair with Bluetooth devices like headphones or speakers using Bluetooth 5.0. Go to Settings > Connected devices > Pair new device.




The tablet supports Wi-Fi 5 (2.4G/5G) for fast internet access and Bluetooth 5.0 for connecting wireless accessories.

5.4 Camera Usage

The tablet features a 13MP rear camera and a 5MP front camera.

- Open the Camera app from the home screen or app drawer.
- Tap the shutter button to take a photo.
- Switch between front and rear cameras using the camera icon.
- Select video mode to record videos.

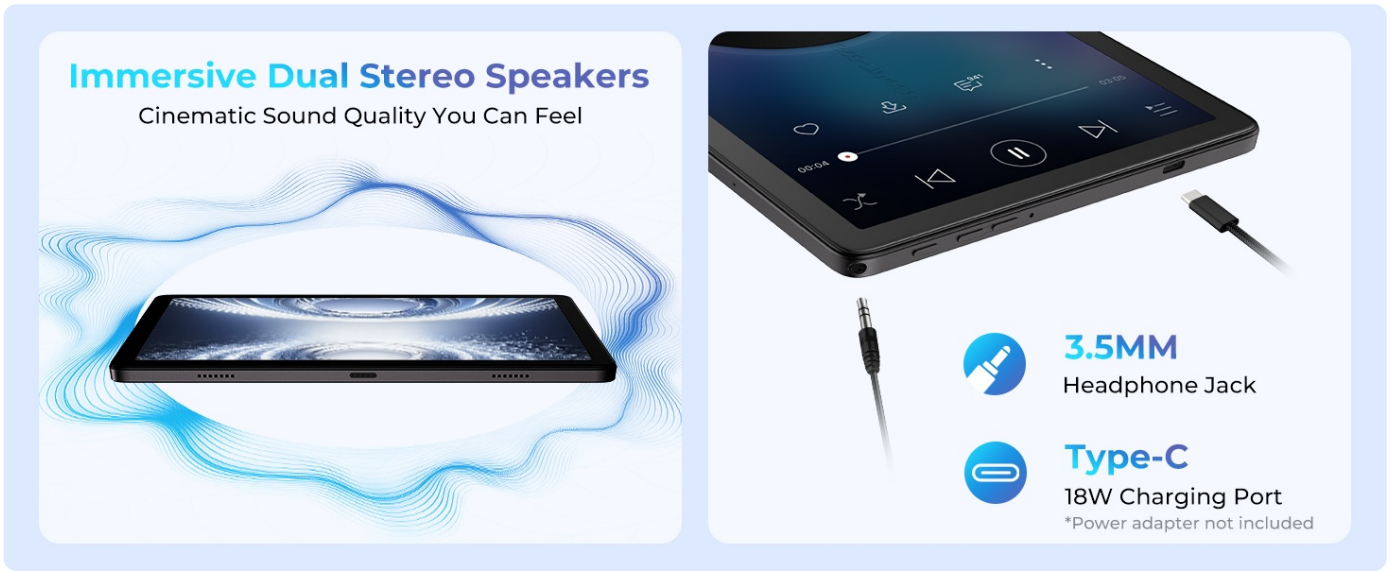

Capture moments with the tablet's 13MP rear camera and 5MP front camera, suitable for photos, video calls, and document scanning.

5.5 Gemini AI Features

Your tablet integrates Gemini AI to enhance your experience:

- **AI-Powered Office Tools:** For enhanced productivity.
- **Text-to-Image Generation:** Create images from text prompts.
- **Personalized Learning Engine:** Adapts to your learning style.
- **Scene-Based Optimization:** Improves performance based on usage.
- **Voice Command Support:** Control your tablet with voice.
- **Full-Screen AI Assistant:** Provides intelligent assistance across the device.



The tablet integrates Gemini AI, providing AI-powered office tools, text-to-image generation, a personalized learning engine, scene-based optimization, voice command support, and a full-screen AI assistant.

5.6 Kids Mode and Parental Controls

For a safe and controlled environment for children:

- Access Kids Mode through the dedicated app or settings.
- Set up **Parental Controls** to manage app access, screen time, and content.
- Utilize **Custom Mode** for less distraction and more focus.
- The **Eye Care Mode** provides soft light for gentle eye protection.




The tablet includes a Kids Mode with parental controls, custom modes for focus, digital wellbeing tracking, and eye care mode for a safe

and eye-friendly experience for children.

5.7 Widevine L1 Streaming

Enjoy high-definition streaming content:

- The tablet is Widevine L1 certified, allowing for high-definition playback on streaming services.
- Supported platforms include Netflix, YouTube, Prime Video, Hulu, and HBO.

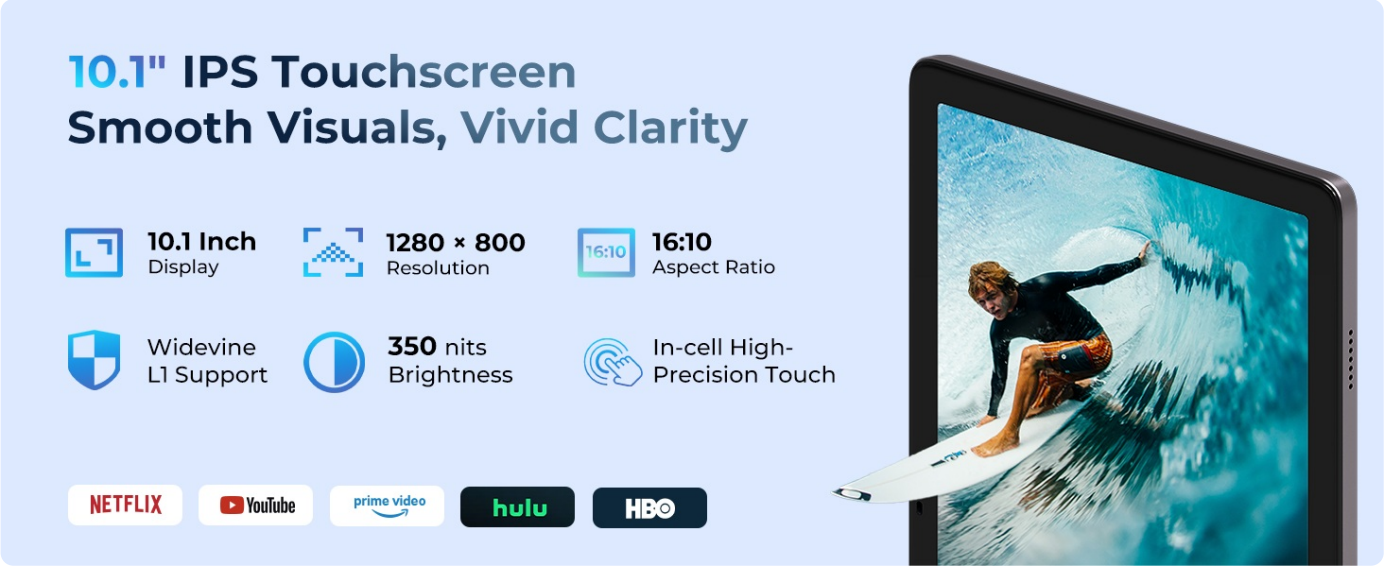

The tablet features a 10.1-inch IPS touchscreen with 1280x800 resolution, 16:10 aspect ratio, Widevine L1 support for HD streaming, 350 nits brightness, and in-cell high-precision touch. It is ideal for viewing content from Netflix, YouTube, Prime Video, Hulu, and HBO.

6. Maintenance

6.1 Cleaning Your Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals, abrasive cleaners, or aerosol sprays.
- Do not allow moisture to enter any openings.

6.2 Software Updates

Keep your tablet's software up to date to ensure optimal performance and security:

- Connect your tablet to a Wi-Fi network.
- Go to Settings > System > System update.
- Follow the on-screen instructions to check for and install any available updates.

6.3 Battery Care

- Avoid exposing the tablet to extreme temperatures.
- Do not let the battery completely drain frequently.
- Use the provided Type-C cable for charging.

7. Troubleshooting

If you encounter issues with your tablet, try the following solutions:

Problem	Solution
Tablet does not power on	Ensure the tablet is charged. Connect it to a power source for at least 30 minutes, then try powering on again. If unresponsive, press and hold the power button for 10-15 seconds to force a restart.
Screen is unresponsive	Restart the tablet. If the issue persists, ensure the screen is clean and free of debris.
Wi-Fi connection issues	Restart your Wi-Fi router and the tablet. Forget the network in Wi-Fi settings and reconnect. Ensure you are within range of the Wi-Fi signal.
Apps are crashing or freezing	Close and reopen the app. Clear the app's cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). Ensure the app is updated to the latest version. Restart the tablet.
Slow performance	Close unnecessary background apps. Clear cache for frequently used apps. Ensure sufficient storage space is available. Restart the tablet periodically.

8. Specifications

Key technical specifications for the FPD 10-inch Android 16 Tablet (Model CP10-J1):

Feature	Specification
Model Name	CP10-J1
Operating System	Android 16
Processor	Unisoc T616 Octa-Core (2x Cortex-A75 @ 2.0GHz, 6x Cortex-A55 @ 1.6GHz)
Graphics Coprocessor	Mali-G57-3EE-1core 750MHz
RAM Memory	4 GB (with 12 GB virtual RAM)
Internal Storage	128 GB
Expandable Storage	MicroSD up to 512 GB
Screen Size	10.1 Inches
Display Type	IPS
Display Resolution	1280 x 800 Pixels
Aspect Ratio	16:10
Refresh Rate	60 Hz
Battery Capacity	6000 mAh
Charging	18W Type-C Fast Charging
Rear Camera	13 MP

Feature	Specification
Front Camera	5 MP
Wireless Technology	Wi-Fi 5 (802.11ac, 802.11b, 802.11g, 802.11n), Bluetooth 5.0
Audio Jack	3.5 mm
Special Features	Expandable Storage, Supports USB OTG, Widevine L1, Gemini AI
Dimensions	24.1L x 16W x 0.8Th Centimetres
Weight	760 g

9. Warranty and Support

9.1 Manufacturer's Warranty

Your FPD Tablet is covered by a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your FPD Tablet, please contact the manufacturer:

- **Manufacturer Contact Information:** HONG KONG VISION VERSE CO., LIMITED
- Please refer to the contact information provided with your product packaging or visit the official FPD website for the most up-to-date support details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question