Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

javiscam E6

javiscam E6 4K HD Wireless Hidden Camera User Manual

Model: E6

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your javiscam E6 4K HD Wireless Hidden Camera. Please read this manual thoroughly before using the device to ensure proper functionality and safety.

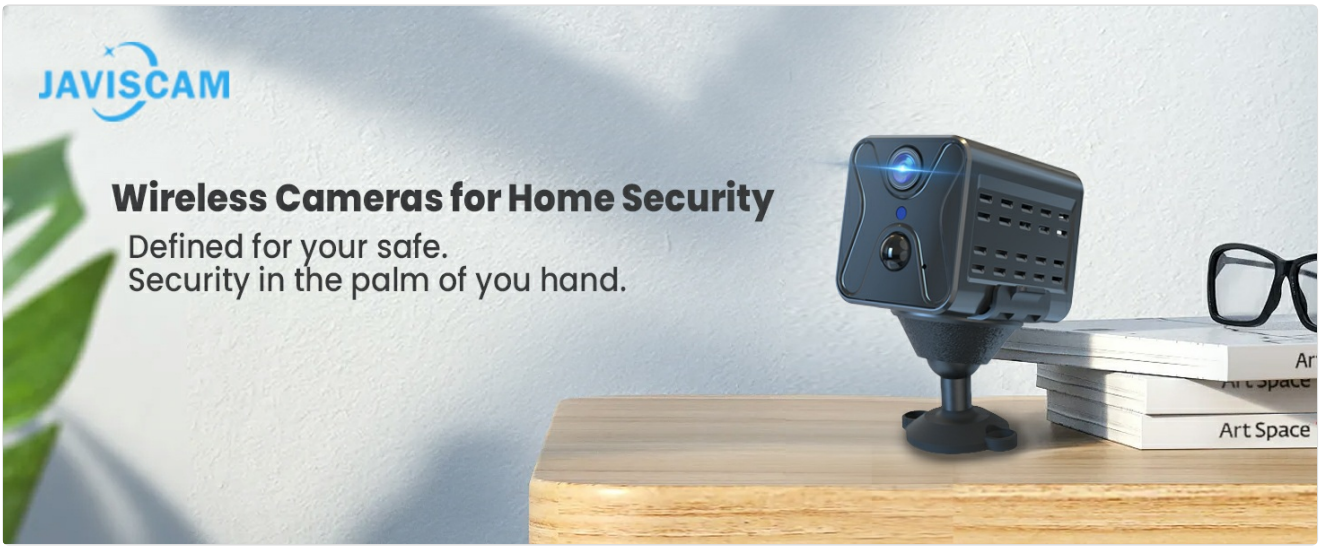


Image: The javiscam E6 Hidden Camera discreetly placed in a living room environment.

2. What's in the Box

Verify that all components are present in your package:

- Camera x1
- Charging Cable x1
- Instruction Manual x1
- Mounting screws and 3M adhesive tape x1
- Stand x1



Image: The javiscam E6 camera and its included accessories.

3. Key Features

- **4K HD Video & Image Quality:** Capture clear video and images with Ultra 4K resolution.
- **AI Motion Detection & Instant Alerts:** Advanced AI technology detects movement and sends mobile notifications.
- **Enhanced Night Vision:** Provides round-the-clock surveillance with clear infrared night vision up to 10 meters.
- **Built-in Siren:** An integrated siren can be activated for deterrence.
- **100% Wire-free & Compact Design:** Small, portable, and easy to hide, suitable for various indoor placements.
- **Long Standby Battery Life:** Equipped with a 2800mAh battery, offering up to 60 days of standby time with low sensitivity settings.
- **Flexible Storage Options:** Supports up to 128GB SD card (not included) and offers 30 days of complimentary cloud storage.
- **2.4GHz Wi-Fi Connectivity:** Connects reliably to your home Wi-Fi network (5GHz not supported).



Image: 4K vs 1080P video quality comparison.



Image: Night vision clarity comparison.



Image: Battery capacity and environmental resilience.



Image: PIR motion detection in action.

4. Setup Guide

4.1 Initial Charging

Before first use, fully charge the camera using the provided USB charging cable. Connect the cable to the camera's charging port and a standard USB power adapter (not included). The charging indicator light will show the charging status.

4.2 App Download and Installation

Download the **Ubox** app from your smartphone's app store (iOS or Android). Search for "Ubox" and install the application.

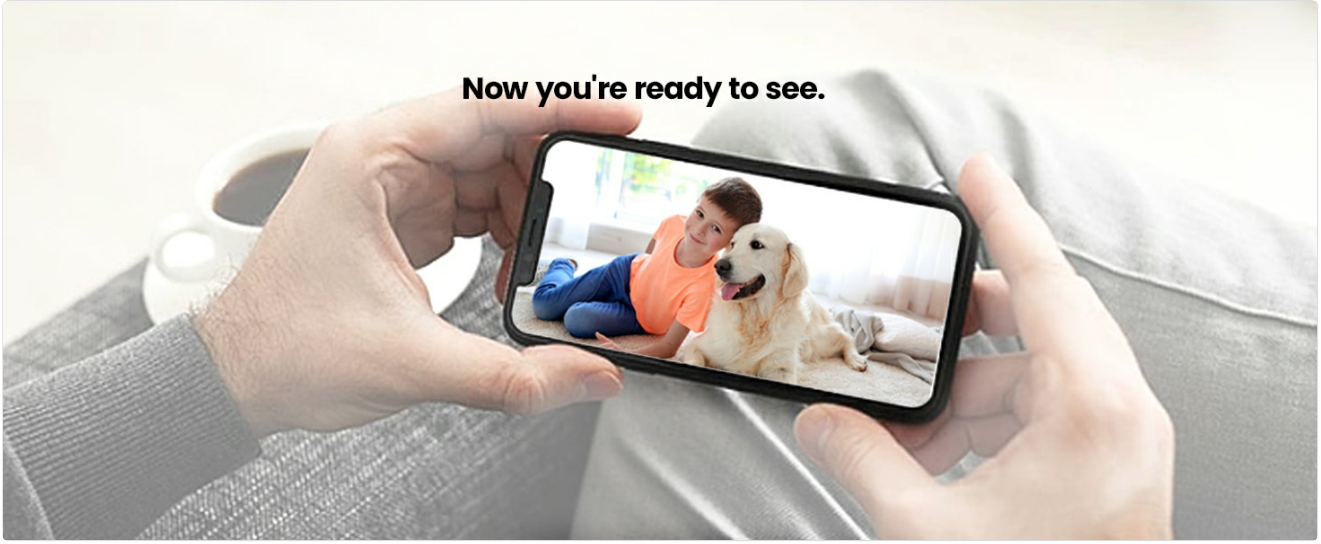


Image: Download the Ubox app to your smartphone.

4.3 Wi-Fi Connection (2.4GHz Only)

1. Ensure your camera is fully charged and powered on.
2. Open the Ubox app and follow the on-screen instructions to add a new device.
3. The camera supports **2.4GHz Wi-Fi networks only**. Ensure your smartphone is connected to a 2.4GHz Wi-Fi network during the setup process.
4. Scan the QR code on the camera or follow the app's prompts to connect the camera to your Wi-Fi network.
5. Once connected, the camera's indicator light will confirm successful pairing, and you will hear a voice prompt.



Image: Connecting the camera to a 2.4GHz Wi-Fi network via the app.

4.4 SD Card Installation

To enable local storage, insert a Micro SD card (up to 128GB, not included) into the designated slot on the camera. Ensure the card is inserted correctly. The camera will automatically begin recording to the SD card based on your settings.



Image: SD card and cloud storage options for the camera.

4.5 Mounting Options

Use the included stand, mounting screws, or 3M adhesive tape to position the camera. Its compact size allows for versatile placement on shelves, plants, or corners. Ensure the camera has a clear view of the area you wish to monitor.



Image: Compact design and flexible mounting options.

5. Operating Instructions

5.1 Live View

Once connected, open the Ubox app and select your camera from the device list to access the live video feed. You can view real-time footage from anywhere with an internet connection.

Your browser does not support the video tag.

Video: Demonstrates the live view functionality of the javiscam E6 camera via the mobile app.

5.2 Motion Detection and Alerts

The camera features AI motion detection. When motion is detected, the camera will automatically record and send instant notifications to your smartphone. You can adjust sensitivity settings within the Ubox app.

5.3 Night Vision

The camera automatically switches to infrared night vision in low-light conditions, providing clear black and white footage up to 10 meters.

5.4 Recording and Storage

The camera supports continuous recording or motion-activated recording. Footage can be stored on an inserted Micro SD card or uploaded to the cloud service (30-day free trial available). Access recorded files through the Ubox app.

5.5 Battery Management

The 2800mAh battery provides extended operation. The app will display the current battery level. Recharge the camera when the battery is low to ensure continuous surveillance.

Your browser does not support the video tag.

Video: Overview of the javiscam E6 mini camera's features and security applications.

6. Maintenance

6.1 Cleaning

Use a soft, dry cloth to clean the camera lens and body. Avoid using liquid cleaners or abrasive materials that could damage the device.

6.2 Battery Care

To prolong battery life, avoid exposing the camera to extreme temperatures. Recharge the battery regularly, even if the camera is not in active use for extended periods.

6.3 Firmware Updates

Periodically check the Ubox app for available firmware updates. Keeping your camera's firmware updated ensures optimal performance and access to new features.

7. Troubleshooting

Problem	Possible Cause	Solution
Camera won't connect to Wi-Fi	Incorrect Wi-Fi band (5GHz), weak signal, incorrect password.	Ensure you are connecting to a 2.4GHz Wi-Fi network. Check Wi-Fi signal strength and password. Restart router and camera.
Short battery life	Frequent motion detection, continuous recording, extreme temperatures.	Adjust motion detection sensitivity. Switch to motion-activated recording. Avoid extreme temperatures. Ensure full charge.
Poor image/video quality	Dirty lens, low light conditions, network bandwidth issues.	Clean the camera lens. Ensure adequate lighting or rely on night vision. Check your internet speed.

Problem	Possible Cause	Solution
No motion alerts	Motion detection disabled, app notifications off, low sensitivity.	Enable motion detection in the app. Check app notification settings on your phone. Increase motion sensitivity.

8. Specifications

Feature	Detail
Brand	javiscam
Model Name	E6
Connectivity Technology	Wireless (Wi-Fi 2.4GHz)
Video Capture Resolution	1440p (4K HD)
Night Vision	Yes
Night Vision Range	10 meters
Power Source	Battery Powered (2800mAh)
Indoor/Outdoor Usage	Indoor, Outdoor (sheltered)
Compatible Devices	Smartphone
Control Method	App (Ubox)
Storage	Micro SD (up to 128GB), Cloud Storage
Item Dimensions	0.8 x 1.5 x 1 inches

9. Warranty and Support

Your javiscam E6 camera comes with a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact javiscam customer support. If you encounter any issues not covered in this manual, please reach out to our support team for assistance.
For further support, visit the javiscam Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0G527HG42

More documents and user manuals: **https://manuals.plus/**