Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MUTGOF B0G58CHJBX

MUTGOF Cordless Vacuum Cleaner (Model B0G58CHJBX) User Manual

Model: B0G58CHJBX | Brand: MUTGOF

Introduction

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your MUTGOF Cordless Vacuum Cleaner, Model B0G58CHJBX. Designed for versatile cleaning across various surfaces, this vacuum features a powerful 55KPa suction, 650W motor, and an upgraded anti-tangle brush for effective pet hair and debris removal. It includes a self-standing design, a wall-mount charging dock, and an intuitive LED display.

Important Safety Instructions

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store the appliance indoors. Put it away after use to prevent accidents.

- Use only the charger specified by the manufacturer.

Product Components

Familiarize yourself with the main parts of your MUTGOF Cordless Vacuum Cleaner.

- Main Motor Unit with Dustbin
- Extension Wand
- Motorized Brush Head with LED Lights
- Battery Pack (Removable)
- Wall-Mount Charging Dock
- Crevice Tool
- 2-in-1 Brush Tool (for upholstery/delicate surfaces)
- Replacement HEPA Filters (2 included)
- Filter Cleaning Tool
- Power Adapter

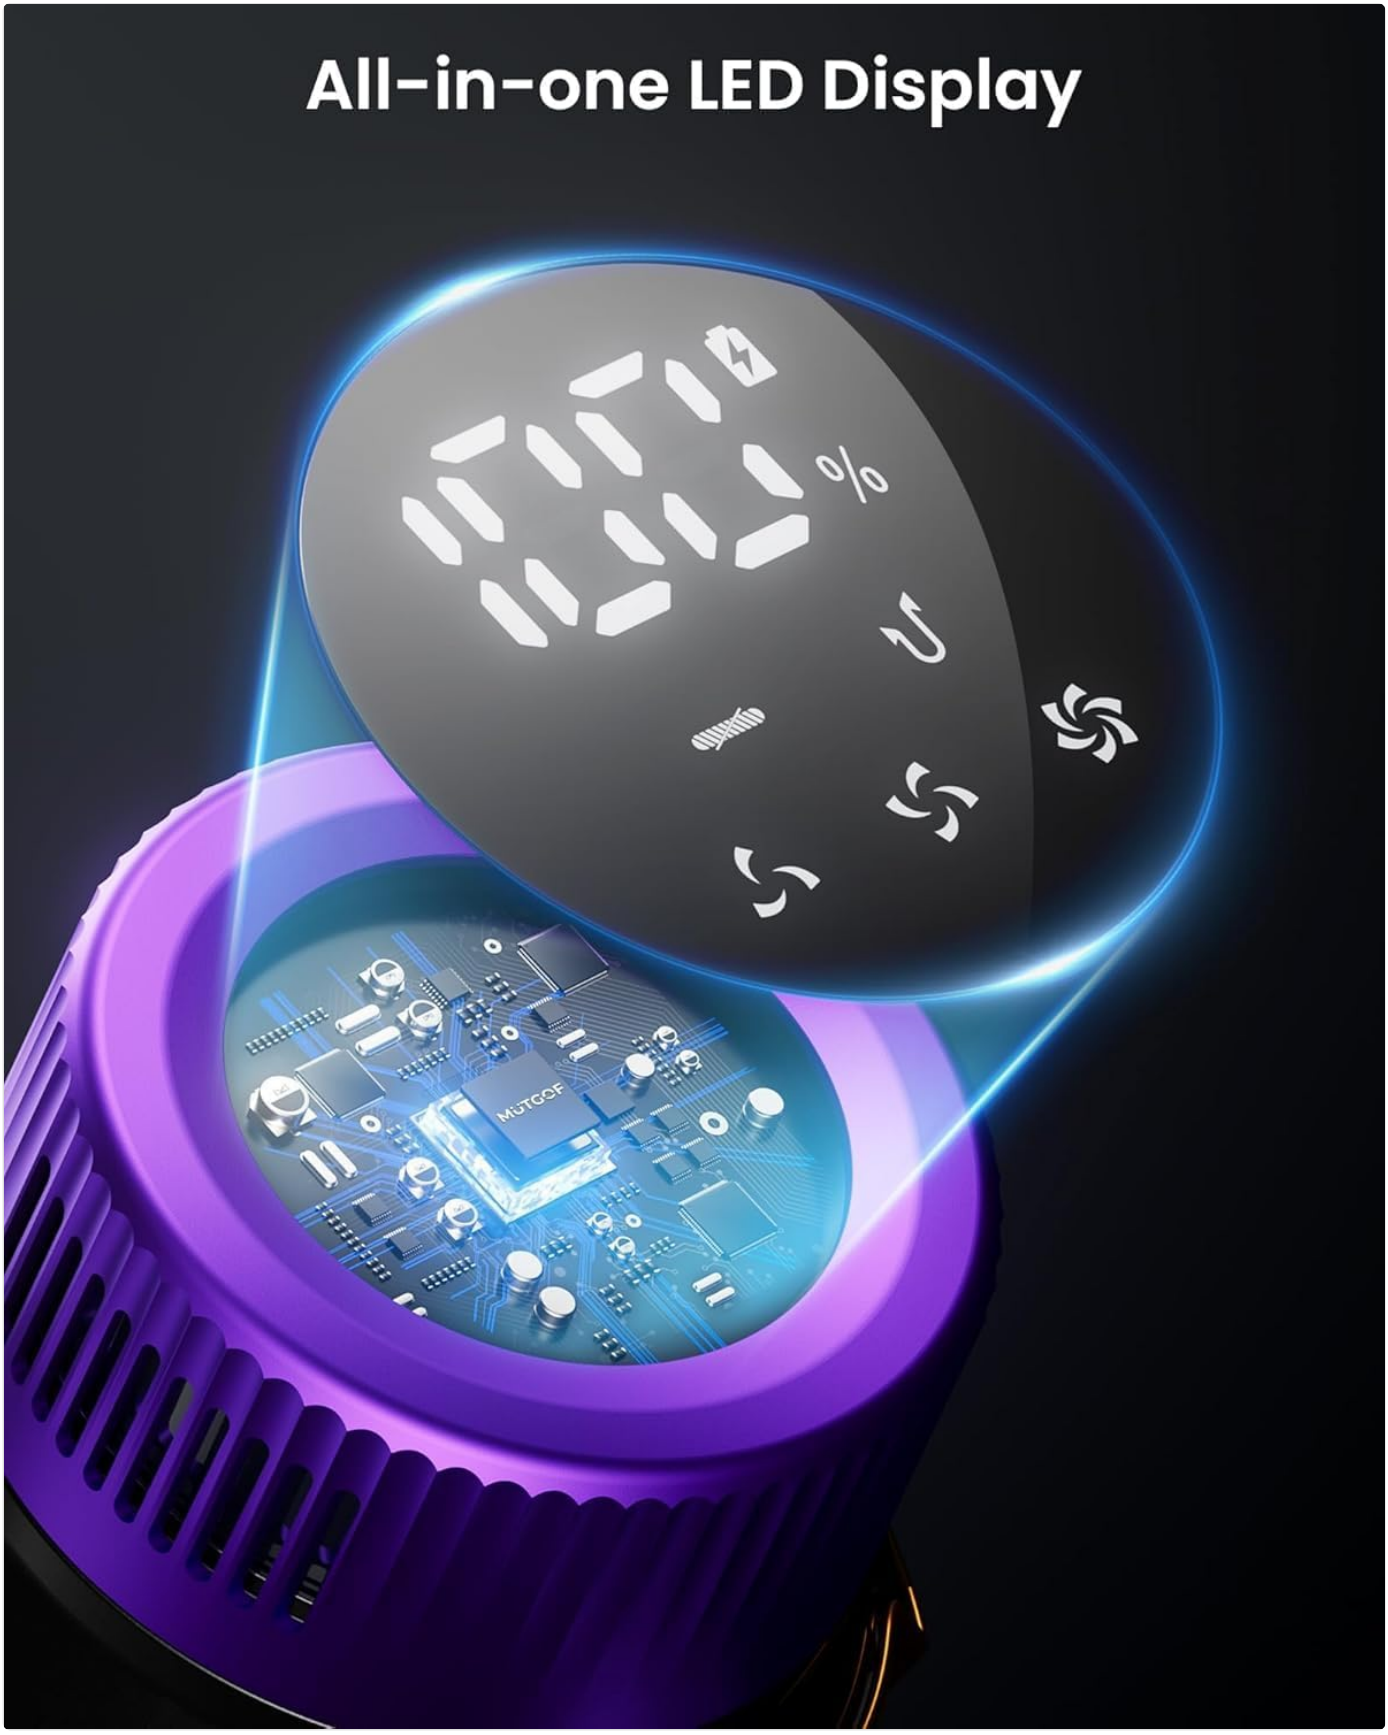


Figure 1: Overview of the MUTGOF Cordless Vacuum Cleaner components.

Setup

1. Assembly

1. Insert the extension wand into the main motor unit until it clicks securely into place.
2. Attach the motorized brush head to the other end of the extension wand, ensuring it clicks firmly.

3. Slide the battery pack into the designated slot on the main motor unit until it locks.

2. Initial Charging

Before first use, fully charge the vacuum cleaner. The battery can be charged while attached to the main unit or separately.

- Connect the power adapter to the charging port on the battery or the wall-mount dock.
- Plug the adapter into a power outlet.
- The LED display will show the charging status. A full charge typically takes approximately 4-5 hours.



Figure 2: The vacuum can be stored and charged on the wall-mount dock. The dock also provides storage for accessories.

Operating Instructions

1. Powering On/Off and Mode Selection

The vacuum features an intuitive LED display for easy control.

- To power on, press the red power button located on the LED display.

- The LED display will show the current battery percentage and power mode.
- Use the '+' and '-' buttons on the display to cycle through the three available power modes: Low, Medium, and High.
- To power off, press the red power button again.



Figure 3: The all-in-one LED display provides real-time information on battery level and selected power mode.

2. Cleaning Surfaces

- **Hard Floors:** Use Low or Medium power mode. The motorized brush head is designed to effectively pick up debris without scratching.
- **Carpets/Rugs:** Use Medium or High power mode for deeper cleaning. The anti-tangle brush roll helps prevent hair from wrapping around.
- **Pet Hair:** High power mode is recommended for optimal pet hair removal on all surfaces.
- **LED Headlights:** The motorized brush head features LED lights that illuminate dust and debris, making it easier to spot dirt in dimly lit areas or under furniture.

3. Using Attachments

The vacuum can be converted into a handheld unit by detaching the extension wand. Attach the desired tool directly to the main motor unit or the extension wand.

- **Crevice Tool:** Ideal for narrow gaps, corners, and edges.
- **2-in-1 Brush Tool:** Use the brush for delicate surfaces like curtains or keyboards, and the wider nozzle for upholstery or car interiors.

4. Self-Standing Feature

The MUTGOF Cordless Vacuum Cleaner is designed to stand upright on its own when the main unit is clicked into a vertical position. This allows for convenient pauses during cleaning without needing to lean the vacuum against a wall or lay it down.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying the Dustbin

Empty the dustbin after each use or when the MAX line is reached.

1. Hold the main motor unit over a trash bin.
2. Press the dustbin release button (usually located near the bottom of the dustbin) to open the flap and release contents.

3. Close the flap securely after emptying.



Figure 4: The dustbin can be emptied quickly with a single press of the release button.

2. Cleaning/Replacing Filters

The vacuum uses a HEPA filter system. Clean filters regularly and replace as needed.

- Twist and pull to remove the filter assembly from the dustbin.
- Separate the HEPA filter from the mesh filter.

- Tap the HEPA filter gently to remove loose dust. Do not wash the HEPA filter.
- The mesh filter can be rinsed under running water. Ensure it is completely dry before reassembling.
- Replace HEPA filters every 2-3 months, or more frequently with heavy use. Two replacement HEPA filters are included.
- Use the provided filter cleaning tool to brush out debris from the pleated sections of the filter.

3. Cleaning the Brush Roll

The anti-tangle brush roll minimizes hair wrap, but occasional cleaning may be necessary.

1. Turn off the vacuum and disconnect it from any power source.
2. Locate the release tab on the side of the motorized brush head and open it to remove the brush roll.
3. Use scissors or the provided cleaning tool to cut and remove any tangled hair or fibers.
4. Reinsert the brush roll and close the release tab securely.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum not turning on	Battery is depleted or not properly installed.	Charge the battery. Ensure the battery pack is securely clicked into place.
Low suction power	Dustbin is full, filters are clogged, or brush roll is tangled.	Empty dustbin. Clean or replace filters. Remove tangled hair from brush roll. Check for blockages in the wand or brush head.
Brush roll not spinning	Brush roll is tangled or blocked.	Clean the brush roll, removing any obstructions. Ensure the brush head is correctly attached.
Battery not charging	Charger not properly connected or faulty.	Ensure the power adapter is securely plugged into both the vacuum/dock and the wall outlet. Verify the outlet is functional. Contact customer support if the charger is suspected to be faulty.

Specifications

Feature	Detail
Brand	MUTGOF
Model	B0G58CHJBX
Special Feature	Lightweight
Filter Type	HEPA Filter
Included Components	Adapter, 2 Replacement HEPA Filters, Filter Cleaning Tool, Crevice Tool, 2-in-1 Brush Tool, Wall-Mount Dock
Cordless	Yes
Capacity	1.6 Liters (Dustbin)
Recommended Uses	Carpet, Hard Floor, Pet Hair

Feature	Detail
Form Factor	Stick
Color	Yellow
Product Dimensions	40"L x 8"W x 5"H
Item Weight	8 pounds
Power Levels	3
Indoor/Outdoor Usage	Indoor
Vacuum Collection Technology	Rotating brush roll
Battery	1 C battery required (included)
Power Source	Battery Powered

Warranty and Support

For warranty information, technical support, or service inquiries, please refer to the contact information provided with your product packaging or visit the official MUTGOF website. Keep your purchase receipt as proof of purchase for warranty claims.
For additional assistance, you may contact MUTGOF customer service via their official website or the contact details listed in your product documentation.

© 2026 MUTGOF. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0G58CHJBX

More documents and user manuals: **https://manuals.plus/**