Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GALAXHERO 9 Drawer with Electric

GALAXHERO Black TV Stand with LED Lights & Charging Station

Model: 9 Drawer with Electric

Brand: GALAXHERO

Introduction

Thank you for purchasing the GALAXHERO Black TV Stand. This manual provides essential information for the safe assembly, operation, and maintenance of your new TV stand. Please read these instructions carefully before assembly and retain them for future reference.



Image: The GALAXHERO Black TV Stand, showcasing its 9 fabric drawers, top surface, and integrated LED lighting. Designed to accommodate televisions up to 55 inches.

Safety Information

WARNING: To prevent serious injury or death from tip-over, this product must be permanently attached to the wall with the anti-tipping device provided. Always ensure the TV stand is securely anchored.

- Keep small parts and assembly hardware away from children and pets.
- Be cautious of sharp edges during assembly and handling.
- Do not overload drawers or the top surface. Refer to specifications for weight limits.
- Ensure all connections for the charging station and LED lights are properly secured before use.



Image: Illustration of the anti-tilt device being installed, securing the TV stand to the wall for safety. Also shows waterproof surface and adjustable feet.

Package Contents

Before beginning assembly, verify that all parts and hardware are present and undamaged. Refer to the included assembly instructions for a detailed list of components.

- Metal Frame Components
- Wood Top Panel
- 9 Fabric Drawers
- Built-in Charging Station (with 2 AC outlets, 2 USB ports, and 1.5M power cord)
- LED Light Strip
- Adjustable Feet (10 units)
- Anti-Tipping Device
- Assembly Hardware (screws, bolts, etc.)
- Assembly Instructions Manual

Setup Instructions

Assembly is required for this TV stand. Follow the detailed, coded instructions provided in the separate assembly manual for accurate and faster installation.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Frame:** Follow the step-by-step diagrams in the assembly manual to construct the metal frame using the provided hardware. Ensure all connections are tightened securely.
3. **Install Wood Top:** Attach the wood top panel to the assembled frame.
4. **Integrate Charging Station & LED Lights:** Install the built-in charging station and LED light strip according to the instructions. Connect the power cord.
5. **Insert Drawers:** Assemble the fabric drawers and slide them into their designated compartments.
6. **Attach Adjustable Feet:** Screw the 10 adjustable feet into the bottom of the frame. Adjust them to ensure the stand is level on uneven surfaces.
7. **Secure Anti-Tipping Device:** This is a critical safety step. Attach the anti-tipping device to the back of the TV stand and then securely fasten it to a wall stud using appropriate hardware.

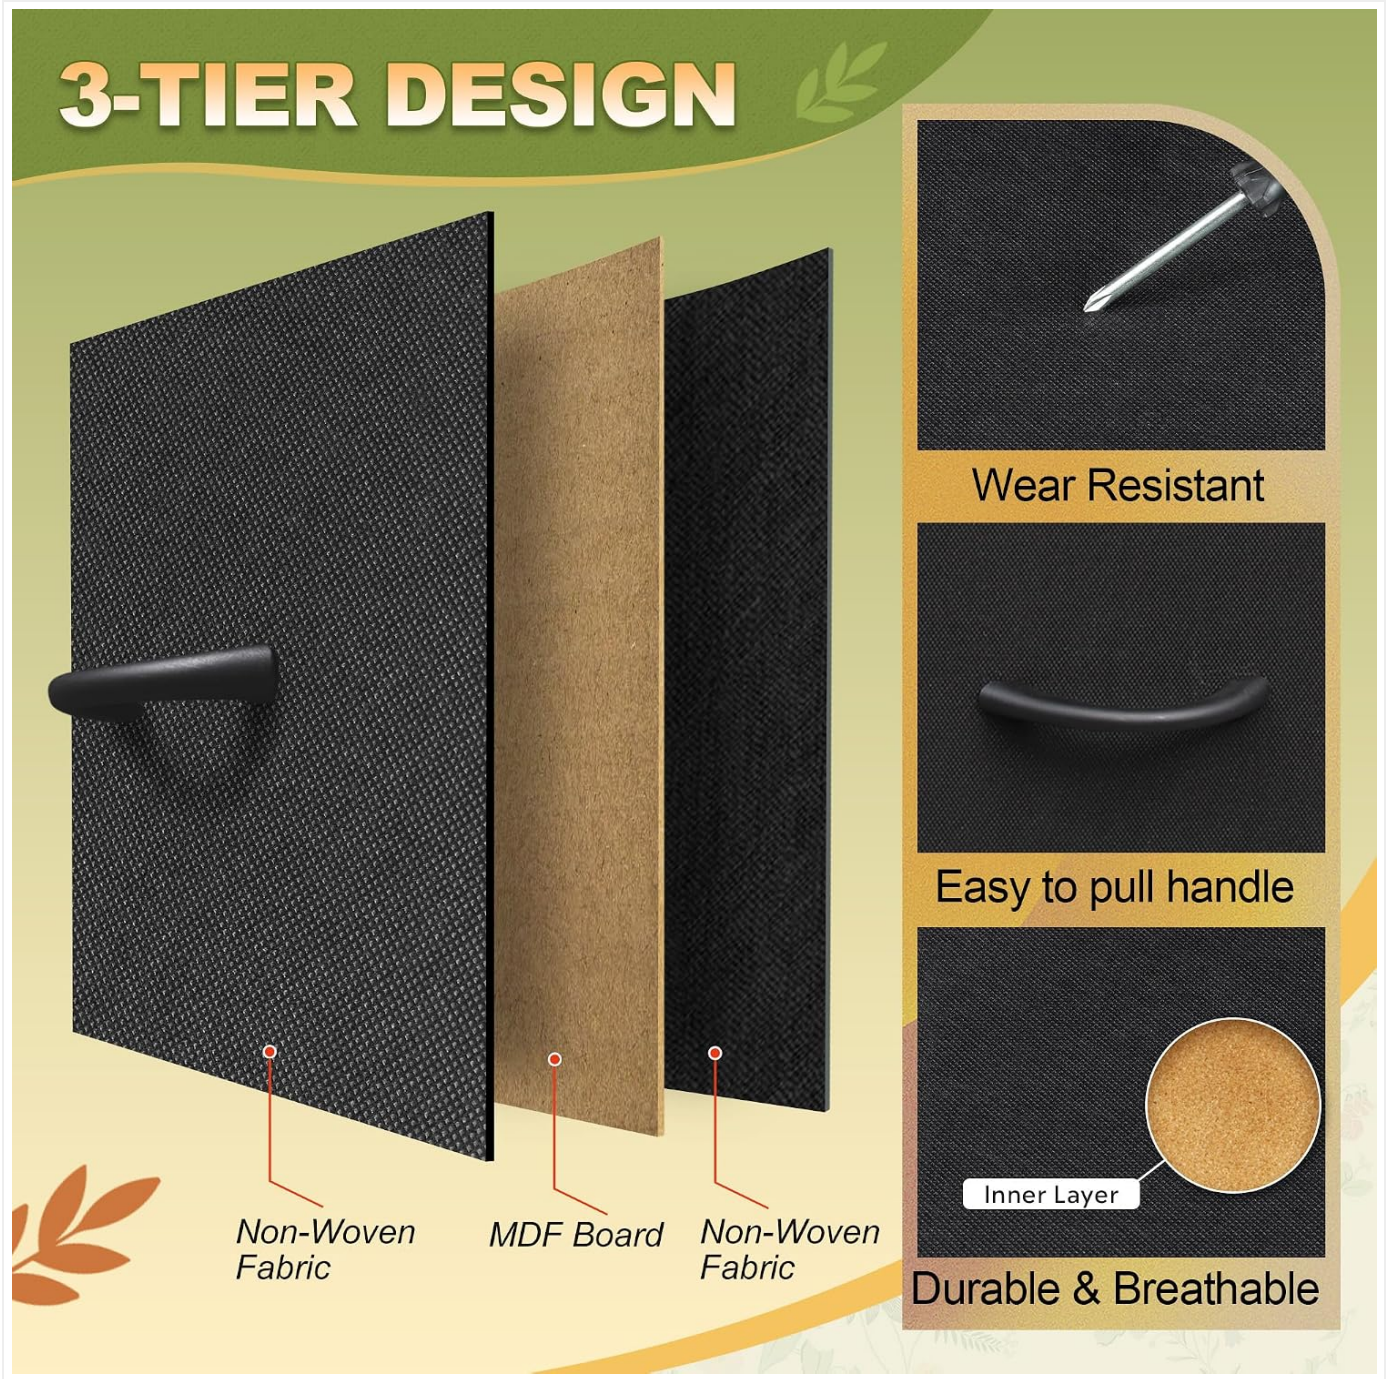


Image: Detailed view of the drawer construction, illustrating the non-woven fabric, MDF board, and inner layer for durability and breathability.

Operating Instructions

Using the Built-in Charging Station

The TV stand is equipped with a recessed power strip for convenient device charging and powering media equipment.

- **AC Outlets:** Plug your TV, sound system, or other AC-powered devices into the two 125V/12A AC outlets.
- **USB Ports:** Connect your smartphones, tablets, or other USB-powered devices to the two 5V/2A USB ports for charging.
- Ensure the TV stand's main power cord is plugged into a functional wall outlet.



Image: A detailed view of the recessed charging station, featuring two AC outlets and two USB ports, with a phone and speaker connected.

Controlling the Smart RGB LED Lights

The integrated LED lights offer customizable ambiance for your living space.

- **Power On/Off:** Use the included remote control or a compatible smartphone application (if applicable) to turn the LED lights on or off.
- **Color Selection:** Choose from multiple colors to match your mood or room decor.
- **Modes:** Explore various lighting modes, such as static color, fading, or dynamic effects. Some models may include a timer function or music synchronization.



Image: The TV stand with its LED lights glowing blue, demonstrating control via a smartphone app with options for timer, microphone rhythm, and over 6000 colors.

Maintenance

- **Cleaning the Wood Top:** Wipe the eco-friendly wood panel with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish. The surface is scratch-resistant and easy to clean.
- **Cleaning Fabric Drawers:** For light cleaning, use a lint roller or a soft brush to remove dust. For stains, spot clean with a mild detergent and a damp cloth, then air dry. Do not machine wash.
- **Frame Maintenance:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Electrical Components:** Ensure the charging station and LED light connections are free from dust and debris. Do not attempt to repair electrical components yourself.

Troubleshooting

Problem	Possible Cause	Solution
LED lights not turning on.	Power cord not plugged in; loose connection; remote battery dead.	Ensure the main power cord is securely plugged into a wall outlet. Check LED strip connections. Replace remote control batteries.
Charging station not working.	Main power cord unplugged; device not properly connected; faulty device cable.	Verify the TV stand's main power cord is plugged in. Ensure devices are fully inserted into AC outlets/USB ports. Try a different device cable.
Drawers are stiff or not sliding smoothly.	Drawer overloaded; fabric caught; frame not level.	Reduce drawer contents. Check for any fabric obstruction. Adjust the feet to ensure the stand is level.
Stand feels wobbly.	Loose assembly screws; uneven floor; anti-tipping device not secured.	Retighten all assembly screws. Adjust the 10 adjustable feet to stabilize the stand. Ensure the anti-tipping device is properly installed and secured to the wall.

Specifications

Model	9 Drawer with Electric
Brand	GALAXHERO
Color	Black
Material Type	Wood, Fabric, & Metal
Number of Drawers	9
Item Weight	32.8 Pounds
Dimensions (Approx.)	47.0" (Width) x 13.46" (Depth) x 31.3" (Height)
TV Size Compatibility	Up to 55 inches
Charging Station	2 AC Outlets (125V/12A), 2 USB Ports (5V/2A), 1.5M Power Cord
LED Lights	RGB, Multiple Colors, Various Modes
Additional Features	Adjustable Feet, Anti-Tipping Device, Space Saving Design
Assembly Required	Yes



Image: Product dimensions diagram, indicating overall stand measurements and individual drawer capacity.

Warranty and Support

For any questions regarding assembly, missing parts, or product functionality, please contact GALAXHERO customer support. Refer to your purchase documentation or the GALAXHERO website for specific warranty details and contact information.

Online Support: Visit the GALAXHERO Store on Amazon

© 2023 GALAXHERO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0G6BSY5GX

More documents and user manuals: **https://manuals.plus/**