MINISO 6931604328310

MINISO Disney Stitch 16oz Reusable Plastic Tumblers Instruction Manual

Model: 6931604328310

1. Product Overview

Thank you for choosing the MINISO Disney Stitch 16oz Reusable Plastic Tumblers. This 4-pack set features a charming Stitch character design, perfect for daily hydration. Each tumbler is designed for convenience and durability, suitable for a variety of cold beverages.



Image: A complete set of four MINISO Disney Stitch 16oz Reusable Plastic Tumblers with lids and straws.

Key Features:

- **Authentic Disney Design:** Features the popular Stitch character with a consistent surfboard and sunglasses motif.
- **Optimal Capacity:** Each cup holds 16 fluid ounces (473 mL), suitable for various cold drinks.
- **Convenient 4-Pack:** Ideal for households, sharing, or having multiple tumblers for different uses.
- **Integrated Lid & Straw:** Designed for easy, mess-free sipping and spill prevention.

- **Durable & BPA-Free:** Constructed from sturdy, lightweight, BPA-free plastic for everyday use.

2. Setup and Initial Use

Unpacking:

- Carefully remove all tumblers, lids, and straws from the packaging.
- Inspect each component for any signs of damage. If any parts are damaged, do not use and contact customer support.

Initial Cleaning:

- Before first use, wash all tumblers, lids, and straws thoroughly with warm, soapy water.
- Rinse all components completely and allow them to air dry.

Assembly:

- Place the lid securely onto the top of the tumbler, ensuring it is properly aligned and sealed.
- Insert the reusable straw through the designated opening in the lid.



Image: MINISO Disney Stitch 16oz Tumblers shown with their detachable lids and straws, illustrating the components.

3. Operating Instructions

Filling the Tumbler:

- Remove the lid and fill the tumbler with your desired beverage.
- Do not overfill; leave a small space at the top to prevent spills when the lid is applied.
- These tumblers are suitable for cold beverages such as iced coffee, smoothies, juice, and water. While listed for 'hot drinks' in some specifications, due to the plastic material, it is recommended to avoid extremely hot liquids to prevent potential deformation or discomfort.

Using the Lid and Straw:

- Once filled, securely place the lid back onto the tumbler. Ensure it clicks into place to create a tight seal.
- Use the reusable straw for convenient sipping.



Image: A single MINISO Disney Stitch 16oz Tumbler displayed next to a smartphone, illustrating its approximate size.

4. Maintenance and Care

Cleaning:

- **Hand Wash Recommended:** For best results and to preserve the tumbler's design and integrity, hand wash all components with warm, soapy water.
- Use a soft brush for the straw to ensure thorough cleaning.
- Rinse thoroughly and allow to air dry completely before storing.
- *Note: While some product information may indicate dishwasher safety, hand washing is generally recommended for plastic items with printed designs to extend their lifespan.*

Storage:

- Store tumblers, lids, and straws in a clean, dry place when not in use.

- Ensure all components are completely dry before storing to prevent mold or odors.

Important Warnings:

- **DO NOT** use in a microwave.
- Avoid using abrasive cleaners or scrubbers that could scratch the surface or damage the design.
- Keep away from direct heat sources.



Image: Detailed view of the tumbler's lid, straw, Stitch graphic, and base, highlighting the quality of components.

5. Troubleshooting

Leakage:

- Ensure the lid is securely fastened and properly aligned with the tumbler's rim.
- Check the straw opening for any obstructions or damage to the lid's seal.

Stains or Odors:

- For stubborn stains, try a mixture of baking soda and water to gently scrub the affected area.

- For odors, soak the tumbler and lid in a solution of warm water and white vinegar for a few hours, then wash thoroughly.

Damaged Components:

- If any part of the tumbler, lid, or straw becomes cracked or damaged, discontinue use.
- Contact customer support for assistance.

6. Specifications

Feature	Detail
Brand	MINISO
Model Number	6931604328310
Material	BPA-Free Plastic
Color	Blue (Stitch design)
Capacity	16 fluid ounces (473 mL)
Included Components	4 Tumblers, 4 Lids, 4 Straws
Special Features	Freezer Safe, Reusable
Microwave Safe	No
Dishwasher Safe	Hand Wash Recommended
Approximate Dimensions (per tumbler)	Diameter: 9 cm (3.54 inches), Height: 22.5 cm (8.86 inches)

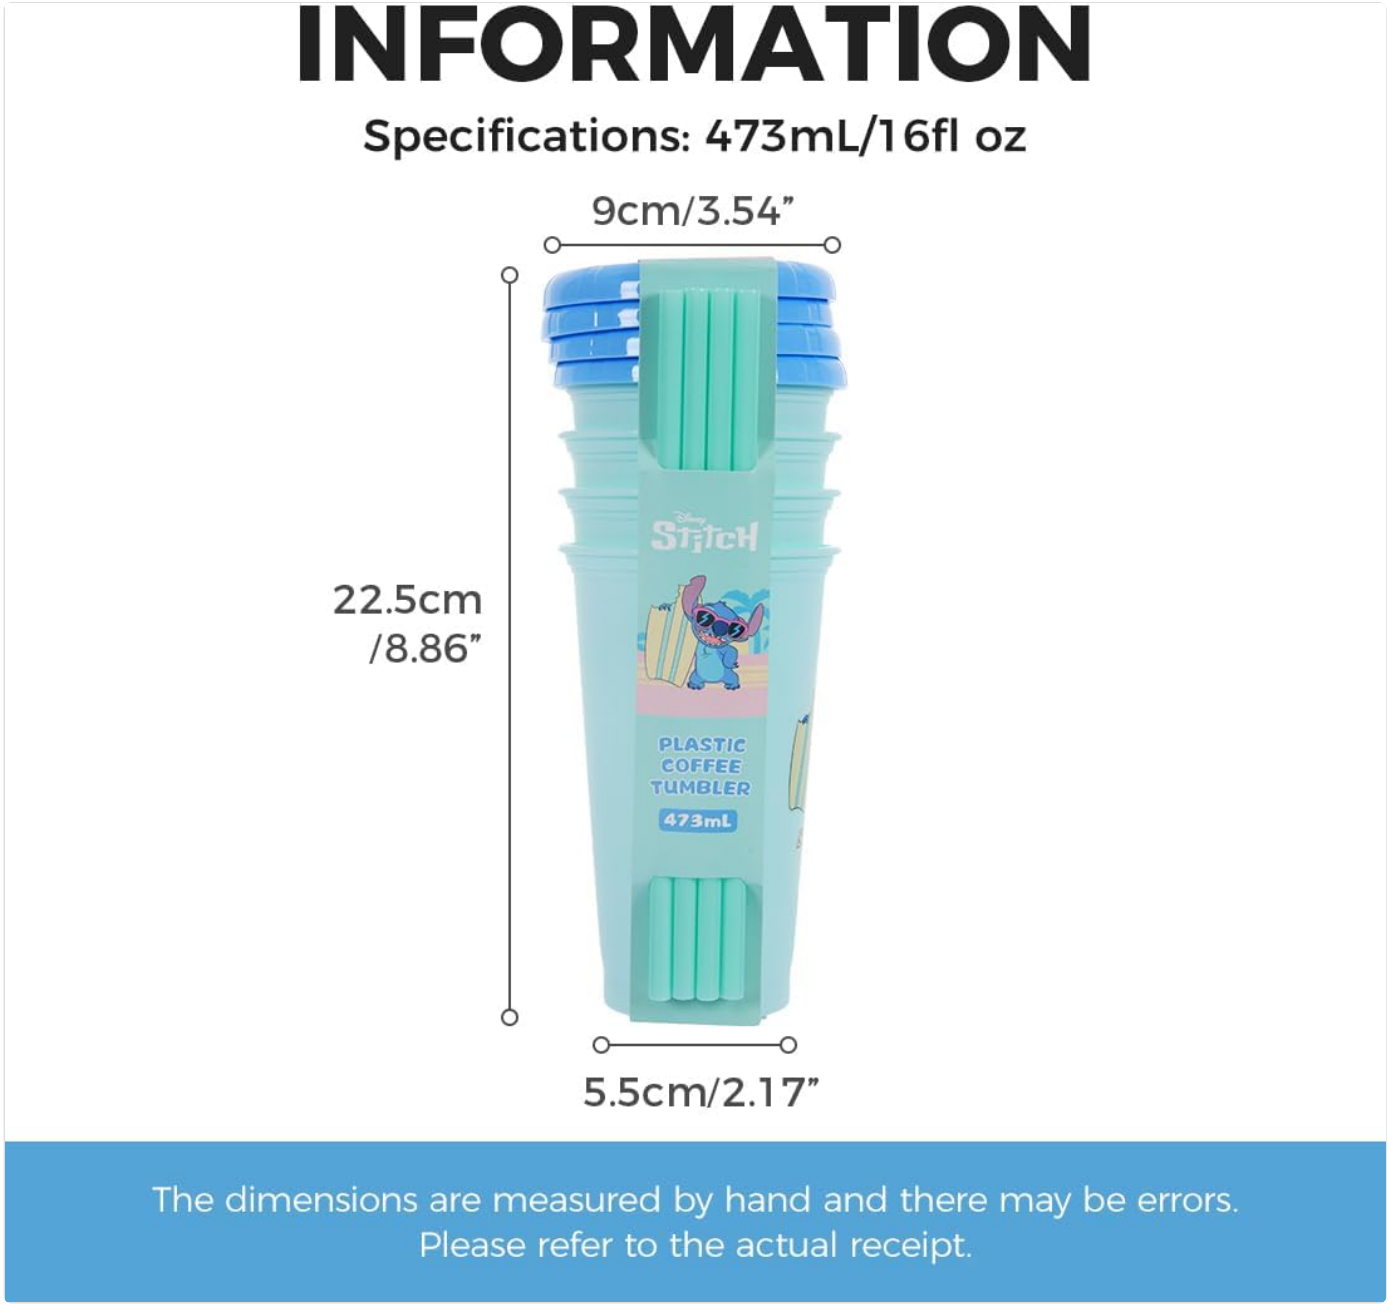


Image: Diagram showing the dimensions of a single MINISO Disney Stitch 16oz Tumbler, including height and diameter.

7. Customer Support

For any questions, concerns, or assistance with your MINISO Disney Stitch Tumblers, please contact MINISO customer service through the retailer where the product was purchased or visit the official MINISO website for support information.

Please retain your proof of purchase for any warranty or support inquiries.

© 2026 MINISO. All rights reserved. Disney elements © Disney.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question