aowoka S15-1-YTUS-PE

aowoka S15-1 Portable Bluetooth Speaker User Manual

Model: S15-1-YTUS-PE

Introduction

Thank you for choosing the aowoka S15-1 Portable Bluetooth Speaker. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity of your speaker.

Package Contents

Before you begin, please check the package for the following items:

- aowoka S15-1 Portable Bluetooth Speaker
- Power Cable
- User Manual (this document)

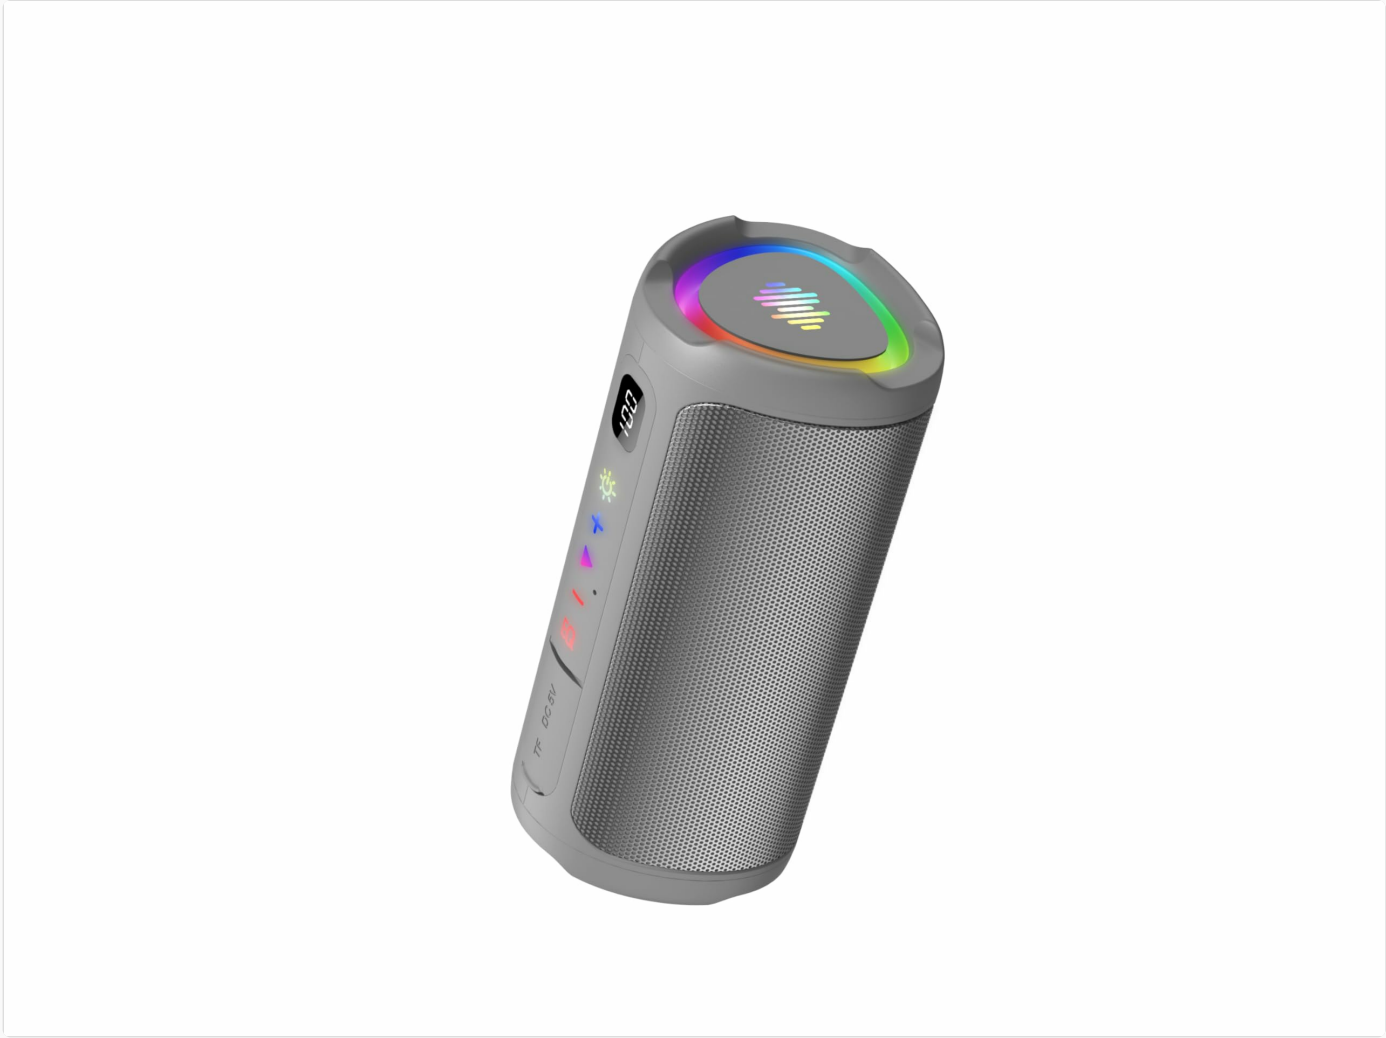


Image: The aowoka S15-1 Portable Bluetooth Speaker shown with its power cable, illustrating the typical contents of the product package.

Setup

1. Charging the Speaker

Before first use, fully charge the speaker. Use the provided power cable to connect the speaker to a compatible USB power source (e.g., wall adapter, computer USB port).

- Insert the small end of the power cable into the charging port on the speaker.
- Connect the other end of the power cable to a USB power adapter (not included) or a powered USB port.
- The charging indicator light will illuminate, typically red, during charging. It will turn off or change color (e.g., blue or green) when fully charged.

2. Powering On/Off

- **To Power On:** Press and hold the power button (usually marked with a power symbol) for approximately 2-3 seconds until you hear an audible prompt or see an indicator light.
- **To Power Off:** Press and hold the power button again for approximately 2-3 seconds until you hear an audible prompt or the indicator light turns off.

3. Bluetooth Pairing

To connect your speaker to a Bluetooth-enabled device:

1. Ensure the speaker is powered on and in pairing mode. The Bluetooth indicator light will typically flash rapidly (e.g.,

blue).

2. On your audio device (smartphone, tablet, computer), go to the Bluetooth settings.
3. Search for available devices. The speaker should appear as "aowoka S15-1" or a similar name.
4. Select "aowoka S15-1" from the list to initiate pairing.
5. Once successfully paired, the speaker will usually emit an audible confirmation, and the Bluetooth indicator light will stop flashing and remain solid.
6. The speaker will automatically attempt to reconnect to the last paired device when powered on, if that device is within range and has Bluetooth enabled.

Operating

1. Playing Audio

Once paired, audio played on your connected device will automatically stream through the aowoka S15-1 speaker. Use your device's media player controls to play, pause, skip tracks, or adjust volume.

2. Volume Control

Volume can be adjusted directly on your connected Bluetooth device. Some speakers may also feature physical volume buttons (+/-) on the unit itself for direct control.

3. Bluetooth Range

The effective operating range for Bluetooth connectivity is approximately 10 meters (33 feet) in an open environment. Obstacles such as walls or other electronic devices may reduce this range.

Maintenance

1. Cleaning

To clean your speaker, use a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, benzene, or other chemical solvents, as these may damage the surface or internal components. Avoid getting moisture into any openings.

2. Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to charge the speaker periodically (e.g., every 3 months) to maintain battery health.

Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker using the provided power cable.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far apart.	Ensure speaker is in pairing mode (flashing light). Turn Bluetooth on your device. Move devices closer. Forget previous pairings on your device and try again.

Problem	Possible Cause	Solution
No sound after pairing.	Volume too low; incorrect audio output selected on device.	Increase volume on both the speaker and your connected device. Check your device's audio settings to ensure the speaker is selected as the output.
Sound is distorted or cuts out.	Too far from device; interference; low battery.	Move the speaker closer to the connected device. Avoid obstacles. Charge the speaker.

Specifications

Brand: aowoka
Model Name: S15-1-YTUS-PE
Speaker Type: Portable Speaker
Connectivity Technology: Bluetooth
Wireless Technology: Bluetooth
Connectivity Protocol: Bluetooth
Speaker Maximum Output Power: 24 Watts
Mounting Type: Tabletop Mount
Item Dimensions (D x W x H): 1.5"D x 2.7"W x 3"H
Unit Count: 1.0 Count
Built-In Media: Power Cable

Warranty Information

The aowoka S15-1 Portable Bluetooth Speaker comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

If you encounter any issues not covered in this manual or require further assistance, please contact aowoka customer support. Refer to the product packaging or the official aowoka website for the most current contact information.
When contacting support, please have your product model (S15-1-YTUS-PE) and proof of purchase ready.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question